 


Buckle DVR

(Hidden Camera)

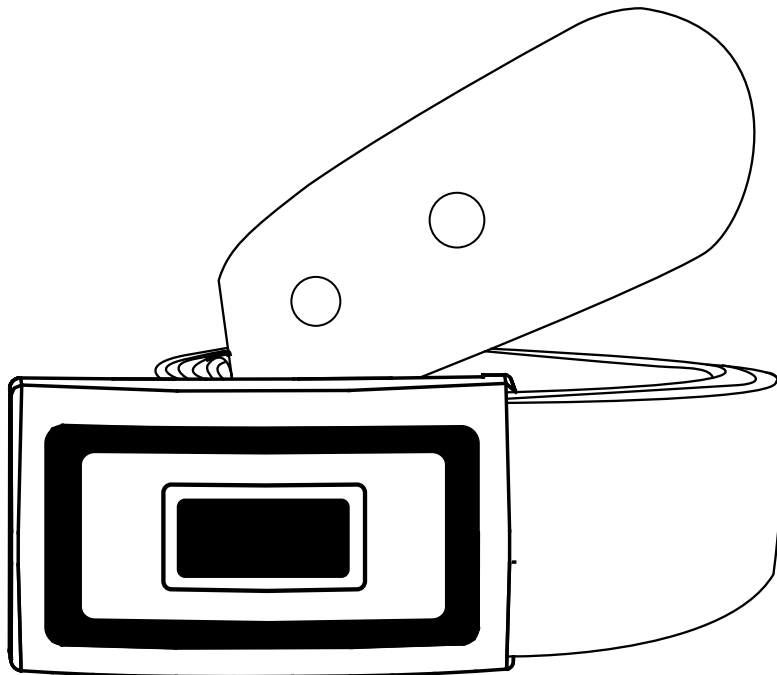


Micro Surveillance Solutions

AJ-DVB01

CONTENTS

<i>1. Introduction</i>	<i>page1</i>
<i>2. Illustration of Camera Function</i>	<i>page2</i>
<i>3. Installing a Memory Card</i>	<i>page3</i>
<i>4. Starting your Buckle DVR</i>	<i>page4</i>
<i>5. Camera Charging Procedure</i>	<i>page5</i>
<i>6. Camera Specification</i>	<i>page6</i>
<i>7. Frequently Ask Questions</i>	<i>page7</i>
<i>8. Frequently Ask Questions-part 2</i>	<i>page8</i>

 Buckle DVR


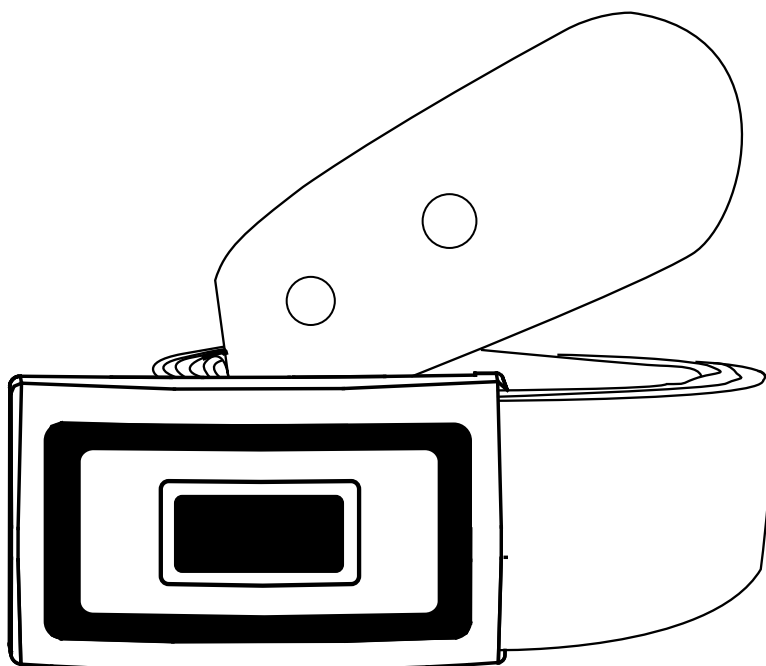


- Record 3GP video format
- Built-in Microphone
- Supports Micro SD card up to 2GB
- Lithium-Ion Rechargeable Battery
- Record up to 33 Hours
on 1GB Micro SD card

- Do personal Investigations
- Gather Evidence
- Do secret Surveillance

Introduction

  
Our Buckle DVR gives you the ability to perform personal investigations, conduct secret video surveillance, or for any ideal covert operation where gathering evidence is important.

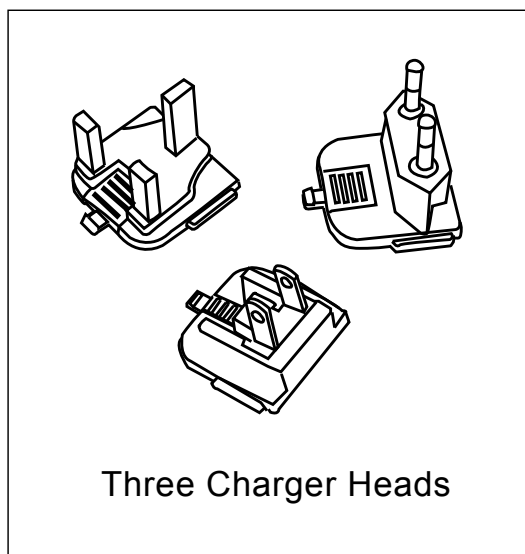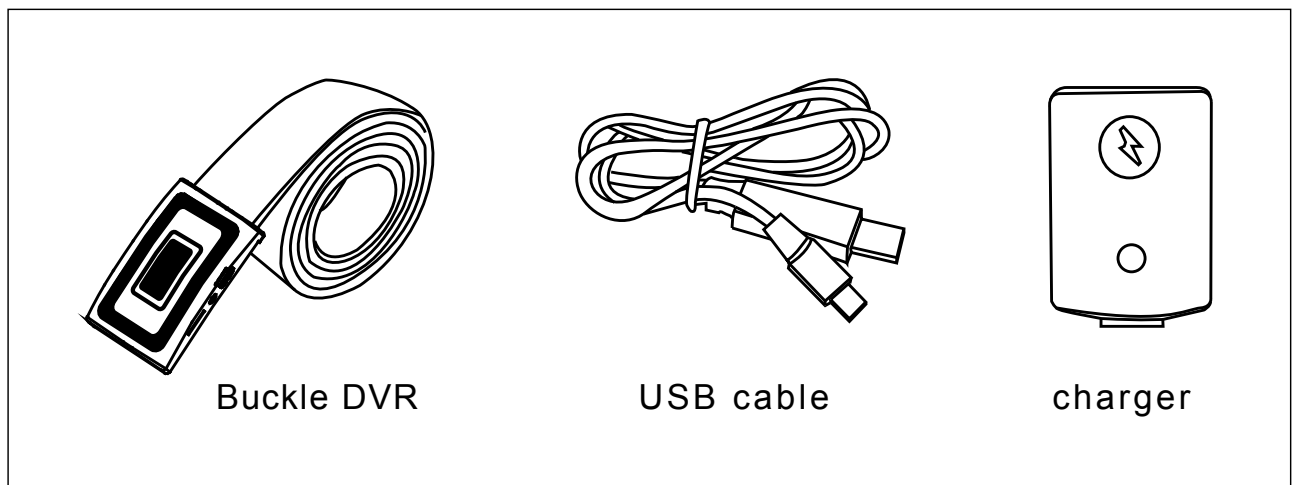

What your Buckle DVR includes:

1. Buckle DVR
2. USB cable
3. Instruction Manual
4. charger(Include three charger Heads)
5. charger head 3pcs for different country

 Illustration of DVR Function

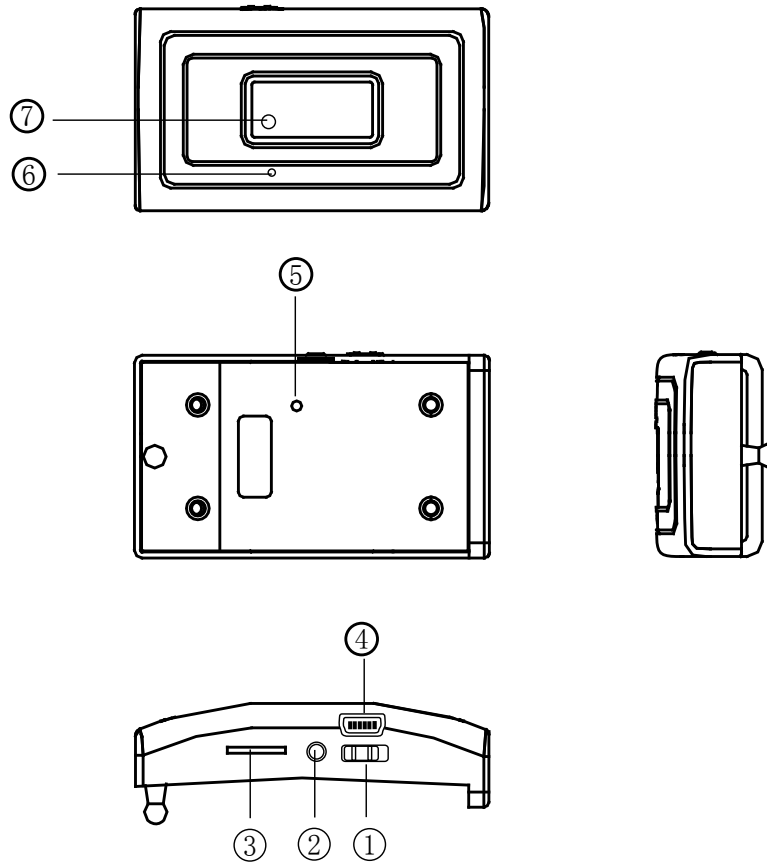

- 1. Power on/off
- 2. Record/stop Button
- 3. Micro SD card slot
- 4. USB Port


- 5. Light
- 6. MIC
- 7. Camera

Installing a Memory card

This camera has no internal memory. Please insert a Micro SD memory card before recording(maximum 2GB).

Note:

The Micro SD card is a tiny portable flash memory card based on the TransFlash card format manufactured by SD SanDisk. Micro SD and TransFlash cards are the same device, and each can be used in devices made for each other type. Allowing cross compatibility with one exception, that unlike TransFlash, Micro SD devices have the capability to support Near Field Communication.

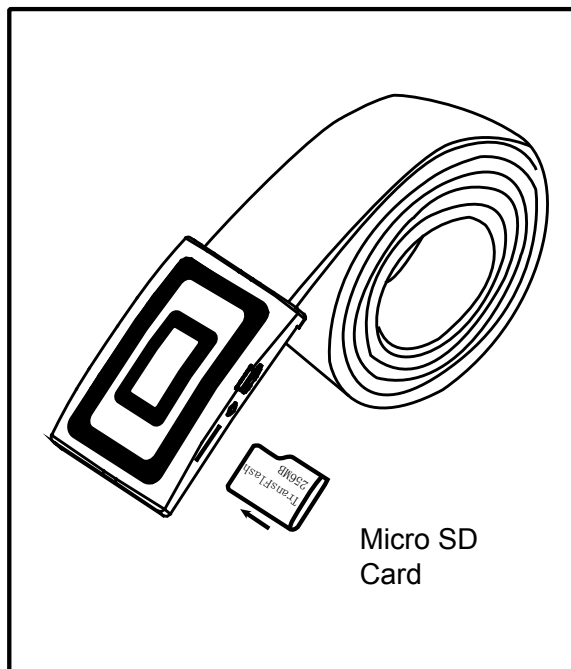

1. This camera supports Micro SD card up to 2GB.
2. Insert the Micro SD card on the side slot carefully until you heard it click in.
3. To remove the Micro SD card, press onto the card with your thumbnail until it slides out.

Starting your Buckle DVR

Step 1:

Insert the Micro SD card by pushing it firmly into the slot until it clicks into place.

Step 2:

Slide the power button to ON. The power light indicator will turn "blue" and the camera will be in a stand-by status.

Step 3:

Press and hold the Record /Stop button down for 3 seconds. The camera will begin to record video and audio. The indicator light will turn green and will blink. If you have not inserted the Micro SD card, the green light will not blink.

Step 4:

Press and hold the Record/Stop button down for 3 seconds to stop recording when the camera is on.


Note:

Do not move the "Power ON/OFF" button while the camera is recording, otherwise all your recordings will be lost.

Important:

Before power off, you must save the file by pressing Record/Stop button.

Camera Charging Procedure

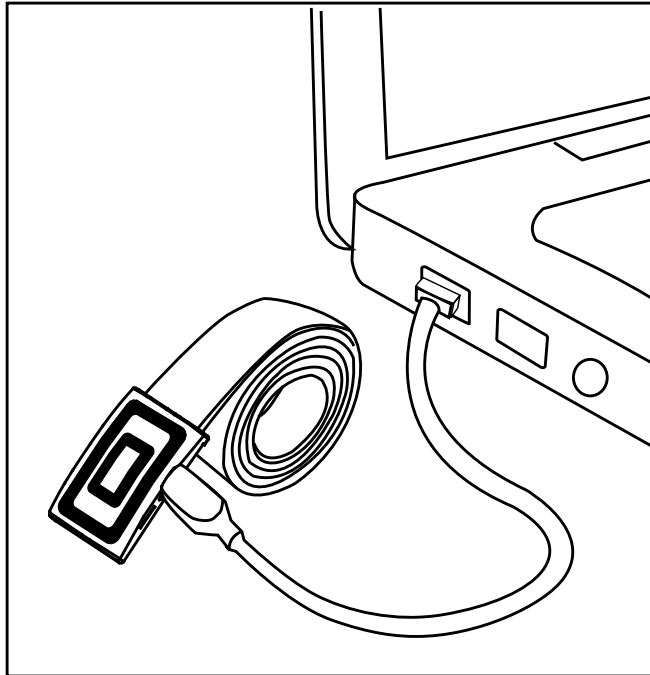

- Connect the camera to your computer with the USB cable and press the power button to OFF. The red indicator light will be on at this time and after finished charging, it will be off.
- You can also directly charge the camera using a AC adaptor that uses a USB connector (not included).
- Charging time: 3 hours
- Recording will be selected when the camera is charging via the PC or the adaptor.

Camera Specifications

Video & Voice

Video Compression	3GP Vedio Format, 176*144
Recording Mode	Continuous recording until memory is full or manually off.
Record Time	Up to 3 hours battery 33 hours can be recorded on a 1 GB Micro SD Card
Voice Recording	Yes

Memory Parameters

Micro SD/T-Flash Card Support	128 MB to 2GB
Video File Size	>500 KB per minute
Internal Memory	No

Charging Parametes

Adaptor Type	USB adaptor charging cable
Battery Type	Lithium-Ion(built in)
Dimensions:	2.54"(H) * 1.47"(W) * 0.60"(D)

Frequently Asked Questions

Q: How do I review my video recordings?

A: Use the Micro SD card to playback the video files in your cell phone, PC or use your USB cable from the camera to the PC USB port to review your video recordings.

Q: Why are my video recordings disappearing soon after I turn off the camera?

A: If you turn off the power to the camera first, then all your recordings will be erased. To prevent from accidentally erasing the video files, press the "STOP" recording button first before turning off the camera.

Q: Why does the "green" indicator light continue to blink when the camera is in stand-by status mode?

A: Make sure the memory was properly inserted, if not, removed and re-insert.

Q: Can I leave the camera recording continuously for 24 hours?

A: No. Because the recording time of the battery will exceeds the actual operating time of the camera. You will only have up to 3 hours of recording time before the camera shuts down.

Frequently Asked Questions part2

Q: Where can I buy the Micro SD card?

A: At any electronic parts store where camera are sold or online.

Q: Can I reuse the Micro SD card?

A: Yes, insert the Micro SD card into a larger SD card adaptor. Then place the SD card into a portable memory card reader or through computer, view your videos and select those you wish to erase.

Q: Will I need to replace the battery?


A: No, you will continue to recharge the Lithium-Ion battery which will give you many years of service.

Q: Why is there no view finder with the Buckle camera?

A: Simply we don't have one.

Q: Can I bring my camera somewhere for servicing in the event it malfunctions?

A: There are no official service centers. However if your camera is still under warranty, contact the company that sold you the camera and request an exchange.

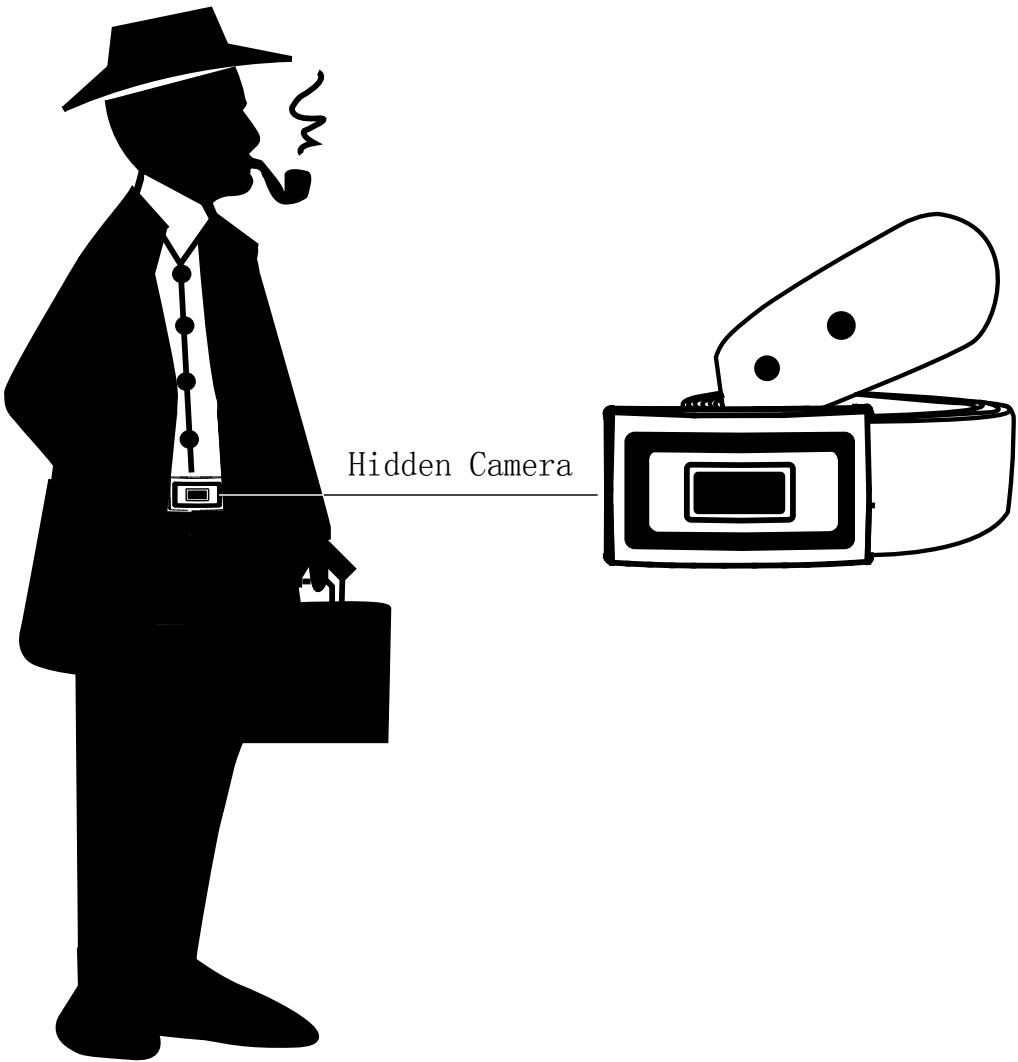

Hidden Camera