

BabyStyle[®]

BabyStyle UK Limited
LE12 7RJ
UNITED KINGDOM

This instruction manual:
© BabyStyle UK Limited 2017
All rights reserved.
Oyster Zero LJS 0959/24012017

Oyster Zero



Oyster Zero



INSTRUCTION MANUAL

register your product at www.babystyledirect.co.uk

CONTENTS

Important Safety Information	2-3
Primary features	4-5
Opening the chassis	6
Fitting/removing the front wheels	6
Fitting/removing the rear wheels	7
Folding the chassis	8-9
Operating the swivel front wheels	9
Using the parking brake	10
Adjusting the seat unit backrest	10-11
Fitting/removing the bumper bar	11
Removing the Oyster Zero seat	12-13
Car Seat Options	14
Fitting/removing the Oyster car seat to/from the chassis	14-15
Fitting/removing the maxi Cosi Pebble/ Pebble Plus to/ from the chassis	16
Fitting/removing a carrycot to/from the chassis	17-18
Oyster Zero Harness	18
Using the safety harness	18
Hood/sun canopy	19
Fitting/removing the hood	19
Fitting and removing the ride on board	20
To stow the ride on board	20-21
Fitting/removing the seat pad	21
Fitting the footmuff	21
Fitting the stroller rain cover	21
Care and Maintenance	22
Warranty	23

IMPORTANT SAFETY INFORMATION



Important- Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.

It is important that any person intending to use this vehicle fully understands the instructions.

WARNING Always use the restraint system.

This vehicle has been designed for one child, do not attempt to carry more than one child in this vehicle.

WARNING Incorrect assembly, folding or use of this vehicle may cause damage and affect the safety of the vehicle. Never overload the vehicle; the weight limit for the shopping tray is 3kg, and 500g for the cup holder. Always place articles in the centre of the shopping tray provided.

WARNING A child's safety is your responsibility.

WARNING Never leave your child unattended.

WARNING Ensure that all locking devices are engaged before use.

This vehicle is intended for children from birth to a maximum weight of 20kg, with car seat attached - birth to 13kg, with the carrycot attached- birth to 9kgs. The Oyster ride-on board has a 20 kg weight limit.

The use of the most reclined seat position is recommended for newborns.

Do not use accessories that are not approved by the manufacturer.

WARNING Any load attached to the handle affects the stability of the vehicle.

WARNING Never leave the vehicle without first engaging the parking device. Avoid uphill or downhill parking.

WARNING Check that the car seat attachment devices are correctly engaged before use.

Do not use the vehicle on steps, stairs or escalators as it may be dangerous to your child.

WARNING Never completely lift or carry this stroller while occupied. Your child's safety may be at risk.

WARNING This product is not suitable for running or skating. Check on a regular basis to make sure that all essential components & locking devices are functioning correctly.

Do not use replacement parts other than those supplied by the manufacturer or distributor.

WARNING To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING Do not let your child play with this product.

All references to left and right are given from the perspective of a person standing in the pushing position.

This vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.

WARNING: Do not attach any accessories to the stroller handle when the seat unit is reclined.

Primary Features



OPENING THE CHASSIS

To open the chassis; release the chassis travel clip, then holding the chassis handle, lift the chassis until it clicks open. Check that the chassis is fully open by pushing down on the chassis handle.



FITTING/REMOVING THE FRONT WHEELS

To fit the front wheels; locate the front wheel axle stub and push into the front wheel unit. Ensure the front wheel units are secure before use.

To remove the front wheel: Step 1. Press in the wheel release button located on the rear of the wheel unit. Step 2. Pull the wheel down & away from the chassis.



Step 1.



Step 2.

FITTING THE REAR WHEELS

To fit the rear wheels: Pull down and hold the light grey rear wheel release lever, locate the rear wheel axle and push into the rear wheel housing.



REMOVING THE REAR WHEELS

To remove the rear wheels: Pull down and hold the light grey rear wheel release lever and pull wheel away from the rear wheel housing.



FOLDING THE CHASSIS

To fold the chassis; locate the red chassis locking clip on the right hand side of the chassis. Press in until it clicks and holds open. Retract the hood, then locate the chassis folding strap in the centre of the seat textile under the textile flap. Pull up on the strap and as the stroller lifts it will fold. Engage the chassis travel clip to lock the chassis.

WARNING To avoid injury ensure that children are kept away when unfolding and folding this product.



Press chassis locking clip



Pull up chassis folding strap


Always ensure the child is clear of moving parts while making adjustments



Chassis free-standing when folded

OPERATING THE SWIVEL FRONT WHEELS

The front wheels can be used in swivel or fixed-wheel mode. To switch from locked to swivel; turn the swivel lock collar anti-clockwise (left & right). To switch from swivel to locked; turn the swivel lock collar clockwise.

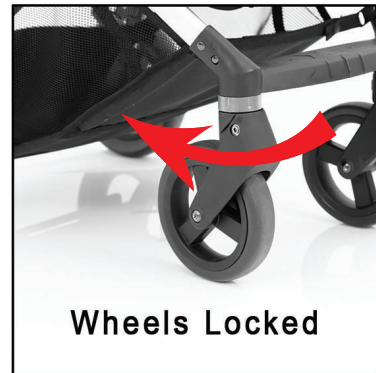

Wheels Locked



Swivel Wheels

USING THE PARKING BRAKE

To engage the brake; firmly press down with your foot on the brake bar using one of the footplates adjacent to the rear wheels. Check that the brake is fully engaged before letting go of the handle. To release the brake, with your foot lift up the brake bar until the wheels move freely.

NEVER Leave the vehicle without first engaging the brake.




Always engage the parking brake when placing or removing children

ADJUSTING THE SEAT UNIT BACKREST

To recline the seat; begin by locating the seat unit backrest adjustment device found on the back of the seat. Press down the button on the top of the device and pull back the loop, reclining the seat.



To return to the upright position; press in the button on the seat backrest. Holding in the button, pull back the adjustment straps whilst pushing forward the button unit.

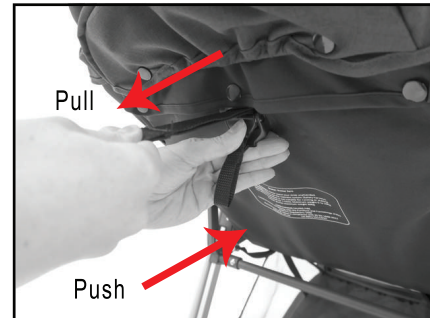

FITTING/REMOVING THE BUMPER BAR

To fit the bumper bar; locate the bumper bar into the bumper bar attachment point. To remove the bumper bar; locate bumper bar release button near the attachment point. Press the button whilst pulling the bumper bar away from the chassis.



REMOVING THE OYSTER ZERO SEAT

The Oyster Zero seat can be removed when using the chassis with a carrycot or car seat. Start by removing the bumper bar (See page 11) and follow the steps below.




1. Pull press stud away from chassis press stud (Left and Right).



2. Pull press stud away from chassis press stud (Left and Right).



3. Slide the plastic keyhole fixing away from the metal component to release (Left and Right).

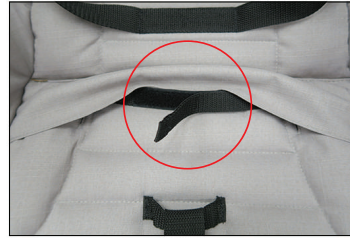

4. Separate the velcro that secures the chassis release strap.



5. On the underside of the calf support pull the velcro down to reveal the seat retention straps.



5. Cont. Separate the press studs and pull the strap through the strap guides (Left and Right).



6. Using your thumb and forefinger, slowly pull the fabric retaining rod out of the guide channel in the stroller handle (Left and Right). This will release the fabric.



Once the seat is removed, reconnect the chassis folding strap using the velcro to continue using the chassis.

The seat fabrics can be refitted to the chassis by following these steps in reverse.

CAR SEAT OPTIONS


The Oyster Zero chassis can be combined with a car seat. For details, see the table below.

CAR SEAT MAKE/ MODEL	OYSTER LB321 ADAPTORS	OYSTER ZERO MULTI ADAPTORS	OYSTER ZERO CARRY COT ADAPTORS
OYSTER CAR SEAT (LB321)	✓		✓
MAXI-COSI Pebble/ Pebble Plus		✓	



FITTING/REMOVING THE OYSTER LB321 CAR SEAT TO/FROM THE CHASSIS

To attach the Oyster LB321 car seat to the chassis the Oyster Zero carrycot adaptors must first be fitted. To attach the adaptors to the chassis; remove the bumper bar. Attach the adaptors to the chassis frame by pushing the adaptor in to the bumper bar attachment points.

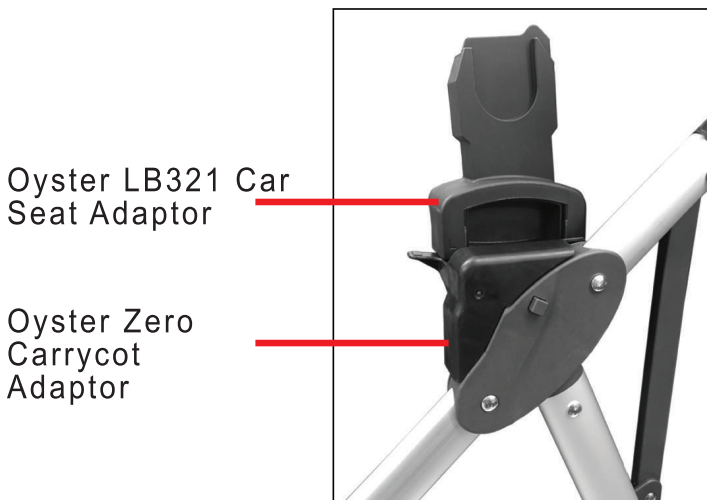

Children should be clear of moving parts while making adjustments.

The Oyster LB321 adaptors can now be pushed into the carrycot adaptors (left and right).

Hold the car seat by the carry handle and lower it onto the car seat adaptors. The adaptors should slot into the cavity at the base of the car seat handle left and right.

Push the car seat down firmly until the car seat clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.

To remove the car seat from the chassis; press down on the two buttons on the sides of the car seat (not the handle adjustment buttons) and lift the car seat away from the chassis. To remove the adaptors from the chassis pull up on the recessed handles and lift the adaptors away from the Oyster Zero carrycot adaptors.

To remove the carrycot adaptors, press the bumper bar release buttons (left and right).


FITTING/REMOVING MAXI COSI PEBBLE/ PEBBLE PLUS CAR SEAT TO/FROM THE CHASSIS

The car seat can be fitted to the chassis by using the Oyster Zero Multi car seat adaptors. To attach the adaptors to the chassis; remove the bumper bar. Attach the adaptors to the chassis frame by pushing the adaptor in to the bumper bar attachment points.

Hold the car seat by the carry handle and lower it onto the car seat adaptors. The adaptors should slot into the cavity at the base of the car seat handle left and right.

Push the car seat down firmly until the car seat clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.

To remove the car seat from the chassis; press down on the two buttons on the sides of the car seat (not the handle adjustment buttons) and lift the car seat away from the chassis. To remove the adaptors from the chassis push the bumper bar release button and pull adaptor away from the chassis.

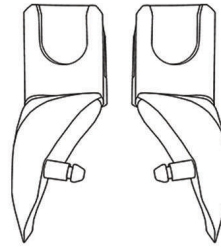

Oyster Zero Multi
Car seat Adaptors

Children should be clear of moving parts while making adjustments.


FITTING/REMOVING A CARRYCOT TO/FROM THE CHASSIS

The carrycot can be fitted to the chassis by using the relevant adaptors. To attach the adaptors to the chassis; remove the bumper bar. Attach the adaptors to the chassis frame by pushing the adaptor in to the bumper bar attachment points.

Hold the carrycot by the carry handle and lower it on to the carrycot adaptors. The carrycot attachment assemblies should slide into the adaptors on both sides.

Push the carrycot down firmly until the carrycot clicks and locks into position.- Check that the carrycot is secure and locked by pulling up on the carrycot handle

To remove the carrycot from the chassis; pull up on the carrycot release handles and lift the carrycot away from the chassis. To remove the adaptors from the chassis push the bumper bar release button and pull adaptor away from the chassis.

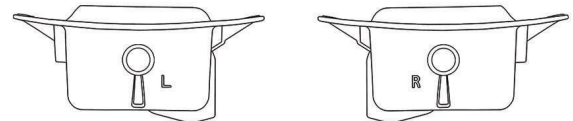


Oyster Zero carrycot adaptors



Pull UP carrycot release handles in in arrow direction to release.

Children should be clear of moving parts while making adjustments.

OYSTER ZERO HARNESS

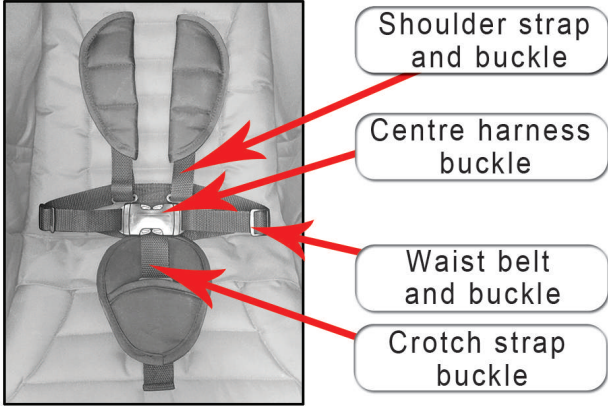

USING THE SAFETY HARNESS

Always apply the parking brake before placing your child in the vehicle. The safety harness has two shoulder straps, two waist belts and a crotch strap. Place the two shoulder straps over the child's shoulders and the waist belts around the child's waist. The crotch strap should be placed between the child's legs. The waist belts & shoulder straps should be clipped into the centre buckle at the end of the crotch strap. The harness can be adjusted to suit your child by sliding the adjusters along the shoulder straps and waist belts. To release the safety harness, push the button on the centre buckle.


WARNING Always use the crotch strap in combination with the waist belt. ALWAYS USE THE SAFETY HARNESS

HOOD/SUN CANOPY

The Oyster Lite hood has three sections, the front section can be flipped out or folded back into the main part of the hood depending on choice. To flip out the canopy reach underneath the hood opening and pull the canopy extension forwards. To fold the canopy away push it back into the hood and smooth the fabric.

FITTING AND REMOVING THE HOOD

To fit the hood; Attach the hood attachment clips to the chassis (left and right). Attach the velcro at the back and sides of the canopy and secure the press studs to the seat back. To remove the hood; pull the hood attachment clips away from the chassis (left and right). Unfasten the press studs, release the velcro and take the hood away.

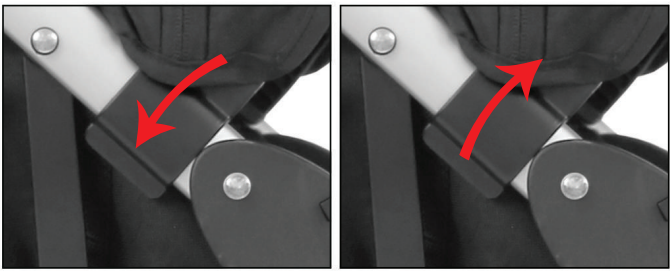


Fitting the hood Removing the hood


Children should be clear of moving parts while making adjustments.

FITTING AND REMOVING THE RIDE ON BOARD


To fit the ride on board: Pull the two triggers underneath the board and open the clasps. Locate the two open clasps onto the rear axle and rotate the the clasps forwards until they fold underneath the axle. Fully close the clasps ensuring they lock in position. Check the ride on board is secure before use.

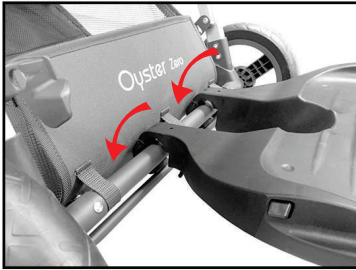

To remove the ride on board: Pull the two triggers underneath the board and lift the board away from the rear axle.

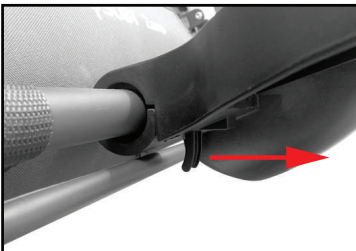

TO STOW THE RIDE ON BOARD

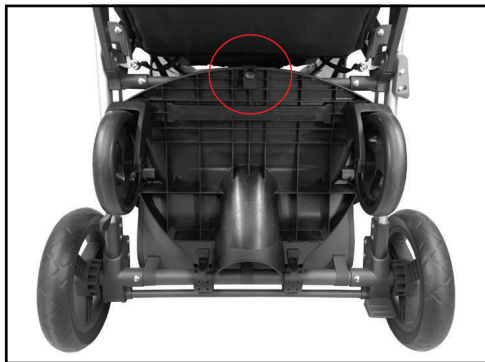

Lift up the board and secure using the press stud at the top of the board and the press stud found on the chassis tether strap

FITTING/REMOVING THE SEAT PAD

To fit the seat pad release the harness straps so that the shoulder and waist straps are separate. Thread the shoulder straps along with the crotch strap and buckle through the corresponding button holes in the seat pad. The waist straps should be passed around the side of the seat pad. Connect the straps together via the clips.

To remove; release the harness straps and and thread them through the button holes in the seat pad.

FITTING THE FOOTMUFF

The footmuff top cover can be removed by unfastening the zip. The base of the footmuff can be used as a seat liner without the top part. To attach the footmuff to the seat unit; Release the harness clips from the centre buckle and release the shoulder straps from the waist belts at the buckle connection. Pass the shoulder straps and waist belts through the corresponding openings in the footmuff. Pass the crotch strap through the opening in the footmuff. Attach the two press-studs at the top of the seat backrest to the two press-studs on the top of the footmuff.

FITTING THE STROLLER RAIN COVER

Place the rain cover over the stroller; the rain cover needs the stroller hood to be fitted and open. Press corresponding press studs along the sides of the stroller raincover (left and right). There are two webbing straps at the front of the stroller. Wrap each of these around the closest front leg (left and right).

CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts & fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. Should you intend to use the pushchair during the winter, by the sea or off-road; it is important to clean thoroughly & dry the vehicle after use. Salt from the ocean or from roads will corrode metal parts unless removed. After use in these circumstances clean with fresh water and dry thoroughly after use.

- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the pushchair is damaged contact your local BabyStyle retailer immediately without using the pushchair.
- Do not expose your pushchair to excessive sunlight for extensive periods of time, even normal exposure to sunlight may cause the colour of the fabric to change.
- Take care not to tear the fabrics while transporting the pushchair.
- Light oil or silicone spray is suitable to use as a lubricant for moving parts.
- Ensure that zips are either fully open or fully closed or they may be damaged.
- Always use the rain cover in inclement weather.
- Do not place items on the hood/canopy, it may damage the vehicle and/or render it unsafe.
- Rubber tyres can leave marks on some surfaces. The tyres can react with some surfaces (vinyl floor coverings, carpets etc.) and cause stains. Always stand the stroller on a protective surface indoors.
- Routinely clean the metal parts with a damp cloth & then dry immediately.
- Fabrics should be cleaned following the guidance on the care labels.
- Do not wash in the washing machine. Sponge clean or hand wash with mild detergent and warm water (30°C).

WARRANTY



A stroller has many moving parts and requires regular maintenance by the user. Simple cleaning and lubricating will make the stroller look good & operate better for longer. The stroller will be used in many different environments, country walks, a trip to the coast; a winter's walk to school, all can increase wear, lead to rust and corrosion and reduce the life of the product. Regular cleaning, care and maintenance will reduce the effects of the environment on the stroller. The warranty does not protect the stroller against overloading, misuse, neglect or lack of care and maintenance by the user.

BabyStyle UK Ltd provides a warranty in support of the retailer from whom you purchased this product. The warranty is effective for 12 months from the date of purchase for the original purchaser/owner. Proof of purchase will (at the discretion of BabyStyle UK Ltd) be required in order for your retailer to claim on the warranty. The warranty excludes any fault caused by misuse, damage or neglect. It is the user's responsibility to undertake routine inspection and maintenance of the vehicle in order to avoid damage to the vehicle and/or injury to the child. The vehicle is returned to the retailer at the owners' expense in order to ascertain if a claim under the warranty is justified.

Please carefully read the instructions on how to look after your stroller. This does not affect your statutory rights.