



ROMA



INSTRUCTIONS MANUAL



INDEX

1. SAFETY AND WARNING	2
2. DEFINITION	3
2.A. ROMA INTERNAL COMPONENTS	3
2.B. ROMA CAPPUCCINO INTERNAL COMPONENTS	4
3. PARTS IDENTIFICATION	4
3.A. ROMA PARTS IDENTIFICATION	5
3.C. ROMA CAPPUCCINO PARTS IDENTIFICATION	5
SECTION "A" – INSTALLATION AND MAINTENANCE	7
4. INSTALLATION AND CONNECTIONS	8
4.A. HOW TO REMOVE THE MACHINE FROM THE PACKAGE	8
4.B. GENERAL INFORMATION ON CONNECTIONS	8
4.C. WATER CONNECTION	9
4.D. ELECTRIC CONNECTION	9
4.D.1. EQUIPOTENTIAL CONNECTION:	9
5. OPERATING PROCEDURES	10
5.A. START UP	10
5.B. START UP - VERSION WITH GAS SYSTEM	10
5.C. ADJUSTMENTS	11
6. DIGIT AUTOMATIC VERSION PROGRAMMING	12
6.A. ROMA DOSES PROGRAMMING	12
6.B. ROMA CAPPUCCINO DOSES PROGRAMMING	13
6.C. GROUND COFFEE DOSE PROGRAMMING - ROMA PLUS MODEL	13
6.D. TRACTABLE WATER LITRES PROGRAMMING - ONLY FOR ROMA PLUS MODEL	13
7. TROUBLESHOOTING AND SOLUTIONS	14
8. MAINTENANCE	16
8.A. BOILER WATER DRAINING - ROMA AND ROMA PLUS MODELS	16
8.B. INSTRUCTIONS FOR REGENERATING THE SOFTENER	16
SECTION "B" – USER INSTRUCTIONS	17
9. BEVERAGES DELIVERY DESCRIPTION	18
9.A. COFFEE DELIVERY	18
9.B. HOW TO MAKE CAPPUCCINO	19
9.C. STEAM AND WATER DELIVERY	19
10. CLEANING	19
10.A. SANITATIONS	19
10.B. DAILY CLEANING PROCEDURES	20
10.C. WEEKLY CLEANING PROCEDURES	20
11. DISMANTLING	21
SECTION "C" - Technical data, Wiring and Hydraulic Diagrams	1



1. SAFETY AND WARNING



We, at **BRASILIA**, are committed to manufacturing safe operating and serviceable equipment. The many built-in safety features that are part of all BRASILIA equipment are aimed at protecting operators and trained service technicians alike.

• **DO NOT** operate machine without reading all information given in this manual. Failure to follow this instruction may result in equipment damage, poor machine performance, health hazards, or personal injury. The manual is intended for the machine's installer and/or maintenance technician and for the machine's user.

In case of dismay or for further information, contact the local retailer or the manufacturer. This manual reflects the state of the art at the current time and cannot be considered inadequate merely because it is updated later on the basis of new developments. The manufacturer also reserves the right to modify the manual without the duty of updating earlier issues, except in exceptional cases.

The pictures, in this manual, are just explanatory and they could not reflect the aesthetics of all models described.

• **DO NOT** operate the machine without complying with all local the safety regulations in force in your country of installation as well as all the rules dictated by common sense, and ensure that routine maintenance is carried out regularly and correctly.

• **DO NOT** operate machine unless it is properly grounded. Failure to follow this instruction may result in electrocution.

• **DO NOT** replace or remove safety instructions and technical data for proper and safe installation and operation, as affixed to machine.

• **DO NOT** touch the groups, the coffee spouts or the water/steam pipes during the operation of machine (pipes must be handle only through special hand-grip); the liquids/steam delivered and the machine parts are very hot and could cause burns.

• **DO NOT** touch the keys during brewing cycle.

• **DO NOT** try to remove any mechanical parts from machine and NOT perform arbitrary modifications. Contact your local authorized service agent/technician.

• **DO NOT** pull electric power cord to disconnect machine from the wall socket.

• **DO NOT** allow machine to be used by children or incapable persons.

• **DO NOT** expose machine to outdoor environment (sun, rain, snow, etc.).

• **DO NOT** operate machine unless all service panels and access door are closed.

• **DO NOT** insert spoons, forks or any other utensil into the machine if it is switched on.

• **DO NOT** operate machine without water supply.

• **DO NOT** obstruct any air intake or exhaust openings: 4" (10 cm) minimum air space behind the machine and 2" (5 cm) space on either side.

• **DO** use only ground coffee or coffee pods for models with special filter-holder.

• **DO** use only filtered and treated fresh water, or pure drinking water (Hardness approx. 7 french degrees).

• **DO** use only original BRASILIA spare parts. Failure to follow this instruction will render any warranty, expressed or implied, or guarantees by manufacturer or authorized service agent as NULL and VOID.

• Always **PERFORM** recommended daily and cleaning operations.

• **CLEANING:**

- **DO NOT use water sprayers or pressurized water jets to clean machine.**

- **DO NOT** use detergents containing perfumes, alcohol or ammonia either directly or indirectly (damp cloth) to clean machine.

- **USE** only disinfecting detergents suitable for crockery.

- Chemical-based detergents used for cleaning machine and/or the system should be used with care so as not to deteriorate any components or cause damage to environment when discarded.

CAUTION: Improper maintenance and cleaning, use of unfiltered water, or damage to internal parts may cause possible blockages in water flow leading to unexpected jets of hot liquid or steam. This may cause serious injury. Use CAUTION while washing and servicing machine!

• **SANITATIONS:**

Coffee and its ingredients (sugar, milk, etc.) are sensitive products and therefore the following basic hygiene processes need to be considered. The following are factors which can affect finished product quality served to the customer:

• Wash hands past elbows. Periodically wash it also throughout the day.

• Wear rubber gloves if cuts or skin conditions exist.

• Clean all parts and components thoroughly.

• Use approved sanitizing tablets.

• Store sanitizer in a cool, dry place. Use in accordance to instructions.

• Allow employee uninterrupted time to complete the cleaning procedure.

• Do not neglect daily cleaning procedures: follow "CLEANING" instructions in the User Manual.

• Rotate stock to use older date product first (FIFO). Observe product expiry date. Product must never be stacked outside or under direct sunlight. Check the indications on the confection.

• **ADVISE FOR INSTALLER AND MAINTENANCE TECHNICIAN:**

• **BRASILIA S.p.A.** and maintenance technician decline every responsibility in the following cases:

▶ if the machine is used for any other than its intended purposes, as described in this manual.

▶ if the recommended maintenance and cleaning procedures are NOT performed.

▶ if original BRASILIA spare parts are not used.

▶ if the INSTALLER, or MAINTENANCE TECHNICIAN, it is NOT authorized and specialized.

▶ if, despite the INSTALLER has obviously taken every possible precaution to guarantee user safety, the different installation and/or transport conditions could give rise to uncontrollable or unpredictable situations.

• **Authorized service agent** (installer or maintenance technician) must inform original manufacturer of POSSIBLE FAULT or wear which may affect the machine system's original safety.

• **The appliance must be installed in a place where only authorized personnel could perform its use and maintenance.**

• **Check** the condition of the components and, should defects or faults arise, **stop the installation** and ask for their replacement.



- Regularly perform the **MAINTENANCE PROCEDURES**. The **ENVIRONMENT TEMPERATURE** while performing maintenance operations must be at least 5°C and not over 30°C.
- **Check that the shelf, on which the machine will come located, is not tilted.**
- **Place the machine on a shelf high enough to allow the cup warmer to be located at least at 150 cm. over the floor.**
- **Aerial noise: in the machine operating place the loudness level does not normally overcome 70 dB.**
- **Do not install the machine in places where jets of water are normally used.**
- If the machine is NOT used for a long time, disconnect the cable to the mains line switch and close the water mains tap.

• **ADVICES OF USE:**

- Always use heated cups: if this is cold, the abrupt temperature change of the espresso coffee will change its taste.
- Never load the filter holder without making an immediate delivery; the ground coffee would “burn” in the group and the espresso obtained would be very bitter.
- Clean regularly the dosing grinder and check the wear of the grindstones.
- The machine’s operating process forces the water over the coffee at high pressure. If contact between the water and the ground coffee lasts more than 20/30 seconds, the coffee will taste unpleasant and bitter. This effect is called over-extraction.
- Ground coffee dose, for ONE espresso, between 6 and 7 g. inclusive.
- Checking the wear of the dosing grinder’s grindstones.

2. DEFINITION

➤ **AUTOMATIC MACHINES:**

ROMA DIGIT:

- Espresso coffee machine with microprocessor controlled electronic measured dosage.
- Digital programming from the push-button pad.
- Automatic boiler filling is standard.
- Filter for mixed use either with ground coffee or with coffee pod upon request.
- Automatic boiler filling is standard.

ROMA CAPPUCCINO DIGIT:

- Compact espresso coffee machine with incorporated automatic coffee dosing grinder and microprocessor controlled electronic measured dosage.
- Digital programming from the push-button pad.
- Automatic boiler filling is standard.

➤ **SEMIAUTOMATIC MACHINES:**

ROMA P:

- Semi-automatic espresso coffee machine with continuous delivery.
- Automatic boiler filling upon request.
- Filter for mixed use either with ground coffee or with coffee pod upon request.

ROMA CAPPUCCINO P:

- Semi-automatic espresso coffee machine with continuous delivery.
- Automatic boiler filling upon request.
- Filter for mixed use either with ground coffee or with coffee pod upon request.

2.A. ROMA INTERNAL COMPONENTS

- **Boiler:** Is used to contain the hot water and steam and is made of copper so that its properties do not deteriorate over the years.
- **Brewing group and heat exchanger:**
 - The brewing group is the component which, when attached to the filter holder (containing the filter and the ground coffee), brews and delivers the beverages when supplied with hot water.
 - The heat exchangers, one for each group, are immersed in the water and are used for fast heating of the fresh water from the network to the optimal temperature and to prevent thermal imbalances within the system.
- **Heat source:** This is normally provided by an electric heating element immersed in the boiler and/or by an external gas burner, which heat the water and provide the steam.
- **Rotary pump:** This device is used to raise the pressure of the network, which is normally inadequate for the purpose, to a pressure of 0,9 MPa (9 BAR) which is ideal for making the best coffee.
- **Steam tap:** It allows steam to be delivered to give the indispensable “froth” to the milk used for preparing cappuccino, for heating water and punches and for preparing chocolate drinks.
- **Water tap:** It allows water to be delivered for preparing hot drinks, tea and tisanes.
- **Milk frothing device (Optional):** This device is used to “froth” the milk to prepare cappuccino
- **Control instruments:**
 - Manometers: show the current pressure in the boiler and the pump’s operating pressure.
 - Pressure switches: control the pressure and the switching on of the heat sources to keep the boiler water temperature constant.
 - Level gauge: shows the water level in the boiler.
 - Thermostats: allow the temperature adjusting.
 - Warning lights: show the boiler filling and the switching on of the heat sources.




2.B. ROMA CAPPUCCINO INTERNAL COMPONENTS

- **Boiler:** Is used to contain the hot water and steam and is made of copper so that its properties do not deteriorate over the years.
- **Brewing group and heat exchanger:**
 - The brewing group is the component which, when attached to the filter holder (containing the filter and the ground coffee), brews and delivers the beverages when supplied with hot water.
 - The heat exchangers, one for each group, are immersed in the water and are used for fast heating of the fresh water from the network to the optimal temperature and to prevent thermal imbalances within the system.
- **Heat source:** This is normally provided by an electric heating element immersed in the boiler and/or by an external gas burner, which heat the water and provide the steam.
- Water pressure held stable by a **vibration pump**, with an internal safety by-pass system.
- **Steam tap:** It allows steam to be delivered to give the indispensable "froth" to the milk used for preparing cappuccino, for heating water and punches and for preparing chocolate drinks.
- **Water tap:** It allows water to be delivered for preparing hot drinks, tea and tisanes.
- **Milk frothing device (Optional):** This device is used to "froth" the milk to prepare cappuccino
- **Control instruments:**
 - Manometers: show the current pressure in the boiler and the pump's operating pressure.
 - Pressure switches: control the pressure and the switching on of the heat sources to keep the boiler water temperature constant.
 - Level gauge: internal buzzer.
 - Thermostats: allow the temperature adjusting.
 - Warning lights: show the boiler filling and the switching on of the heat sources.

3. PARTS IDENTIFICATION


3.A. ROMA PARTS IDENTIFICATION

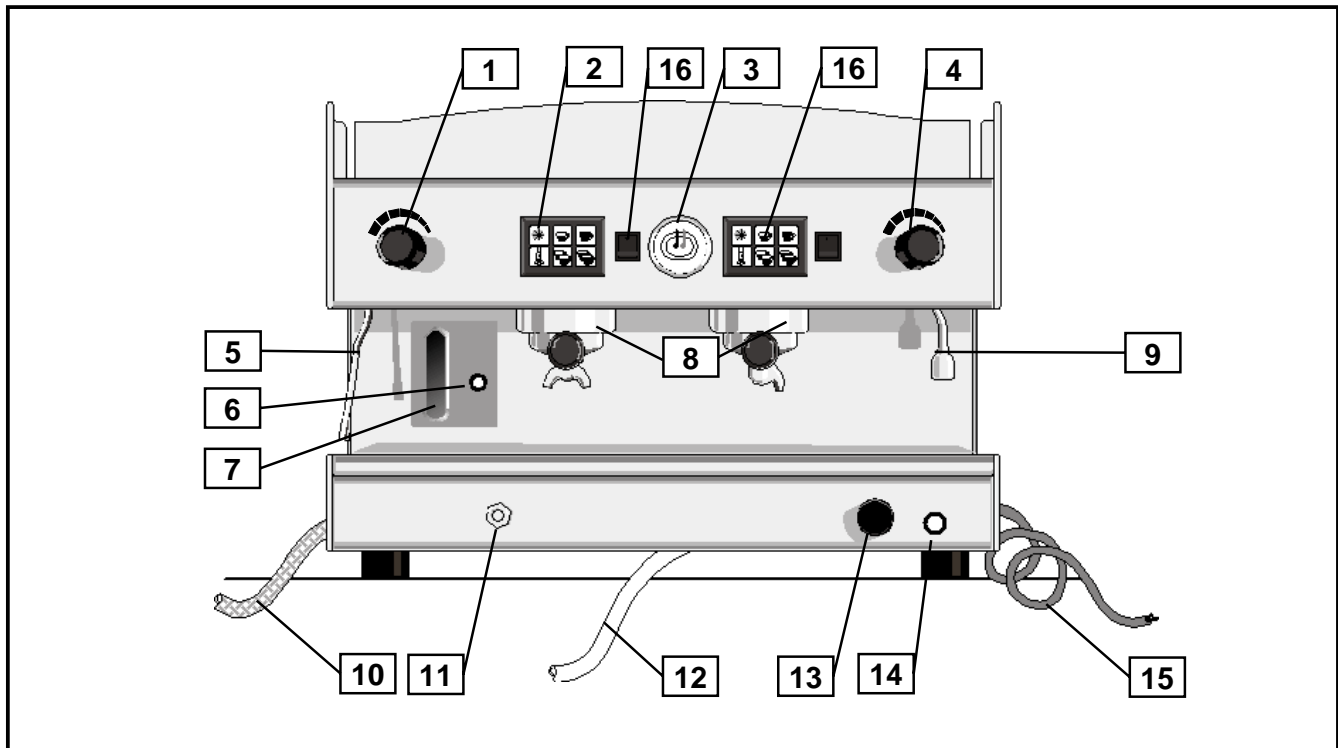


PART. N°	FUNCTION
1 STEAM TAP KNOB	• TO START THE STEAM DELIVERY
2 TOUCH KEY PAD (DIGIT MACHINE)	• BEVERAGES SELECTION AND BEVERAGES DOSES PROGRAMMING
3 MANOMETER	• TO SHOW THE CURRENT PRESSURE IN THE BOILER AND THE PUMP'S OPERATING PRESSURE
4 WATER TAP KNOB	• TO START THE STEAM DELIVERY
5 STEAM PIPE	• FOR THE STEAM DELIVERY
6 WARNING LIGHT	• SHOW THE BOILER FILLING
7 LEVEL GAUGE	• SHOWS THE WATER LEVEL IN THE BOILER
8 GROUP AND FILTER-HOLDER	• FOR THE COFFEE DELIVERY
9 WATER PIPE	• FOR THE WATER DELIVERY
10 WATER INLET PIPE	• WATER SUPPLY PIPE
11 MANUAL WATER FILLING PUSH-BUTTON OF VALVES GROUP	• CARRIES THE WATER TO THE FLOWMETERS AND BOILER
12 DRAIN PIPE	• WATER HOSE FROM DRIP TRAY
13 ON/OFF SWITCH	• ACTIVATES THE FUNCTIONS OF THE MACHINE
14 WARNING LIGHT	• SHOW THE SWITCHING ON OF THE HEAT SOURCES
15 POWER SUPPLY CORD	• ELECTRIC CABLE OF CONNECTION
16 "CONT" PUSH-BUTTON	• FOR CONTINUOUS COFFEE DELIVERY

TOUCH KEY PAD DESCRIPTION (DIGIT MACHINE)

- 1 = CONT/PROG key (continuous delivery / programming key)
- 2 = ESPRESSO COFFEE dose key
- 3 = COFFEE dose key
- 4 = HOT WATER dose key (if enabled)
- 5 = DOUBLE ESPRESSO dose key
- 6 = DOUBLE COFFEE dose key
- 7 = CONT push-button (continuous delivery button)

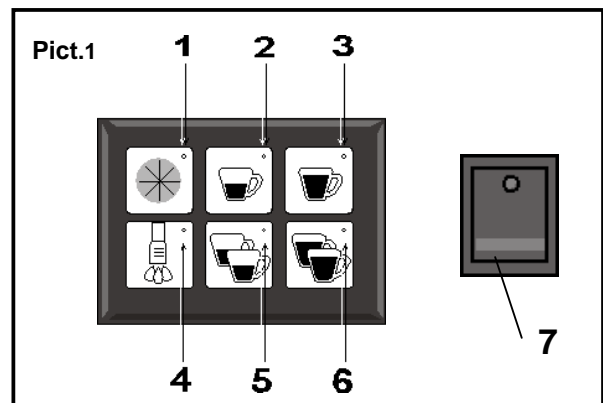

3.C. ROMA CAPPUCCINO PARTS IDENTIFICATION

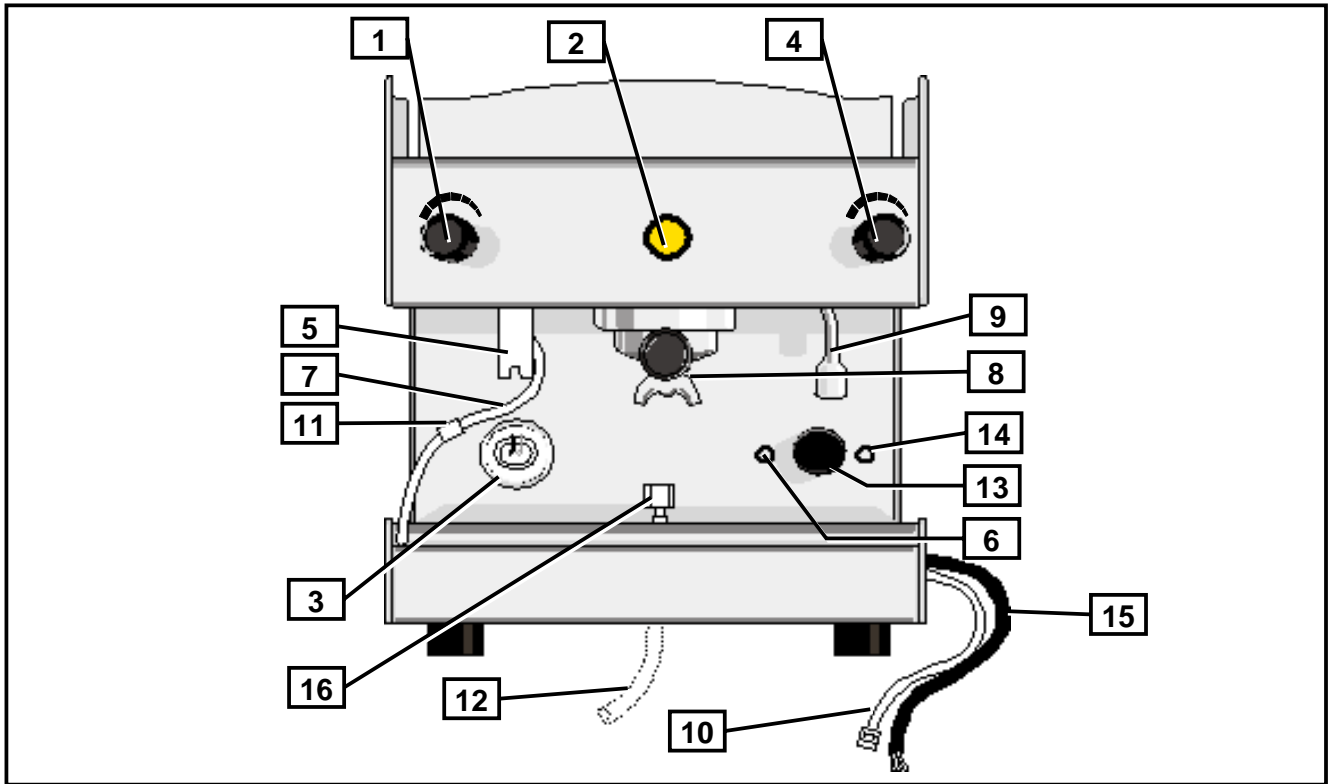


PART. N°	FUNCTION
1 MILK-FROTHING-DEVICE KNOB	• TO START THE DELIVERY OF FOAMED MILK
2 SWITCH	• FOR THE COFFEE DELIVERY
3 MANOMETER	• TO SHOW THE CURRENT PRESSURE IN THE BOILER AND THE PUMP'S OPERATING PRESSURE
4 WATER TAP KNOB	• TO START THE STEAM DELIVERY
5 MILK-FROTHING-DEVICE	• TO MAKE A FROTHED MILK
6 GREEN WARNING LIGHT	• SHOW THE BOILER FILLING
7 MILK ASPIRATION PIPE	• ALLOWS THE SUCTION OF FRESH MILK DIRECTLY FROM THE CONTAINER
8 GROUP AND FILTER-HOLDER	• FOR THE COFFEE DELIVERY
9 WATER PIPE	• FOR THE WATER DELIVERY
10 WATER INLET PIPE	• WATER SUPPLY PIPE
11 ADJUSTING SCREW	• FOR THE MILK FLOW ADJUSTMENT
12 DRAIN PIPE (optional)	• WATER HOSE FROM DRIP TRAY
13 ON/OFF SWITCH	• ACTIVATES THE FUNCTIONS OF THE MACHINE
14 RED WARNING LIGHT	• SHOW THE SWITCHING ON OF THE HEAT SOURCES
15 POWER SUPPLY CORD	• ELECTRIC CABLE OF CONNECTION
16 WATER DRAIN CONNECTOR	• CONVEYS THE DRAIN WATER IN THE TRAY

(*) Note: Only for versions with water mains connection.

TOUCH KEY PAD DESCRIPTION (DIGIT MACHINE)

- 1 = CONT key LED (continuous delivery)
- 2 = ESPRESSO COFFEE key LED
- 3 = COFFEE key LED
- 4 = STOP/PROG key LED
- 5 = DOUBLE ESPRESSO key LED
- 6 = DOUBLE COFFEE key LED

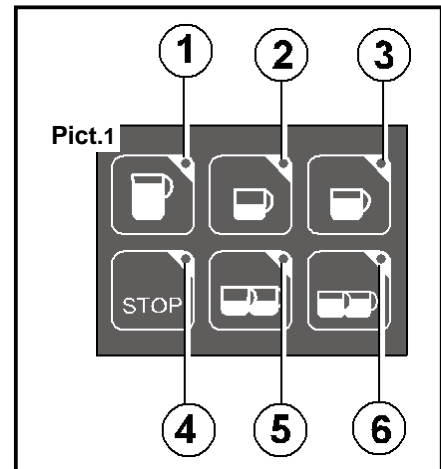



ROMA

SECTION "A" – INSTALLATION AND MAINTENANCE

4. INSTALLATION AND CONNECTIONS

4.A. HOW TO REMOVE THE MACHINE FROM THE PACKAGE

- 1 - Check possible damages to the package. IMMEDIATELY inform the transport agent of any possible damage.
- 2 - Pull open upper flaps of box. Fold flaps out and downward.
- 3 - Pull back cellophane wrapper. Lift machine from inside of box taking it FROM ITS BASE.
Take out accessories: manuals and equipments.
- 4 - Packing materials (cardboard, cellophane, metal staples, etc.) may cut or cause injury if not handled carefully or if used incorrectly; do not leave packaging materials accessible to children or incapable persons. Do not dispose of packing materials in the environment.
- 5 - Place machine in final location and check that:
 - a) the support cabinet is strong and stable enough, on account of the machine weight and check that is NOT tilted.
 - b) there are 4" (10 cm) minimum air space behind the machine and 2" (5 cm) space on either side.
- 6 - The water main outlet must be fitted with a siphon.

4.B. GENERAL INFORMATION ON CONNECTIONS

HYDRAULIC:

Perform the hydraulic connections as shown in the picture above, taking care to comply with the hydraulic regulations in force in the country of installation.

Before installing the machine it is advisable to check the efficiency of the water mains, the water mains pressure (max: 0,3 MPa - 3 BAR), the efficiency of the electrical connections and of the gas mains (for gas-heated machines).

- The water for coffee delivery comes directly from the water mains and is heated in the heat exchangers by the heat of the water contained in the boiler.
- Water supply must be filtered/treated water (~7 french degrees).
- Water inlet and drain:
 - Roma and Roma Plus → Inlet: 3/8F connector, Ø10/12mm pipe – Drain: Ø16/17mm pipe.
 - Roma Cappuccino → Inlet: 3/8F connector, Ø10/12mm pipe or water reservoir (manual filling) – Drain: Ø6/4mm pipe.

 
ELECTRIC AND ELECTRONIC:

- In the machine there are two power circuits:
 - for operating electrical components (solenoid valves, pump, electronic control modules).
 - for operating boilers heating elements.

- **The main switch of Roma and Roma Plus:** the machine is fitted with a three-position power switch.

Position OFF: no power supply to the internal components

Position ON: power supply to the operational electric components

Position  : power supply to the operational electric components and to the boiler heating element



Position 1 of the main switch should also be used when the boiler is heated only using gas.

- **The main switch of Roma Cappuccino:** the machine is fitted with a three-position power switch.

Position 0: no power supply to the internal components

Position 1: power supply to the operational electric components

Position 2: power supply to the operational electric components and to the boiler heating element

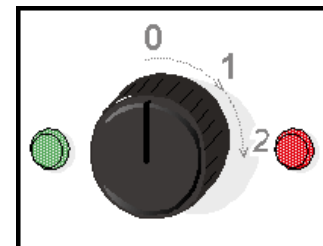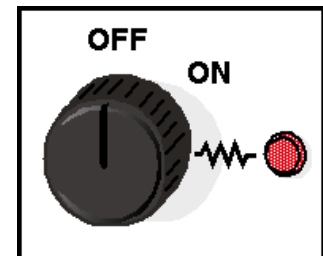

Notes:

- The machine is equipped with electric power cord and **WITHOUT PLUG**. If necessary, the **PLUG** will be installed, by the service agent, agreeing with rules of country in which machine will be installed.
- If the **SUPPLY CABLE is damaged**, it must be replaced by the manufacturer or authorized and specialized installer/maintenance, to prevent all risks. Failure to follow this instruction may result in equipment damage, poor machine performance, or electrocution.
See CONNECTIONS diagrams in the SECTION "C" - Electric and water pressure system diagrams.

4.C. WATER CONNECTION

1 – Connect the machine to the softener (n.12 pict.1):

• Connect the softener to the tap (n. 9 fig.1) using the pipe "11" (IN). Connect the pipe "13" (OUT) to the softener and insert the opposite extremity of pipe in a reservoir. Open the tap "9" and run the water through for a few minutes to clean the softener (cleaning of resins). Close the tap and connect the pipe "13" to the water inlet connector (n. 5).

2 - Connect the pipe "7" to the drain tray (n.6) and to the water main drain (n.8).

3 - Check the efficiency of the main drain pipe (mandatory fitted with a siphon).

4.D. ELECTRIC CONNECTION

1 - Use only grounded electrical connection, complying with local electrical and building code requirement, and safety laws conforming to your country of installation. The Installer/Manufacturer accepts NO responsibility for accidents due to non-compliance with local safety and building code regulations.


2 - Ensure supply voltage is correct (see rating plate on back of machine).

3 - **DO NOT** use extensions/extension cord or fly-over connections for machine installation. The working environment may be exposed to water and dampness which may affect insulation of system.

4 - Check security of power cord; it must be secure from physical damage.

5 - Connect power cord (n.3) to the mains line switch (n.2).

Note: The customer must provide for the machine's power supply, **protecting the line** with a suitable safety cut-out (life-saver).

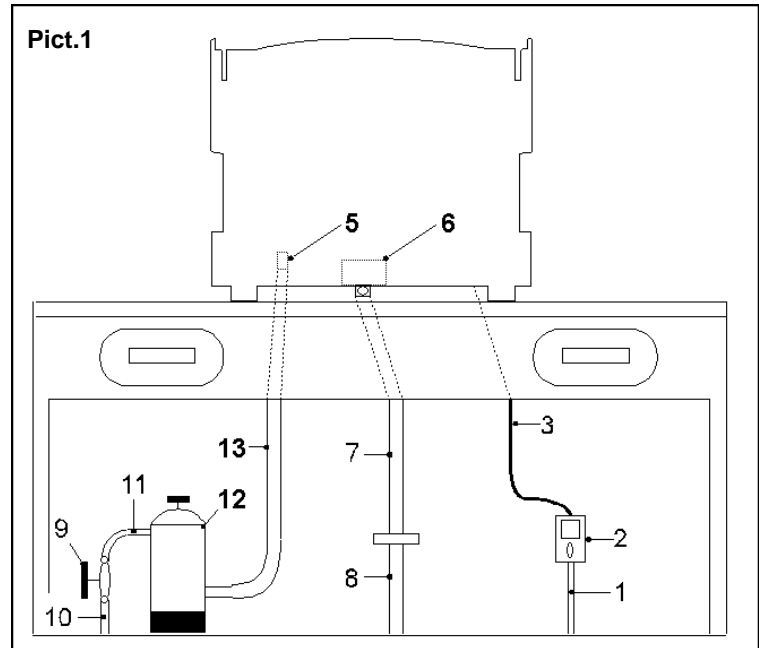

PART. N°	FUNCTION
1 - MAINS ELECTRICAL POWER SUPPLY	<ul style="list-style-type: none"> • POWER CONNECTION OUTLET FROM ELECTRICAL MAINS • SOCKET FOR ELECTRIC CONNECTION CABLE • ELECTRIC CABLE OF CONNECTION • TO CONNECT THE WATER INLET PIPE • CARRIES THE WASTE WATER IN THE DRAIN PIPE • WATER HOSE FROM DRIP TRAY • WATER TUBING TO DRAIN • TO OPEN OR CLOSE SOURCE WATER FLOW • WATER SUPPLY FROM SOURCE • WATER SUPPLY TO WATER MAINS SUPPLY LINE • TO SUPPLY SOFTENED WATER • WATER SUPPLY TO SOFTENER • FOR THE ADMISSION OF THE GAS IN THE BURNER • FOR THE LOADING OF THE GAS COMING FROM THE GAS-SYSTEM • TO ENABLE OR DISABLE THE GAS FLOW
2 - MAINS LINE SWITCH	
3 - POWER SUPPLY CORD	
5 - WATER INLET UNION (*)	
6 - DRAIN TRAY	
7 - DRAIN PIPE	
8 - MAIN DRAIN PIPE	
9 - WATER MAINS TAP (*)	
10 - WATER MAINS SUPPLY LINE (*)	
11 - PIPE FROM WATER MAIN TO SOFTENER (*)	
12 - WATER SOFTENER (*)	
13 - WATER INLET PIPE (*)	
15 - GAS SUPPLY PIPE (OPTIONAL)	
16 - PIPE FROM GAS TAP TO GAS REGULATOR (OPTIONAL)	
17 - GAS TAP (OPTIONAL)	

(*) Note: Only for model with water mains connection.


4.D.1. EQUIPOTENTIAL CONNECTION:

An omnipolar switch with a contacts opening distance of 3 mm. or more and a protection device against the electric leakage with value 30mA are needed for the machine to be properly connected.

SOME REGULATIONS require this kind of connection, which avoids level differences of electrical potential between the grounds of the various devices installed in the same place.

It's composed by a terminal located on the frame, under the drain tray, in order to be connected with an external equipotential conductor.

At the end of the machine installation it is NECESSARY to perform this connection with a conductor rated for the regulations requirements.

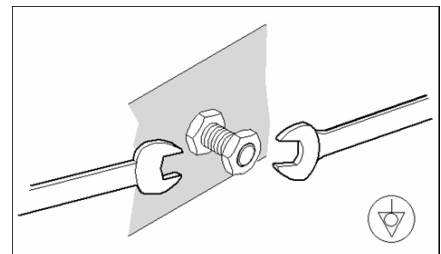

5. OPERATING PROCEDURES

OPERATING SPECIFICATIONS:

• **BOILER PRESSURE:**

- Roma and Roma Plus: around 0,09/0,1 MPa (0,9/1,1 BAR) (see manometer on frontal panel).
- Roma Cappuccino: around 0,14 MPa (1,4 BAR) (see manometer on frontal panel).

The boiler pressure can be regulated acting on the pressure switch (see § "ADJUSTMENTS").

• **DELIVERY PRESSURE:** around 0,9 MPa (**9 BAR**) (see manometer on frontal panel).

The delivery pressure can be regulated by using the screw located on the pump bypass (see § "ADJUSTMENTS").

• **SAFETY VALVE OPENING PRESSURE:** around 0,16 MPa (**1,6 BAR**).

• **EXPANSION VALVE OPENING PRESSURE (Valves Group):**

- Roma and Roma Plus:
 - 1° expansion valve: ca. 1,05 MPa (10,5 BAR)
 - 2° expansion valve: ca. 1,1 MPa (11 BAR) (coffee circuit)
- Roma Cappuccino: ca. 1,25 MPa (12,5 BAR)

The opening pressure can be checked via the apposite filter holder (blind) with the manometer and delivering only water: when the manometer needle stops, the valve will start to drip.

• **COFFEE DELIVERY TEMPERATURE: 82/97°C**

The temperature depends on the type of blend used; it can be checked with a precision thermometer during delivery. The pressure switch's screw can be used for minor adjustments (see § "ADJUSTMENTS").

5.A. START UP

ROMA AND ROMA PLUS:

- Check that water mains tap is open and turn the switch knob (4) to position ON.
- If the machine is fitted with water level control, the boiler will be filled automatically (green warning light turns off when filling is completed).
- If, however, the machine does not have a water level control, filling with water must be done manually pushing "14" button, checking the water level in the boiler on the graduated visual level gauge which is provided with "minimum" and "maximum" references. Add water when the level gauge approaches the "minimum" mark.
- When the water in the boiler reaches the right level ("MAX" - see frontal panel, for ROMA model), set the main switch knob on the heating element symbol to switch it on. Check the boiler pressure.
- Wait until the machine reaches working pressure (red indicator light near the switch turns off); open the steam tap for a few seconds and then close it again or press the steam button on the control holder band.
- Perform a coffee delivery and check the delivery pressure.


ROMA CAPPUCCINO:

- Check that water mains tap is open or, for models with water mains connection, that reservoir contains softened water.
- Turn the switch knob to position 1.
- The boiler will be filled automatically; when the buzzer sounds, switch the machine off and on by turning the switch knob to position 1.
- The boiler filling continues; when green warning light turns off turn the switch knob to position 2.
- Perform a coffee delivery and check the delivery pressure.

5.B. START UP - VERSION WITH GAS SYSTEM

GAS SYSTEM WITH MANUAL LIGHTING:

Turn the main switch to position **2** and wait until the machine reaches working pressure (see "Operating procedures" - "Boiler pressure"). To light the burner, press the gas push-button (n°1) and keep it pressed and light the burner with a match. Release the gas push-button after about 8/10 seconds. Use the "minimum flame" (n°2) regulation screw to obtain the required flame height (1/1.5 cm. high), turning it clockwise to increase the flame and counterclockwise to reduce it. At this point remove the protection cowl (det. A) after having slackened the "knurled" nut (det.B); use the regulation screw (det. C) until the required pressure is reached (clockwise for an increase in pressure). To increase the gas flow, turn the gas jet ring-nut (det.D) in a clockwise direction. Greater combustion (blue flame) may be obtained by increasing the air flow through the slot in the sleeve (det.E). On the other hand lesser combustion (red flame) is obtained by reducing the air flow.

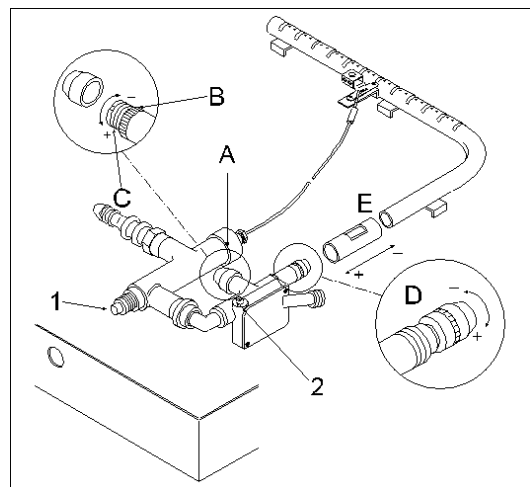


5.C. ADJUSTMENTS

ONLY AUTHORIZED PERSONNEL MUST DO THESE ADJUSTMENTS!

◆ **PUMP PRESSURE ADJUSTMENT**

It is shown on the blue scale of the delivery manometer. It can be regulated using the pump's bypass screw:

- turn clockwise to increase the pressure
- turn counterclockwise to decrease the pressure

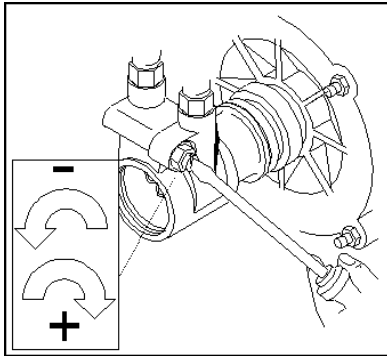


◆ **BOILER PRESSURE ADJUSTMENT**

It is shown on the red scale of the manometer. It can be regulated using the pressure switch's screw:

- turn clockwise to decrease the pressure
- turn counterclockwise to increase the pressure

Note: It is shown on the red scale of the manometer.

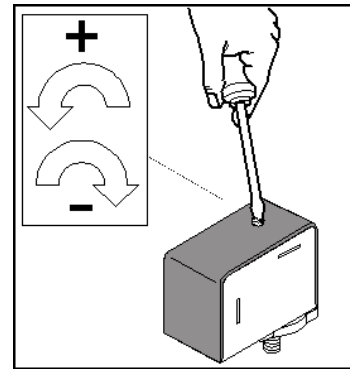


WARNING! PERFORM THESE ADJUSTMENTS ONLY IF THE MACHINE IS SWITCHED OFF!

- ◆ **GAS HEATING ADJUSTMENT - ONLY FOR MODEL WITH THIS OPTION:** See "Start up - Versions with gas system".

◆ **CAPPUCCINO ADJUSTMENT**

The quantity of milk, that flows in the milk frothing device, also influences the temperature:

- turn the screw to the right to decrease the milk flow and increase the temperature.
- turn the screw to the left to increase the milk flow and decrease the temperature.

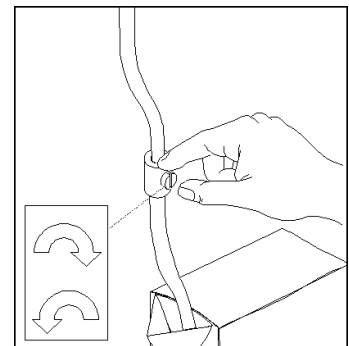


6. DIGIT AUTOMATIC VERSION PROGRAMMING

WARNING: programming should be performed by authorized service agent/technician ONLY.


TOUCH KEY PAD DESCRIPTION ROMA MODEL

- 1 = CONT/PROG key (continuous delivery / programming key)
- 2 = ESPRESSO COFFEE dose key
- 3 = COFFEE dose key
- 4 = HOT WATER dose key (if enabled)
- 5 = DOUBLE ESPRESSO dose key
- 6 = DOUBLE COFFEE dose key
- 7 = CONT push-button (continuous delivery button)

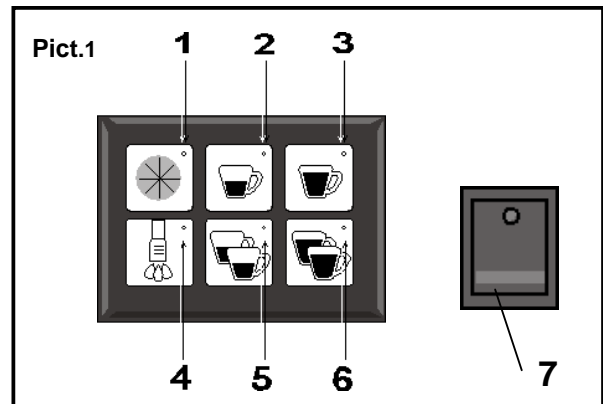

TOUCH KEY PAD DESCRIPTION ROMA CAPPUCCINO MODEL

- 1 = CONT key LED (continuous delivery)
- 2 = ESPRESSO COFFEE key LED
- 3 = COFFEE key LED
- 4 = STOP/PROG key LED
- 5 = DOUBLE ESPRESSO key LED
- 6 = DOUBLE COFFEE key LED

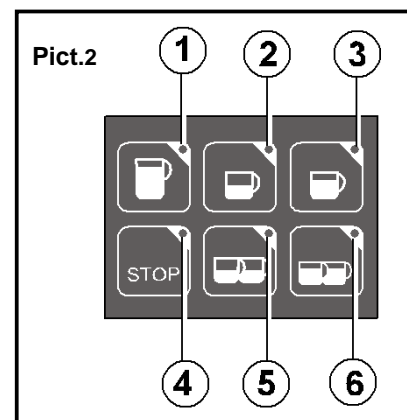

6.A. ROMA DOSES PROGRAMMING

1° COFFEE GROUP:

- 1) Keep the «programming» key (n°1 - Pict.1) pressed for at least 10 seconds. Entry to the programming status is shown by the blinking of the green LED "2".
- 2) Now press the delivery key corresponding to the dose to be programmed.
The LED for the dose being programmed will remain alight and the green programming-LED will be blinking.
- 3) When the coffee has reached the required level in the cup press the same delivery key again and the dose will be stored in memory. Other doses can be programmed in the same way, the only difference being the key to be pressed.
- 4) The machine returns automatically to the ready mode, if no key is pressed within 10 seconds.

2° COFFEE GROUP:

At every programming, the programmed doses in the first group will be automatically transferred on the second group.
If you want to change the doses for the 2° group: please follow instructions given for first group, the only difference being the key pad to be used.

Note:

- Remember that the machine's operating process forces the water over the coffee at high pressure. If contact between the water and the ground coffee lasts more than 20/30 seconds, the coffee will taste unpleasant and bitter. This effect is called over-extraction.
- CONTINUOUS brewing, with manual dosing, can be obtained in two ways:
 - by pressing CONT key (1) on the group key pad
 - by pressing the push-button (7) on the right side of the group
 Press CONT key or push-button again to stop brewing.

HOT WATER - ROMA PLUS MODEL:

- 1) Follow the instructions to the "1° COFFEE GROUP" - point 1).
- 2) Press HOT WATER dose key (4).
The LED will remain alight and the green programming-LED will be blinking.
- 3) When the water has reached the required level in the glass/jug, press the same key again and the dose will be stored in memory.
- 4) The machine returns automatically to the ready mode, if no key is pressed within 10 seconds.

6.B. ROMA CAPPUCCINO DOSES PROGRAMMING

To program the doses it is necessary to follow below mentioned instructions:

- 1) Press the STOP-key of the group to be programmed and then, without releasing the STOP, press the CONT. push-button (n°1 fig.2). Entry to the programming status is shown by the simultaneous blinking of the 4 green dose LED's (n°2 fig.2) and the yellow programming-LED (n°3 fig.2) on the key-pad of the group being programmed.
- 2) Now press the delivery push-button for the dose that is to be programmed.
The green LED for the dose being programmed will remain alight and the yellow programming-LED will be blinking.
- 3) Press the STOP of that group when the coffee has reached the required level in the cup and the dose will be stored in memory. Other doses can be programmed in the same way, the only difference being the key to be pressed.
- 4) Press STOP again to exit from the programming status.


6.C. GROUND COFFEE DOSE PROGRAMMING - ROMA PLUS MODEL

COFFEE GRINDER TOUCH KEY PAD DESCRIPTION

- 1 = "1"-dose key of ground coffee
 2 = "2"-doses key of ground coffee
 3 = PROGRAMMING key

- 1) Keep the «programming» key (n°3 - Pict.3) pressed for at least 10 seconds. Entry to the programming status is shown by the blinking of the LED "3".
- 2) Put the filter-holder under the coffee grinder and press the key corresponding to the ground coffee dose to be programmed (1 or 2).
- 3) When the ground coffee has reached the required level in the filter-holder press the same key again and the dose will be stored in memory.
Other doses can be programmed in the same way, the only difference being the key to be pressed.
- 4) The machine returns automatically to the ready mode, if no key is pressed within ~10 seconds.

ATTENTION: 2 second of delivery produce approx. 6,5/7 gr. of ground coffee.

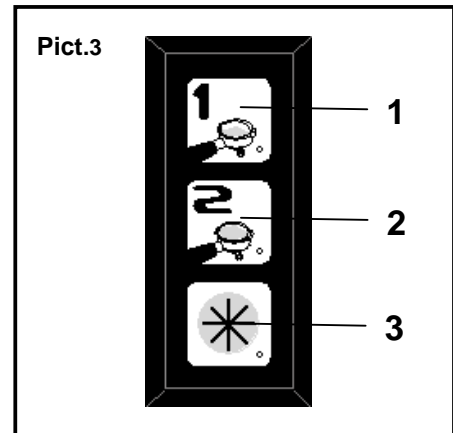

6.D. TRACTABLE WATER LITRES PROGRAMMING - ONLY FOR ROMA PLUS MODEL

To program the water litres, tractable to the softener before its substitution, follow this instruction:

- 1) Turn off the machine.
- 2) Keep pressed n° "1" and "2"-keys on grinder touch key pad (Pict.2) and contemporarily turn on the machine. Hold the keys pressed until all the three LEDs lights up (~ 5 sec.).
- 3) To insert the litres press "1" key: this key increases the value of 50 litres. To decrease the value of 50 litres press "2"-key.
Example: To program 1250 Lt, press twenty-five times the "1"-key.
- 4) Switch the machine OFF and ON and the value is memorized.

CHECK:

To check the correct insertion of litres, proceed as below:

- 1) Turn off the machine.
- 2) Keep pressed n° "1" and "2"-keys on grinder touch key pad (Pict.2) and contemporarily turn on the machine. Hold the keys pressed until all the three LEDs lights up (~ 5 sec.). If the programming has correctly happened, the three LEDs should lighten, one after the other, as below:
 - "1" LED shows the THOUSANDS
 - "2" LED shows the HUNDREDS
 - "PROG" LED (3) shows the TENS

Example: If 1250 litres have been programmed correctly, the "1"-LED will lighten once, "2"-LED will lighten twice and the "3"-LED will lighten five times.

RESET:

- To begin again the litres count, proceed as below:
 - 1) Turn off the machine.
 - 2) Keep pressed n° "3"-key on grinder touch key pad (Pict.2) and contemporarily turn on the machine. Hold the keys pressed until the LED lights up.
 - 3) Switch the machine OFF and ON.
- To reset all the inserted data (also the data of group):
 - 1) Turn off the machine.
 - 2) Keep pressed n° "1"- "2" and "5"-keys on touch key pad (Pict.1) and contemporarily turn on the machine. Hold the keys pressed until all the three LEDs lights up.
 - 3) Switch the machine OFF and ON.

7. TROUBLESHOOTING AND SOLUTIONS

- The authorized service agent (installer or maintenance technician) must inform the manufacturer of POSSIBLE FAULTS or wear which may affect the machine system's original safety.
- The user should promptly notify the authorized service agent of any FAULT or DEFECT. Only the authorized service agent may install, repair or perform maintenance on this equipment. Failure to comply with this instruction may void the equipment warranty or lead to serious.
- If an alarm stops the machine, try to reset it by switching it OFF and ON again, to be sure that it is not simply due to a temporary system failure.
- If POWER CORD is damaged, it must be replaced. Contact authorized service agent to prevent all risks. Failure to follow this instruction may result in damage to machine or electrocution.

TROUBLESHOOTING	CAUSES	SOLUTIONS
** = Maintenance and reparations that can be performed only from authorized and specialized technician. For the user: contact authorized service agent!		
LED 4 switched on (see touch key pad picture).	<ul style="list-style-type: none"> • Group is blocked: In continuous delivery, if delivery is not stopped manually using the STOP key within the time limit of 120 sec. • Should the turbine operate irregularly, the fault will be signalled by the blinking of the block red LED on the push-button pad of the group involved in the fault. In this case delivery is not dosed, but if the operator does not intervene manually with the STOP key, blocking occurs when the time limit is reached. • If the water level control solenoid valve remains open for more than 90 sec., it is automatically switched off and the fault is signalled by the block red LED blinking on all the push-button pads. 	To restart the machine, the power must be removed for at least 5 sec. and then restored.
The group does not deliver water and the pump is noisy.	<ul style="list-style-type: none"> • The water mains tap or the softener taps are shut. • The water entry union filter is obstructed. 	<ul style="list-style-type: none"> • Open the taps • Dismantle and clean
The group does not deliver water.	<ul style="list-style-type: none"> • The jet is obstructed • The injector is obstructed • (Only for versions with electronic dosing) the flowmeter connection is obstructed. • The solenoid valve will not open: <ul style="list-style-type: none"> • The coil is not getting power. • The coil is broken. • The core is blocked. 	<ul style="list-style-type: none"> • ** Remove the jet plug, check and clean or replace as necessary • ** Dismantle and clean, replace if necessary. Note: check the regeneration of the softener resins. • ** Dismantle and clean • ** Check solenoid valve: <ul style="list-style-type: none"> • Check and correct the electric connections. • Replace. • Preferably replace the complete solenoid valve.
The boiler is under pressure but the group does not heat up.	<ul style="list-style-type: none"> • Air bleeding of the boiler did not occur during the water heating stage. • The water heating circuit is partially obstructed (except lever machine). 	<ul style="list-style-type: none"> • ** When cold check that the air vacuum valve is not blocked shut. Replace if necessary. • ** Check the group's inlet and outlet pipes and unions. Clean and replace if necessary. Note: check the regeneration of the softener resins.
The boiler will not heat up.	<ul style="list-style-type: none"> • The heating element is broken. • The heating element is not receiving power. • The safety thermostat, pressure switch and main switch are faulty. 	<ul style="list-style-type: none"> • ** Replace. • ** Check and replace the related components. • ** Check and replace if necessary.
The water level control provides water when it should not and the level gauge light is on.	<ul style="list-style-type: none"> • The level sensor/control centre electrical connection is broken. • The frame earthing/control centre electrical connection is broken. • The level sensor is dirty. • The electronic control centre is defective. 	<ul style="list-style-type: none"> • ** Repair. • ** Repair. • ** Clean; when dismantling do not unthread it from the insulator but remove it complete with the union. • ** Replace.
The water level control does not provide water when it should and the level gauge light is off.	<ul style="list-style-type: none"> • The sensor is touching the glass or earthed metal parts. • The electronic control centre is defective. 	<ul style="list-style-type: none"> • ** Check and reposition. • ** Check and replace if necessary.
The water level control does not provide water when it should and the level gauge light is on.	<ul style="list-style-type: none"> • The loading solenoid valve coil is broken. • The loading solenoid valve core is blocked. 	<ul style="list-style-type: none"> • ** Check and replace if necessary. • ** Check and replace if necessary.
The water level in the boiler continues to rise until it escapes from the safety valve.	<ul style="list-style-type: none"> • Level sensor not connected. • There is a foreign body inside the water level control solenoid valve. • There is a foreign body in the seal housing. • The seal is worn. 	<ul style="list-style-type: none"> • ** Check and replace if necessary. • ** Check and replace if necessary. • ** Check. • ** Check and replace if necessary.



TROUBLESHOOTING	CAUSES	SOLUTIONS
** = Maintenance and reparations that can be performed only from authorized and specialized technician. For the user: contact authorized service agent!		
The graduated optical gauge does not show the actual water level in the boiler.	The gauge's lower connection pipe with the boiler is obstructed	** Dismantle and clean.
The boiler gets up to pressure but the group will not deliver.	<ul style="list-style-type: none"> • The control centre fuses are shot (dosed version). • The delivery switch is defective. • The solenoid valve will not open. 	** Check and replace if necessary.
The machine will only deliver when the heating element is electrically powered (red indicator light on).	"Neutral" is missing from the electrical power supply	** Check and reset.
Irregular doses are delivered (dosed version only).	<ul style="list-style-type: none"> • There is a leakage in the infra-red doser • The doser's rotor does not turn freely • The delivery solenoid valve loses from the discharge. • The expansion valves lose during delivery (except lever machine, which is not fitted with expansion valves) • The infusor operates irregularly. 	<ul style="list-style-type: none"> • ** Replace the doser if there is humidity on its outside and on the diode holder flange. • ** Replace the doser • ** Check and replace if necessary • ** Check the calibration and eventually the seal. Warning: Do not fully unscrew the expansion valve regulation union with the boiler under pressure. • ** Check and replace if necessary.
Insufficient extraction of the coffee.	<ul style="list-style-type: none"> • Pump pressure incorrect. • Expansion valves calibration incorrect: they lose during delivery (except lever machine). • The delivery temperature is incorrect. • The delivery solenoid valve loses from the discharge. • The warming cycle is clogged. • The grain size of the ground coffee is incorrect (grain too fine or too coarse). • Shower and filters partially obstructed. 	<ul style="list-style-type: none"> • ** Regulate the pressure checking the manometer during delivery. Exact calibration value: 9 bar. • ** Regulate the calibration. • ** Check the temperature with the thermometer during delivery at the filter holder spout outlets. Intervene if necessary using the pressure switch. • ** Check and replace if necessary. • ** Check and eventually replace the gicleur. • Check the delivery time and regulate the grinding if necessary. • ** Check and clean; replace if necessary.
Leakages occur from the water and steam pipes with the relative taps shut.	Sealing gasket defective or presence of a foreign body in the seal housing.	** Check and replace if necessary.
Water or steam leakages occur under the tap knobs during opening.	Tap axis seals defective.	** Check and replace if necessary.
A leakage between the group and the filter holder occurs during delivery.	Underpan seal defective or edge of filter irregular.	** Replace.
Leakage of water from the group valves locking.	Seal defective.	** Replace.
Leakage of water from the block ring-nut during manual loading.	Tap axis seal defective.	** Replace.
Only for Roma Cappuccino Models:		
The Buzzer sounds.	<ul style="list-style-type: none"> • Level probe failed. • Troubleshooting electronic box.. • The reservoir is empty (for model not connected to the water mains). 	<ul style="list-style-type: none"> • ** Check and replace if necessary. • ** Check and replace if necessary. • Refill the reservoir with softened water.


8. MAINTENANCE

ALWAYS UNPLUG THE ELECTRICITY when carrying out maintenance checks or operations.

8.A. BOILER WATER DRAINING - ROMA AND ROMA PLUS MODELS

Attention: For machines with a small capacity boiler (less than 5 litres) it is recommended to change the water frequently. Remove one litre of water every day, taking it from the hot water tap.

- Remove drain tray and grate from the machine.
- Open the tap fixed to the plastic drain tray and wait until the boiler is completely empty.
- Then close the tap again and reposition tray and grate.

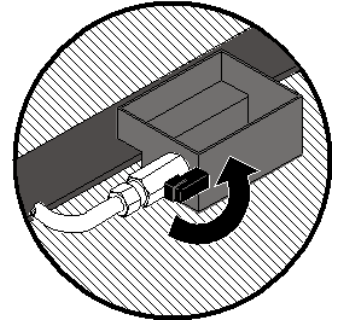

8.B. INSTRUCTIONS FOR REGENERATING THE SOFTENER

ROMA AND ROMA CAPPUCCINO MODELS:

The instructions given below should be followed to regenerate the softener:


- 1) Put a container with a capacity of at least 2 litres under pipe E. Move levers C and D from left to right.
- 2) Remove the lid by unscrewing knob G and put salt (normal kitchen salt) into the softener (pict.1): 1 kg. for the 8-litre softener and 2 kg. for the 12-litre softener. Then refit lid and move tap lever C from right to left (pict.2) so that the salty water can flow through pipe F. When the water is pure, reset lever D from right to left (pict.3).

Important:

Regeneration must be done every 15 days for a daily coffee consumption of between 1 and 2 kg. If consumption is greater than this, regeneration should be done every 7 days.

Attention:

It is very important to regenerate the softener. Failure to regenerate the resins in the softener causes calcification in the boiler, the solenoid valves and the hydraulic circuit. These deposits have a negative influence on the machine's performance and reliability and can even cause serious damage, which will lead to the intervention of the assistance service for cleaning the boiler. This type of intervention is not covered by guarantee and therefore the relative costs are the responsibility of the owner of the machine.

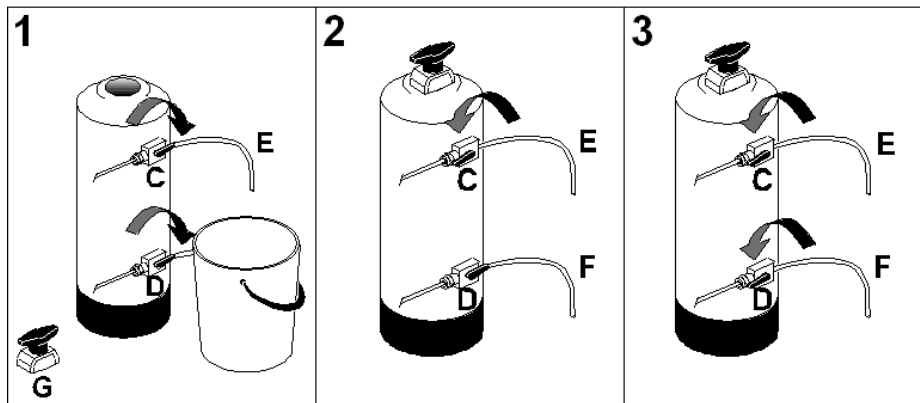



ROMA

SECTION "B" – USER INSTRUCTIONS

9. BEVERAGES DELIVERY DESCRIPTION

ADVICES OF USE:

- Always use heated cups: if this is cold, the abrupt temperature change of the espresso coffee will change its taste.
- Never load the filter holder without making an immediate delivery; the ground coffee would “burn” in the group and the espresso obtained would be very bitter.
- The machine’s operating process forces the water over the coffee at high pressure. If contact between the water and the ground coffee lasts more than 20/30 seconds, the coffee will taste unpleasant and bitter. This effect is called over-extraction.
- Ground coffee dose, for ONE espresso, between 6 and 7 g. inclusive.
- Checking the wear of the dosing grinder’s grindstones.

9.A. COFFEE DELIVERY

1) Remove the filter holder from the group (A) and dispose of the grounds by hitting the edge of the filter holder against the bar in the opposite drawer.

Do not hit the filter holder against an unprotected surface; the filter holder’s seal could be damaged. A smart blow should be enough. The small quantity of powder remaining will not have a negative effect on the taste of the coffee.

2) Fill the filter holder with finely ground coffee, placing the filter holder in the housing provided at the bottom of the grinder-doser and pulling the lever once for a single coffee and twice for a double dose.

Attention: always remember to pull the lever to its full extent; then let it return to its rest position on its own. Always ensure that there is enough ground coffee for at least one dose in the grinder-doser’s reservoir.

3) When the filter holder is filled, press down the ground coffee with the special tamp, pushing the filter holder upwards. Clean the edge of the filter holder with the palm of the hand to get rid of excess coffee powder. This will ensure that the seal between the filter holder and the machine will be perfect.

If a filter for mixed use is being utilized, you can put a coffee pod instead of ground coffee in it.

4) Fit filter holder to the machine group, fixing it and turning it until it is fully in. Do not tighten too much, otherwise it will be difficult to remove after delivery.

5) After having fitted the filter holder properly put a previously heated cup under the spout. Two cups are required if a double filter holder is used.

DIGIT VERSION:

6) Press the coffee key on the touch key pad (*).


(*) For a **CONTINUOUS delivery**, follow this instruction:

- To obtain a continuous delivery (not dosed), proceed as the points 1)÷5) and press CONT key (1) on the keypad or the push-button (7) on the right side of the group.
- Press CONT key or push-button again to stop brewing.

Attention: if delivery is not stopped manually using the STOP key within the time limit of 120 sec., the group will block without any signal. To restart the machine power must be removed for at least 5 secs. and then restored.

“P” VERSION:

6) Press the switch located above the group to start delivery. When the required quantity has been delivered, press the switch again to stop it.

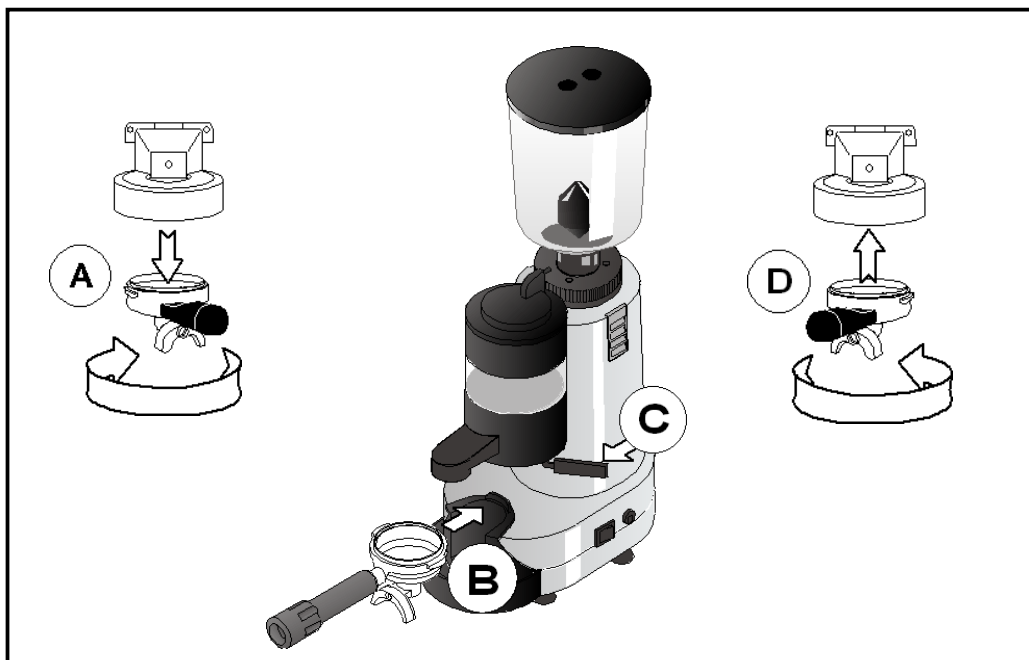

9.B. HOW TO MAKE CAPPUCCINO

For making a “professional” cappuccino, fresh milk ($\pm 4^{\circ}\text{C}$) must be “frothed” to give a foam which will be poured over the espresso coffee previously delivered.

- 1 - Switch the steam on for 1 or 2 seconds to clean away milk residues from the pipe.
- 2 - For heating use a metallic jug, or in ceramics, filled at least for half with milk.
- 3 - Approach the jug to the steam pipe so as to immerse the spout in the milk for $\sim 1\text{-}2$ cm.; don't put the pipe to the center or directly to contact with the jug.
- 4 - Push the steam button: when programmed temperature is reached, the steam automatically finishes (to set the temperature, see cap. ADJUSTMENT).
- 5 - If manual steam is used, slowly open the steam tap and move the jug in a circular fashion until the milk starts to froth. Then quickly close the steam.
- 6 - Remove the jug from the pipe and pour the frothed milk over the espresso coffee.

MODEL WITH MILK FROTHING DEVICE (OPTIONAL): introduce the milk aspiring pipe in a pitcher containing fresh milk (max. temperature $+4^{\circ}\text{C}$), then place a cup with 1 dose of espresso coffee under the milk frothing device: press the relevant switch button and wait until the requested quantity of frothed milk has been reached in the cup. Press again switch button to stop delivery and serve beverage.

9.C. STEAM AND WATER DELIVERY

- Open the water/steam tap to start the delivery.
- Close the tap to stop it.

ROMA PLUS MODEL:

- To obtain hot water, you have to push relevant key "HOT WATER" on the touch key pad.
- The volume is dosed, according to the programmed values, and delivery automatically finishes.



Warning: The steam pipes are very hot and should not be touched until they have cooled. Handle the pipes only where protected, as indicated by the arrow "A"

Clean the milk from the pipes as soon as possible to prevent it from drying and becoming difficult to remove.

Inform the customer as soon as possible that the drink is hot.

Keep extra frothed milk for the next cappuccino.

DO NOT warm the same milk but always add COLD milk to the small quantity that remains in the jug.

NOTE: The steam temperature is adjusted in accordance with a certain quantitative of milk in the jug. For not obtaining possible temperature variations during the normal employ of the machine, the use of same quantity in a jug is recommends.

10. CLEANING

- DO NOT use water sprayers or pressurized water jets to clean machine.
 - DO NOT use detergents containing perfumes, alcohol or ammonia either directly or indirectly (damp cloth) to clean machine.
 - USE only disinfecting detergents suitable for crockery.
 - Chemical-based detergents used for cleaning machine and/or the system should be used with care so as not to deteriorate any components or cause damage to environment when discarded.
- CAUTION: Improper maintenance and cleaning, use of unfiltered water, or damage to internal parts may cause possible blockages in water flow leading to unexpected jets of hot liquid or steam. This may cause serious injury. Use CAUTION while washing and servicing machine!
- Constant cleaning of the coffee dosing grinder.

10.A. SANITATIONS

Coffee and its ingredients (sugar, milk, etc.) are sensitive products and therefore the following basic hygiene processes need to be considered. The following are factors which can affect finished product quality served to the customer:

- Wash hands past elbows. Periodically wash it also throughout the day.
- Wear rubber gloves if cuts or skin conditions exist.
- Clean all parts and components thoroughly.
- Use approved sanitizing tablets.
- Store sanitizer in a cool, dry place. Use in accordance to instructions.
- Allow employee uninterrupted time to complete the cleaning procedure.
- Do not neglect daily cleaning procedures: follow "CLEANING" instructions in the User Manual.
- Rotate stock to use older date product first (FIFO). Observe product expiry date. Product must never be stacked outside or under direct sunlight. Check the indications on the confection.

10.B. DAILY CLEANING PROCEDURES

- ◆ **Carefully clean the steam pipes** used for heating beverages immediately after use, so as to avoid the formation of deposits which could block the delivery nozzles and also to prevent different types of beverages heated previously from contaminating the taste of the beverage being heated.
- ◆ **Clean the delivery groups' sprays, underpan seals and filter holder guides** with a sponge cloth.
Rinse the filters and filter holders in hot water with the addition of a specific detergent, to dissolve the fatty coffee deposits. Fit and remove the filter holder to the group, after having installed the blind filter, and make several deliveries.
- ◆ **Drip tray cleaning:** remove the cup support grid, slide out the drain water tray and clean it. Also check and, if necessary, clean the plastic drain tank removing possible coffee grounds with the help of a teaspoon.

10.C. WEEKLY CLEANING PROCEDURES

In addition to the daily cleaning operations perform the following washings:

- ◆ **Automatic washing cycle of the groups:**

- Prepare the group as follows:

- 1) Unhook the filter holder from the group (part.A pict.1) and replace the brewing filter (part.B pict.1) with the blind filter (part.C pict.1).
- 2) Put the recommended quantity of detergent into the blind filter (part.D pict.1).
- 3) Hook the filter holder into the group (part.E pict.2).

- 4) To access the cleaning status press the STOP-keys four times on all the key pads.

- 5) At this stage the machine will begin the cleaning cycle, that lasts about 3 minutes.

The cleaning cycle is split up as follows: 30 seconds running, 5 seconds pause, all repeated 5 times.

The whole length of the cleaning is signaled by the blinking of all the green LEDs together with the orange one (part.2-3-4-5-6 - see touch key pad picture).

- 6) The cleaning cycle can be interrupted by pressing STOP.


- 7) At the end of each cleaning cycle, one of the LEDs lights off; when all the LEDs are off, the cleaning is done.

- The groups rinsing procedure is similar to the cleaning.

- 8) Unhook the filter holders (part.F pict.3) and replace the blind filter (part.G pict.3) with the brewing filter (part H pict.3).

- 9) Hook the filter holder (part.E pict.2) into the group.

- 10) Press the CONT key (part.1); press STOP on all key -pads.

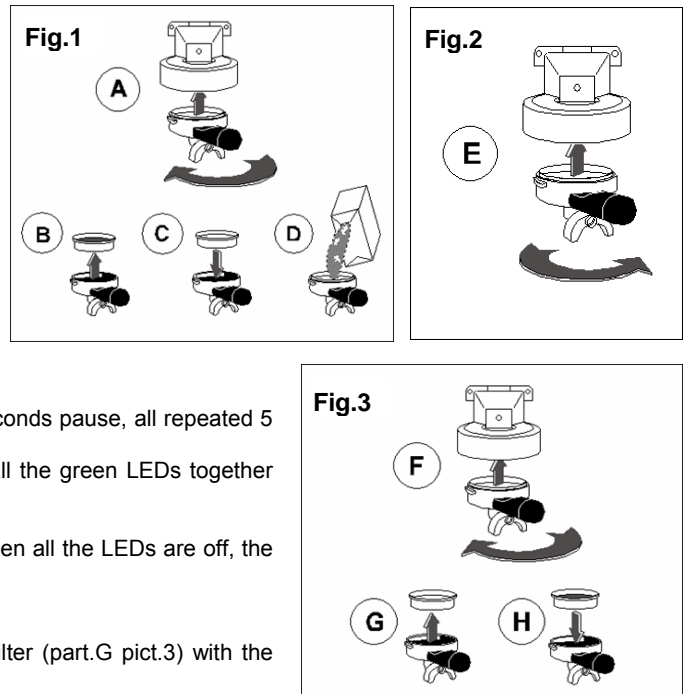


- ◆ **Outer case cleaning:** use a damp cloth (not abrasive). Never under any circumstances use alcohol or solvents on the written or painted parts.

11. DISMANTLING

- Shutting the machine down should be done by authorized personnel. For this purpose one must eliminate the pressure from the hydraulic circuit, disconnect the electric flex from the mains power supply network and dispose of substances which are potentially harmful to the environment.
- Place the machine in a suitable place, out of the reach of children or unsuitable people.
- **For dismantling the machine as refuse, take it to an authorized site for the electrical and electronic equipment recycling (*). This instruction prevents possible damages to the environment and protects human health. For other information on recycling, contact the adherence Council offices, the domestic waste dismantling service or the dealer.**
- **Do not dispose of it in the environment.**

 (*)



Label affixed on the machine for identification of **DIRECTIVE (2002/96/EC) on Waste Electrical and Electronic Equipment (WEEE)**, destined to the European market.



BRASILIA S.p.A.
Strada provinciale Bresana-Salice T.
27050 RETORBIDO (Pavia) ITALY
Tel. +39.0383.372011 - Fax. +39.0383.374450
www.brasilia.it - E-mail: info@brasilia.it