 


CHUNGHOP®

■ **RM-L988**

 
Operating Instruction

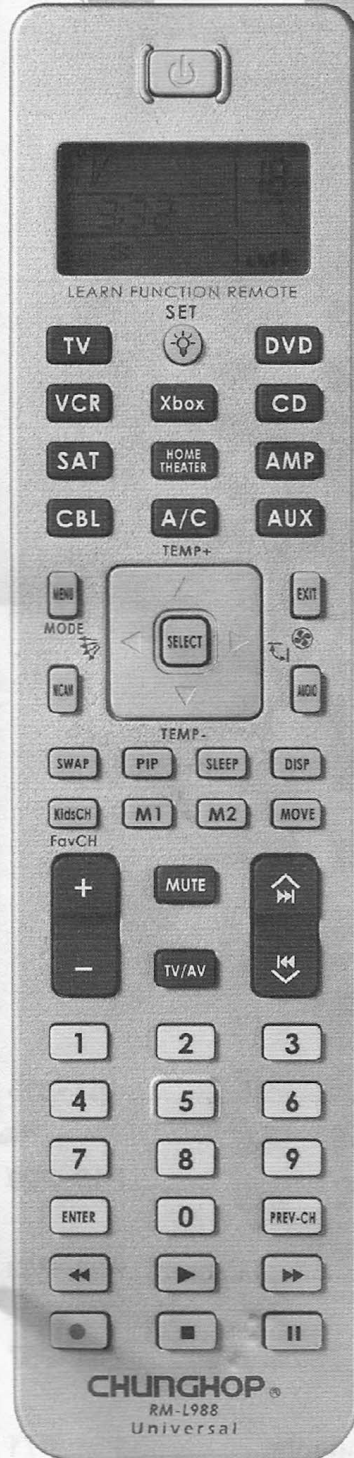

RM-L988

—— 1 IN 1 Universal Remote Controller

◎ Panel Explanation

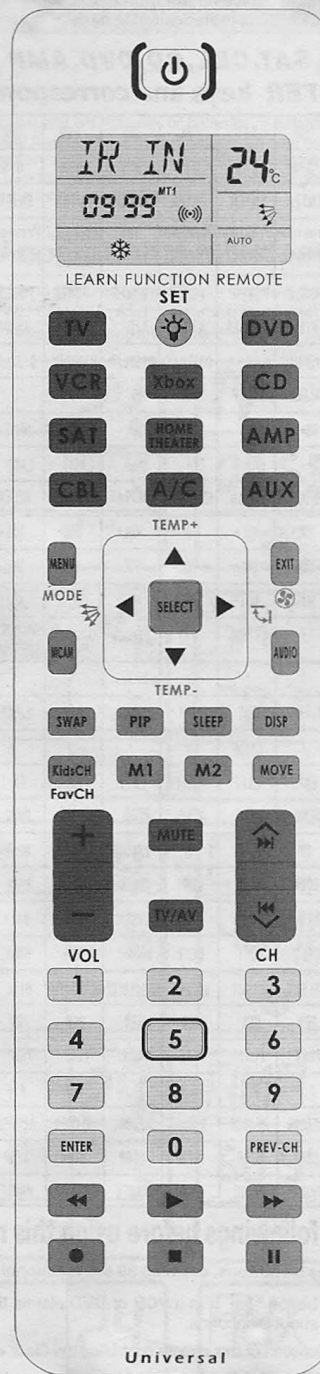


ENGLISHp1~p15

FRENCHP16~P29

SPAISHP30~P43

PORTUGALP44~P57

Cdoe form for the components.....P58~P71

 Thanks for using this remote control! Please follow the steps below to set your remote control before use, and reserve the User Manual for future setting.



 




Product Profile

This is a combination type universal remote controller with LCD and learning function. Equipped with a powerful built-in code library and easily configured, it can perform remote control over various household appliances such as TV, VCR, SAT, CBL, Xbox, HOME THEATER, A/C, DVD, CD, AMP, AUX, and other infrared remote control device. It is provided with many functions: learning, permanent memory, macroinstruction, button shifting, clock, kids channel, favorite channel, pushbutton sound, back light, volume sharing, Celsius-Fahrenheit switching, power shortage prompt, and factory default restoring, etc. Its operation is simple and pragmatic, and it is an ideal choice for all-in-one remote control for various household appliances as well as replacement in case of loss and damage.

A/C, TV, VCR, SAT, CBL, CD, DVD, AMP, XBOX, AUX, HOMETHEATER keys and corresponding functions


RF-LEAD	A/C	TV	VCR	SAT	CBL	CD	DVD	AMP	XBOX	AUX	HOMETHEATER
0	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9	0-9
1	ENTER		ENTER	ENTER	ENTER	ENTER	ENTER	ENTER	100	ENTER	ENTER
2	PREV-CH	Previous Channel	Previous Channel	Previous Channel	Previous Channel	10+	ENTER/ANGLE	Previous Channel	RETURN	RETURN	RETURN
3	POWER	POWER	POWER	POWER	POWER	POWER	POWER	POWER	ON/OFF	POWER	POWER
4	TV/AV	TV/AV	TV/VCR	TV/SAT	A/B	A/B	N/P	INPUT	CLEAR	TV/VCR	TV/VCR
5	DISPLAY	DISPLAY	DISPLAY	/	DISPLAY	DISPLAY	DISPLAY	DISPLAY	DISPLAY	INFO	INFO
6	SLEEP	SLEEP	SLEEP	SLEEP	SLEEP	/	/	/	INFO	SLEEP	SLEEP
7	CH+	CH+	CH+	CH+	CH+	CH+	NEXT	NEXT	CH+	CH+	CH+
8	CH-	CH-	CH-	CH-	CH-	CH-	LAST	LAST	CH-	CH-	CH-
9	NICHM	ADD/DELETE	ADD/DELETE	RADIO	ADD/DELETE	REPEAT	REPEAT	REPEAT	X	CC	CC
10	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+	VOL+
11	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-	VOL-
12	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE	MUTE
13	PIP	PIP	/	VIEW	FAV	RANDOM	DISKA/B	RANDOM/SURROUND	START	PIP	PIP
14	MOVE	MOVE	/	/	/	/	/	/	ENT	CHAP+	CHAP+
15	SNAP	SNAP	EJECT	NEXT	NEXT	EJECT	EJECT	EJECT	EJECT	TOGGLE	TOGGLE
16	AUDIO	AUDIO	/	GUIDE	/	/	/	/	GUIDE	GUIDE	GUIDE
17	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	EXIT	BACK	QUIT	QUIT
18	MENU	MENU	MENU	MENU	MENU	PROG	MENU	PROG	DVD MENU	MENU	MENU
19	UP	UP	UP	UP	UP	UP	TRACK+	TRACK+	REAR+	UP	UP
20	DOWN	DOWN	DOWN	DOWN	DOWN	DOWN	TRACK-	TRACK-	REAR-	DOWN	DOWN
21	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT	DISK+	DISK+	BAL+	RIGHT	RIGHT
22	LEFT	LEFT	LEFT	LEFT	LEFT	LEFT	DISK-	DISK-	BAL-	LEFT	LEFT
23	SELECT	SELECT	SELECT	SELECT	SELECT	SELECT/DISK	OK/CHAPTER	DISK	OK	OK	OK
24	REW	REW	REW	REW	REW	REW	REW	REW	REW	REW	REW
25	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY	PLAY
26	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F	F.F
27	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD	RECORD
28	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP	STOP
29	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE	PAUSE

Please note the followings before using this remote controller:

- This remote controller has 54 buttons, of which 39 are functional, and the rest 15 are not.
- When serving the record button "●" in a VCR or DVD player, the record button "○" needs to be pressed for about 2 seconds.
- After turning on the Learn function of this remote controller, the Clock will stop working; and you have to readjust the Clock after exercising the Learn function.
- Learn keys: when serving the A/C, seven keys  .  .  .  .  .  .  can be used for Learning. When serving other home appliances, all the function keys can be used for Learning.
- As for the Learn code and Key Transfer code, be sure to put the same key in the same storage area when serving the same home appliance, so that the codes will cover each other. When serving the same home appliance, the same key cannot store the Learn code and the Key Transfer code concurrently.
- During your use of the Menu, if you don't press any key within 2~3 minutes, the system will withdraw from the menu. If you don't press any key within 5~6 minutes, the LCD will be turned off.

Install the batteries

 Open the battery trough cover, install three fire-new AAA batteries according to the +/- mark on the trough wall, as shown in the figure:

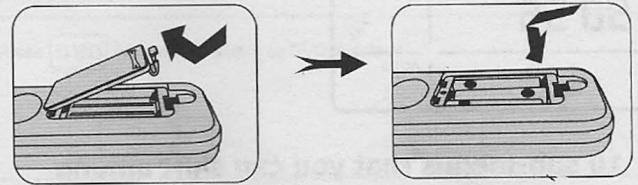

Precautions:



- Do not use new and old batteries or batteries of different models concurrently.
- In case of any liquid leakage from a battery, be sure to take the battery out, and clean the battery compartment trough before replacing it with a new battery.
- Be sure to take the batteries out before you are not going to use this remote controller for a long period of time.

11 kinds of operational interfaces

This remote controller has 11 different operational interfaces altogether for equipment: HTIB, TV, VCR, SAT, DVD, CD, CBL, AMP, Xbox, AUX, and A/C. Switching is realizable through pressing their respective equipment buttons.

HTIB 024 24°C AUTO	TV 05 53 24°C AUTO
VCR 10 22 24°C AUTO	SAT 20 11 24°C AUTO
TV/TV 30 03 24°C AUTO	CD 40 38 24°C AUTO
CBL 50 02 24°C AUTO	AMP 60 54 24°C AUTO
XBOX 70 00 24°C AUTO	AUX 80 15 24°C AUTO



10 sub-menus that you can shift among

Press the "SET" key for about 5 seconds, to enter the sub-menu settings. There are totally 10 sub-menus, press the "▶" or "◀" to shift among these sub-menus.



Settings on the remote controller

This remote controller can be set by three methods (A, B and C). You can opt for any one as you desire.

Code range: TV 0000-0874 VCR 1000-1276 SAT 2000-2392
 DVD 3000-3724 CD 4000-4276 CBL 5000-5266 AMP 6000-6161
 XBUX 7000 AUX 8000-8165 A/C 9000-9337 HTIB 000-033

A. Method of code entry

Find the brand of your home appliance to be controlled from the code list. Set for this brand from the first code, until you find the code for your home appliance. If all the codes cannot enable you to use the remote controller normally (or the brand of your home appliance is not in the code list), then go to use Method B or C.

1. Manually turn on the home appliance you are going to take remote control of, find the first code for your home appliance from the code list. For example: the DVD is branded SONY, the first code is 3036.

 
2. Press **DVD** key once to switch to DVD interface.

LCD:




3. Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state.

LCD:

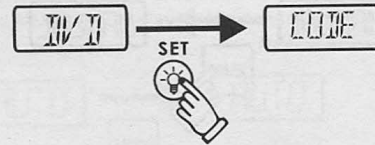


4. Press the "SELECT" key, to enter the settings state.

 LCD:

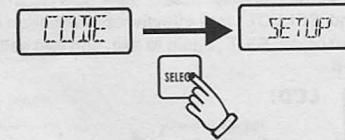


 5. Input four-digit code 3036, if correctly, with a beep it returns to submenu "CODE" press button **EXIT** it will exit and save the setting. Check other buttons (except Button SET, Button EQUIPMENT, Button KidsCH, M1, M2) for functionality and end setting, or repeat procedure 4~5 (if code input is wrong, beeps will be given out to call for new input).

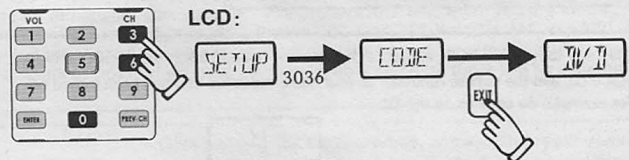


B. Method of manual search of code

 1. Manually turn on the home appliance you are going to take remote control of (e.g. TV or VCR, etc.), aim the remote controller at the home appliance that has been turned on. For example: to do settings on the TV.




2. Press key **TV** once to switch to "TV" interface.

 LCD:




3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state; then press the "▶" key to show "SEARCH", then press the "SELECT" key, the "MANUAL" will blink.

 LCD:

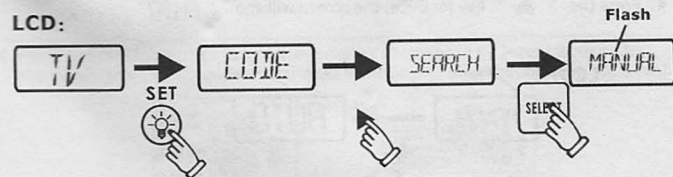


 4. Press the "SELECT" key for once, the "Code" will blink.

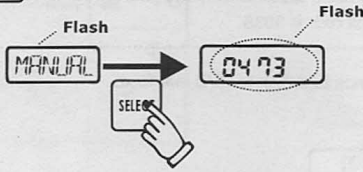

5. Aim the remote controller at the TV set, click the "▲" key, until the screen of the TV set shows the "VOLUME" mark. Press the "SELECT" key to return to the "MANUAL" state.

 
LCD:

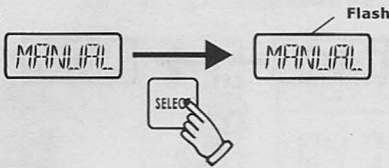

Remarks: except for that A/C (air-conditioner) shows Turned On, other home appliances all show the "Volume" mark. Therefore, when doing the settings, be sure to turn on the power of A/C (air-conditioner), and make it remain in the Stand-by state. Other home appliances shall remain in the Normal Play state.

6. Check if other buttons (except "▲", "▼", "EXIT", "EQUIPMENT", "KidsCH", "M1", "M2", and "SELECT") are effective, press button EXIT and return to menu "SEARCH", then press "EXIT" again to exit, and end setting, or repeat procedure 4~6.

 LCD:

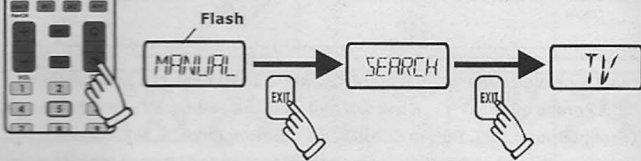


C. Fully automated search of code

1. Manually turn on the home appliance that you are going to take remote control of (e.g. TV, VCR etc.), aim the remote controller at your home appliance that has been turned on. For example: do settings on the TV.




2. Press key "TV" once to switch to "TV" interface.

 LCD:




3. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "▶" key to set the menu screen at "SEARCH", then press the "SELECT" key, the "MANUAL" will blink.

 LCD:

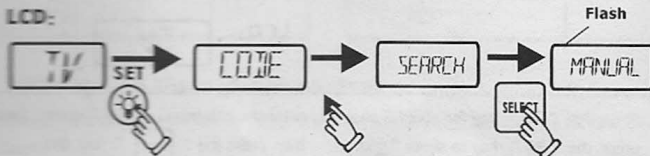

4. Press the "▲" key for once, the screen will show "AUTO".

 
LCD:

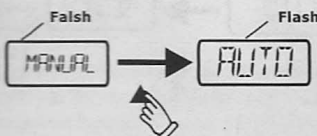

5. Press the "SELECT" key for once, the system enters the Fully Automated Search state.

Note: press the "▲" key to move to the previous code.
press the "▼" key to move to the following code.

 LCD:

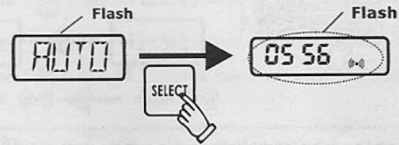


6. When a remotely controlled household appliance is shut down, with a prompt press of button "SELECT" the code of the appliance is locked (notes: TV, SAT, CBL, AMP, Xbox, and HOME THEATER will display "turn off" while A/C (air conditioner) displays "starting", and VCR, DVD, CD, and AUX display "play"; if VCR, DVD, CD, and AUX are "auto play", stop manually and they will stay waiting).

LCD:



7. Check if other buttons (except "▲", "▼", "EXIT", "EQUIPMENT", "KidsCH", "M1", "M2", and "SELECT") are effective, press button EXIT and return to menu "SEARCH", then press "EXIT" again to exit, and end setting, or repeat procedure 5~7.

 LCD:

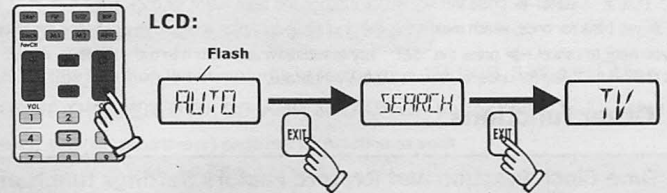


Learning function

On any page, this remote controller can learn from various infrared remote controllers of household appliances, such as TV, VCR, and A/C, etc; when you are setting a page, other buttons (except Button SET, Button EQUIPMENT, KidsCH, M1, and M2) of the remote controller all have learning function. (Notes: this remote controller can study 224 buttons at most, when study memory is not sufficient, there will be a sound for prompt).

1. TV

 Give button "SELECT" a press, and switch to your desired home appliance interface to study (for instance, set TV, press button "TV" to switch to "TV" interface).




2. Press the "SET" key for about 5 seconds, enter the sub-menu "CODE" state, then press the "▶" key to set the menu at the "LEARN" state.

LCD:




3. Press the "SELECT" key, the "LST" will blink; then press the "SELECT" key to enter the learning state, the "(())" will blink.

 
LCD:

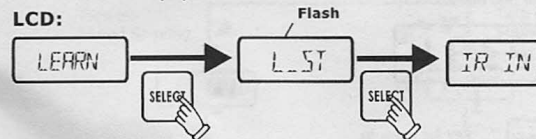

 
4. Point the emission direction of the remote controller to be learnt from at the signal window of this remote controller horizontally (at a distance of 3 to 5 cm).

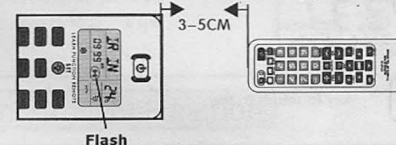

 - Press a certain function key on the target remote controller to send out its code, until the "(())" stops blinking, then loosen the key, it means the Code Sending Instruction of this function key has been learned.

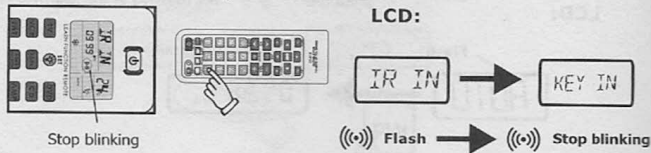

 - Press the corresponding key to be learnt from on this remote controller, "(())" will flicker again. Now other keys of the remote controller to be learnt from have been learnt to that key. Learn each key gradually in the same way till all keys have been learnt. Press key "SET" once to exit the learning mode. Press again key "EXIT" to return to the interface of "TV".

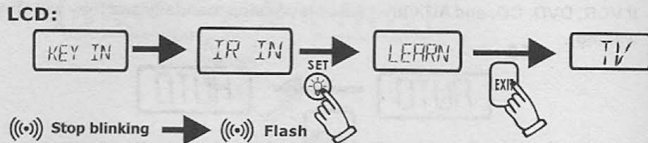

Remarks: Cancel the learned function

E.g. Cancel the learnt TV interface

 
Press the "SELECT" key to shift to the TV interface, → press the "SET" key for about 5 seconds to enter the Settings state → press the "▶" key to shift to the "LEARN" state → press the "SELECT" key to enter → press the "▲" to shift to the "CLEAR" state. Press the "SELECT" key to the "CLEAR" state → press the Key whose function has been learnt for once, the "K" in CLEAR will blink for once, which means this key is cancelled. Repeat doing so to cancel the information that you want to cancel → press the "SET" key to withdraw and return to the "LEARN" menu, press the "EXIT" key for once, to return to the TV interface.

Other functions

1. Time Clock function and Restore Factory Settings function


The following operation can be conducted on the 11 pages of TV, VCR, SAT, CBL, Xbox, HOME THEATER, A/C, DVD, CD, AMP, and AUX.

- Press the "SET" key for about 5 seconds to enter the Setting mode;

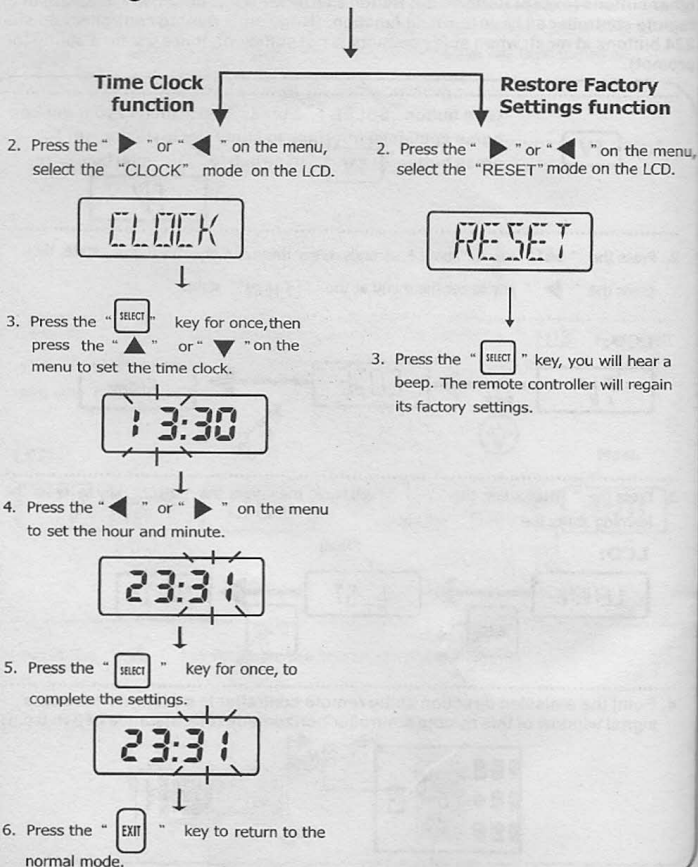

2. Key Sound On/Off Settings

 - Press the "SET" key for about 5 seconds, to enter the Settings mode.
- Press the "▶" or "◀" on the menu, or select the mode on the LCD.

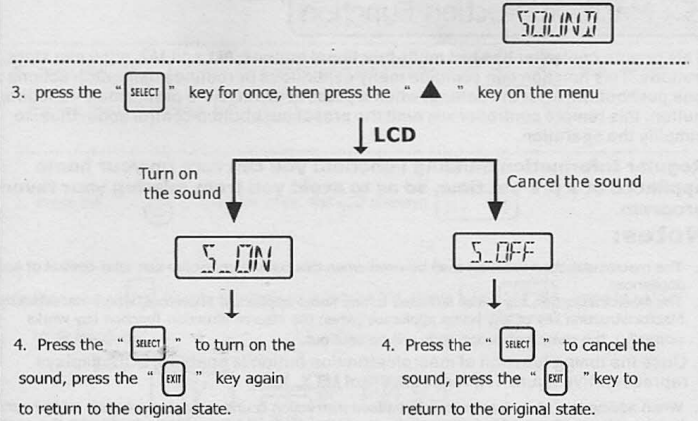


3. Sound Sharing Function

After this function is set, volume of ten device, TV, VCR, SAT, CBL, Xbox, HOME THEATER, DVD, CD, AMP, and AUX can be controlled by TV volume.

Note: A/C (air-conditioner) page has no function as such.

 E.g.: to cite DVD as an example:

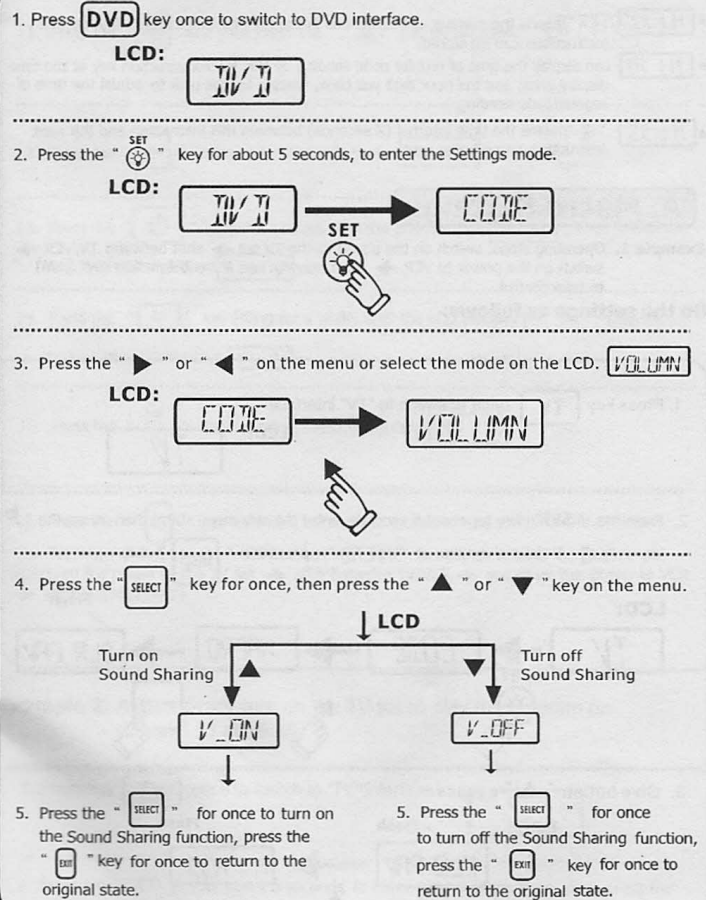

4. Backlight Control Function

Press the "SET" key to enter the backlight mode, then press the "SET" key to cancel the backlight mode.



5. Macro instruction Function

This remote controller has two multi-functional buttons, M1 and M2, each can store 21 buttons. This function can combine many continuous or routine pushbutton actions as one pushbutton; after the setting, when a press is given to the preset multi-functional button, this remote controller will emit the preset pushbutton control code, thus, to simplify the operation.

Regular Information Sending Function: you can turn on your home appliance at a pre-set time, so as to avoid you from missing your favorite program.

Notes:

- The Macroinstruction function shall be used when this remote controller can take control of home appliances.
- The Macroinstruction key is not affiliated to any home appliance. Therefore, when you press the Macroinstruction key of any home appliance (when the Macroinstruction function key works normally), the same instruction code will be sent out.
- Once the timing function of macroinstruction button is enabled, LCD displays representative figure 1, 2 respectively of MTX, X.
- When adding in a Macroinstruction, the added instruction is under the current code of the current home appliance. Once added successfully, the instruction will have nothing to do with the code set on the home appliance.

Notes:

- The LCD displays **CLR M1**, meaning Cancel the settings at the M1 key. Press the "SELECT" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **CLR M2**, meaning Cancel the settings at the M2 key. Press the "SELECT" key to confirm, press the "EXIT" key to withdraw.
- The LCD displays **M1 ADD**, meaning Adding in an instruction into the M1 key;
- The LCD displays **M2 ADD**, meaning Adding in an instruction into the M2 key.
- Press equipment key to delete the previous instruction; and press "SET" to exit adding instruction mode.
- M1 XX** "XX" means the number of instructions in the M1 Macroinstruction Key; up to 21 instructions can be stored.
- M1 TM** can display the time of regular code sending by this Macroinstruction key at the time display area; and the hour digit will blink, waiting for the user to adjust the time of regular code sending.
- M1 XS** "X" means the time interval (X seconds) between this instruction and the next instruction, when being sent.

A. Macro Settings


Example 1. Operating steps: switch on the power to the TV set → shift between TV/VCR → switch on the power to VCR → start playing, use a multi-function key "M1" to take control.

Do the settings as follows:


- Press key **TV** once to switch to "TV" interface.

LCD: **TV**

 - Press the "SET" key for about 5 seconds, enter the sub-menu state, then press the "▶" key or "◀" to set the menu at "MACRO", press the "SELECT" key.

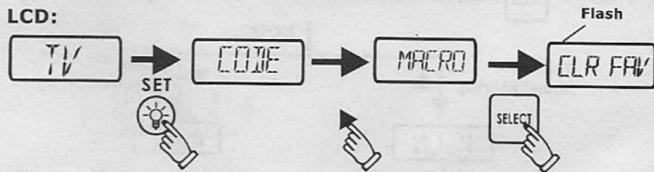

- Give button "▲" a press.

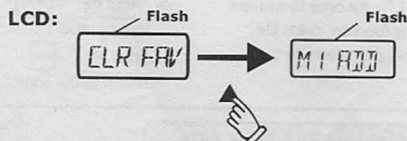 

- Press the "SELECT" key again. The LCD displays **M1 00**
(If the display is not M1-00, press equipment key to adjust).

- Press the "Power" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 01**.

- Press the "TV/AV" key for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 02**.

- Press the "SET" key for once, the LCD displays **M1 TM**.

- Press key "EXIT" twice to return to interface TV. Press key **VCR** once to select VCR interface;

LCD:



- Press the "SET" key for about 5 seconds, to enter the Settings mode.

- Press the "▶" or "◀" on the menu, or choose on the LCD; the LCD displays **MACRO**.

- Press the "SELECT" key, then press the "▲" key on the menu: **M1 ADD**.

- Press the "SELECT" key again, the LCD shows **M1 02**.

- Press the "Power" key for a while, until the LCD displays **M1 25**; then loosen the key, the LCD displays **M1 03**.

- Press the "▶" key (Play) for a while, until the LCD displays **M1 25**, then loosen the key, the LCD displays **M1 04**.

- Press the "SET" key for once, the LCD displays **M1 TM**.

- Press the "EXIT" key for twice, to return to the VCR page, complete the settings.

Namely, you can use the multi-function key "M1" to take control of the steps: Switch on the power to the TV set → shift between TV/VCR → switch on the power to VCR → start playing (PLAY)


Example 2: Automatically turn on the TV set to play the program on Channel 13 at 19:30

- Press key **TV** once to switch to "TV" interface.


LCD: **TV**

- Press the "SET" key for about 5 seconds, to enter the sub-menu state; then press the "▶" key or "◀" to set the menu at "MACRO" then press the "SELECT" key.

 LCD:

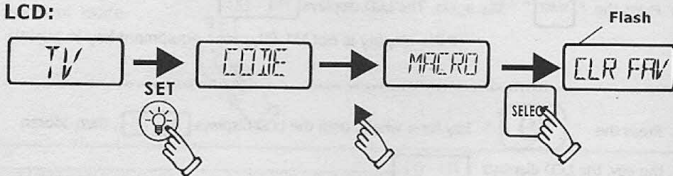

 3. Click the "▲" key on the menu.

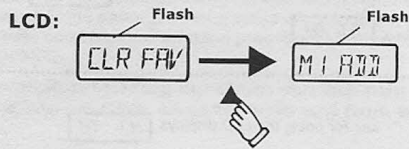

4. Press the "SELECT" key again, the LCD displays M1 00

(If the display is not M1-00, press equipment key to adjust).

5. Press the "⏻" key for a while, until the LCD displays M1 25, then loosen the key, the LCD displays M1 01

 
6. Press the "ENTER" key for a while, until the LCD displays M1 25; then loosen the key, the LCD displays M1 02

7. Press the "1" key for a while, until the LCD displays M1 25, then loosen the key, the LCD displays M1 03

8. Press the "3" key for a while, until the LCD displays M1 25, then loosen the key, the LCD displays M1 04

9. Press the "⚙️" key for once, the LCD displays M1 TM


10. Press the "▲" or "▼" on the menu to set the time clock;




11. Press the "◀" or "▶" on the menu to set the hour and minute.



 12. Press the "SELECT" key for once, to complete the settings.



 13. Press the "EXIT" key to return to the TV page. **LCD:**




14. Aim the transmitting end of the remote controller at the receiving end of the TV set. When it is 19:30, the remote controller will turn on the TV, and play the program on **Channel 13**.

6. Kids channel (KidsCH) and Favorite channel (FAV)


For example, press "12", "1", "9" to set "KidsCH":

 1. Press button "TV" to switch to "TV" interface.




2. Press button "SET" for about 5 seconds to enter submenu, then press "▶" or "◀" to transfer the menu to "MACRO", then press button "SELECT".

 LCD:

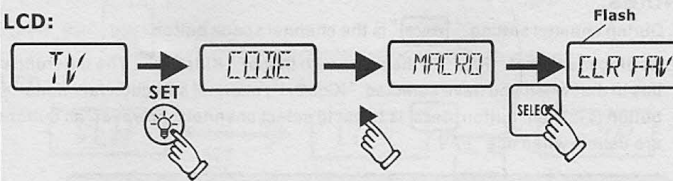

 3. Press button "▲" in the menu functional button again and again.

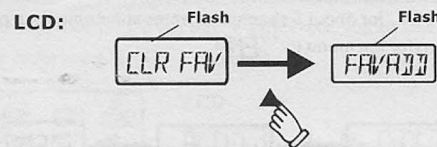

4. Press again the button "SELECT" to see LCD display FAV 00.

(If FAV 00 is not displayed, button "EQUIPMENT" should be pressed for adjustment)

5. Press "ENTER" to see LCD display FAV 05 and release to see FAV 01

6. With a press given to "1", LCD displays FAV 05, with a release, it displays FAV 02

7. Press "2" to display FAV 05 on the LCD, release to display FAV 03

8. Then press "KidsCH" to let out sound "tick".

 
9. Press "1" likewise to display FAV 05 on the LCD, and release to display FAV 04

10. Then press "KidsCH" to let out sound "Tick".

11. Press "9" likewise to display FAV 05, and release to display FAV 05

12. Then press "KidsCH" to let out sound "Tick"

13. Press "⚙️"

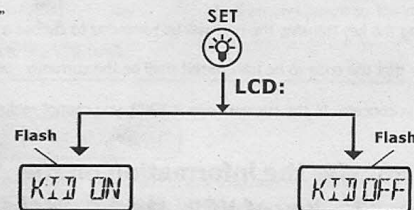


14. Then press **[SELECT]** return to interface **[MACRO]** to start "KidsCH" with "KIDS" displayed.
14. Press **[SELECT]**, return to interface **[MACRO]** to start "FAV".

Notes:


- During channel setting, **[KidsCH]** is the channel space button.
- Setting method of "FAV" is the same with that of "KidsCH". The difference lies in that when you have selected "KidsCH", channel selection functional button is locked, button **[KidsCH]** is taken to select channels; however, all buttons are usable when use "FAV".

7. Celsius-Fahrenheit switching function

 1. Press button "SET" for about 5 seconds to enter submenu, then press "▶" or "◀" to transfer the menu to "TEMP".

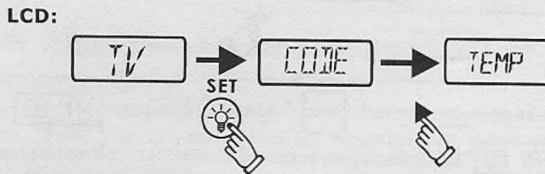

 2. Press **[SELECT]**, then press "▼"

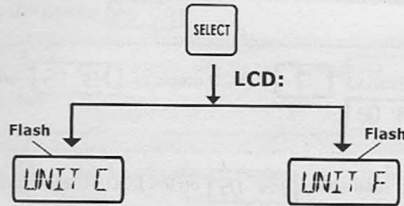

3. Press **[SELECT]**, return to interface **TEMP** where the current temperature displayed is Celsius degree.
3. Press **[SELECT]**, return to interface **TEMP** where the current temperature is Fahrenheit degree.

8. Set/Cancel Key Transfer

 
Transfer the function key of a home appliance to the function key of another appliance.

Notes:


- The key transfer code and learning code are both X999. therefore, after starting the key transfer function, you may have to set a code before using the key transfer function. The TV code is pre-set to be 0999; the VCR code is pre-set to be 1999; and the SAT code is pre-set to be 2999; and the DVD code is pre-set to be 3999; and the CD code is pre-set to be 4999; and the CBL code is pre-set to be 5999; and the AMP code is pre-set to be 6999; and the XBOX code is pre-set to be 7999; and the AUX code is pre-set to be 8999; and the A/C code is pre-set to be 9999; and the HTIB code is pre-set to be 099;
- When doing the key transfer, be sure to use a code that is not X999.
- When doing the key transfer, the user will be reminded to choose a home appliance. But remember that the code to be transferred shall be the currently set code for the home appliance in concern. If the current code is X999, you cannot realize the key transfer.

E.g.: to transfer the information on the "6" key of SAT onto the "7" key of VCR, then cancel such a transfer.

1. Press key **[VCR]** once to switch to VCR interface.



 
2. Press the "SET" key for about 5 seconds, to enter the sub-menu "CODE" state, then press the "SELECT" key.

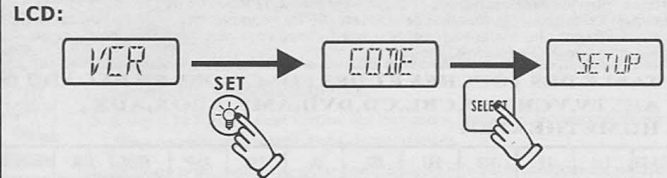


3. Enter a four-digit code 1999. If you enter a correct code, you will hear a beep, and the system will return to the "CODE" sub-menu.



 4. Press the "▶" or "◀" on the menu, or select the mode on the LCD. **[KEYMOV]**



 5. Press the "SELECT" key, then press the "▲" key.

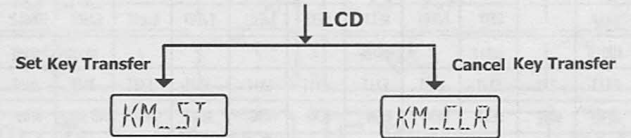

6. Press the **[SELECT]** key for once, the LCD displays



7. Press the "▲" key on the menu, the LCD displays

 


8. Press the **[SELECT]** key, the LCD displays **[FR KEY]**. Press the function key 6, the LCD displays **[TO KEY]**, then press the function key 7. Repeat this step to transfer the target key.

9. Press the **[SET]** key, the LCD displays **[KEYMOV]**, then press the "EXIT" key to withdraw, and return to the VCR page.

6. Press the **[SELECT]** key for once, the LCD displays **[CLRKEY]**

7. Press the key whose information has been transferred, the LCD displays



Repeat this step to cancel the transferred key information. Example: Function key 7

8. Press the **[SET]** key, the LCD displays **[KEYMOV]**

9. Then press the "EXIT" key again, to withdraw and return to the normal state.

9. Reminder of low power

When the battery is going out of power, the screen of any interface of this remote controller will show a mark, reminding you of the lower power in batteries.

SETUP CODES FOR TV

888.....0587,0607,0610,0633
 Abex.....0041,0282
 Admiral.....0069,0147,0170,0294,0401
 Advent.....0064,0219
 Adventura.....0015,0284,0363
 Aiko.....0103,0293
 Aiwa.....0042,0066,0094,0143
0563,0611,0612
 Akai.....0020,0036,0079,0195,0281
 Alaron.....0309
 Allegro.....0327,0328
 Alleron.....0175
 Amark.....0147,0272
 Ambassador.....0307
 Amtron.....0224
 Anam.....0289,0310
 Anam National.....0028,0199
0221,0224,0238
 ANHUA.....0555,0571,0586,0601
 Antram.....0415
 AOC.....0000,0001,0026
0040,0062,0090,0124
0272,0276,0281,0311,0369
 AOLINPIKE.....0587,0607,0610,0633
 AOLINPU.....0658
 Apex.....0019,0044,0068,0193
 Archer.....0147,0272
 Aspect.....0129
 Audiovox.....0224
 Aumark.....0291
 Axion.....0089,0194
 BAIHEHUA.....0577,0578,0594,0597
 BAIHUA.....0570,0579,0587
0607,0610,0633
 BAILE.....0566,0570,0573,0579,0580
0581,0582,0583,0584,0585,0596
 Bang & Olufsen.....0162
 BaoHuaShi.....0587,0607,0610,0633
 BAOSHENG.....0565,0570,0579
 Baysonic.....0310
 BEIJING.....0562,0565,0566,0570
0573,0575,0577,0578,0579,0580
0581,0582,0583,0584,0585,0587
0593,0594,0596,0597,0604,0605
0607,0610,0633,0645,0676,0680
0787,0819,0852
 Belcor.....0000,0276
 Bell & Howell.....0128,0145,0170
0173,0387
 Benq.....0178,0180,0227
 BENQ.....0848
 Beuamark.....0274,0281,0309
 Bradford.....0224,0310
 Broksonic.....0000,0022,0038,0086
0096,0165,0167,0276
0290,0314,0321,0368
 CAIHONG.....0565,0570,0579,0577
0578,0594,0597,0627,0656
 Candle.....0000,0015,0098,0124
0281,0284,0290,0312
 Capehart.....0040
 Carnivale.....0281
 Carver.....0288
 CCE.....0353
 Ccenturion.....0124
 Celebrity.....0195,0331
 Celera.....0019
 Centrios.....0138
 Cetricnic.....0199
 CHANGCHENG.....0555,0565,0566
0570,0571,0573,0577,0578,0579
0580,0581,0582,0583,0584,0585
0587,0594,0596,0597,0607,0610
0633
 CHANGFEI.....0565,0570,0579
0596,0677
 CHANGFENG.....0565,0578,0587,0599
0600,0607,0610,0633
 CHANGHAI.....0565,0570,0579,0677
 Changhong.....0019,0193,0554,0562
0563,0564,0565,0568,0570
0580,0582,0587,0605,0606
0611,0612,0621,0625,0640
0641,0642,0645,0647,0654
0713,0716,0736,0737,0738,0780
0842,0843,0844,0845,0846,0851
 CHENGDU.....0565,0579
 CHUANGJIA.....0627,0655
 CHUNFENG.....0570,0579,0587
0607,0610,0633,0678
 CHUNLAN.....0661,0685,0696
 CHUNSUN.....0565,0570,0579
 Cinal.....0293,0320
 Citizen.....0000,0036,0038,0098
0103,0124,0133,0140,0170
0199,0224,0281,0283,0284
0290,0291,0293,0312,0316
 Clairtone.....0001,0311
 Classic.....0019,0193,0199
 CLP.....0006
 CLP Classic.....0000,0004,0016
 Color Voice.....0146

SETUP CODES FOR TV

Colortyme.....0000,0124,0146
 Concerto.....0000,0124,0290
 Concierge.....0182
 CONROWA.....0554,0560,0561,0562
0564,0570,0579,0587,0599
0600,0602,0607,0609,0610
0627,0653,0685,0758,0812
 Contec.....0001,0196,0199,0224
0302,0310,0311,0337
 Contec.....0342,0402
 Cornea.....0150
 Cony.....0342,0402
 Craig.....0199,0224,0310
 Crosley.....0201,0288
 Crown.....0199,0224,0283,0310
 CTX.....0147
 Curtis Mathes.....0000,0027,0036,0121
0124,0128,0133,0145,0158,0170
0173,0281,0283,0288,0290,0291
0294,0297,0305,0320,0322,0329
0330,0337,0387,0403
 CXC.....0199,0224,0310
 Daewoo.....0000,0023,0026,0060,0073
0084,0099,0103,0110,0124,0125
0127,0144,0146,0153,0155,0158
0159,0199,0216,0223,0276,0283
0293,0320,0325,0326,0360,0367
0371,0374,0376,0382,0383
 Daytron.....0000,0124,0276,0283
 DAYU.....0566,0585,0596
 Dell.....0100,0142,0208
 Denon.....0297
 DETRON.....0766
 Diamond Vision.....0123,0164,0204
 Digistar.....0039,0059,0088,0108,0250
 DIGITEC.....0701,0704,0768
 Dimensia.....0145,0173
 Disney.....0112
 DONGDA.....0570,0579
 DONGHAI.....0570,0579
 DONGLIN.....0631
 Dukane.....0129,0202
 Dumont.....0000,0182,0274,0276
 DUONGJIE.....0627,0651,0655
 Durabrand.....0020,0038,0087,0093
0122,0140,0234
 Dwin.....0327,0328
 Dynasty.....0199
 Dynatech.....0353,0381
 Electroband.....0001,0195,0311,0331
 Electrohome.....0000,0020,0124,0197
0221,0318,0337,0393
 Elektra.....0170
 Elite Video.....0091
 Emerson.....0000,0002,0003,0004,0007
0020,0028,0029,0030,0038,0046
0047,0070,0071,0074,0075,0086
0094,0096,0124,0127,0128,0139
0140,0143,0148,0149,0150,0158
0167,0172,0174,0175,0198,0199
0216,0222,0224,0241,0276,0281
0283,0307,0308,0309,0310,0311
0314,0316,0317,0321,0325,0326
0332,0337,0345,0346,0354,0357
0365,0383,0386,0388,0389,0390
0399,0402,0404,0405,0406,0407
 FEILANG.....0570,0579
 FEILU.....0565,0570,0579
 FEIYAN.....0587,0607,0610,0633
 FEIYUE.....0565,0570,0577,0578
0579,0594,0597
 Fisher.....0118,0128,0156,0161
0196,0300,0303,0340
 Fujitsu.....0091,0175,0309
0602
 FULL.....0601
 Funai.....0071,0094,0140,0175,0199
0224,0306,0309,0310
 Futuretec.....0199,0224
 Futuretech.....0310
 GANGTAI.....0651
 GANXIN.....0565,0571,0577,0578
0581,0594,0595,0597
 Gateway.....0052
 GE.....0000,0004,0005,0014,0027,0037
0080,0082,0124,0145,0173,0197
0200,0217,0221,0278,0280,0294
0317,0320,0329,0330,0336,0387
0393,0412
 Gibraltar.....0000,0182,0274,0276
 Go Video.....0291
 Goldstar.....0000,0026,0062
0077,0094,0120,0124,0153
0196,0271,0276,0281,0283
0290,0334,0337,0363,0369
0402,0563,0573,0577,0578
0594,0597,0652,0694
 Gradiente.....0287,0290
 Grundy.....0175,0224,0309,0310
 Guestvision.....0190
 Haier.....0068,0087,0093,0178,0657

SETUP CODES FOR TV

.....0659,0666,0672,0673,0729,0732
0739,0740,0741,0742,0755,0759
0760,0772,0826
 HAIHONG.....0570,0579,0580,0581,0582
0583,0584,0631,0657,0822
 HAILE.....0586,0601
 HAIYAN.....0565,0577,0578,0587,0594
0597,0607,0610,0633
 Hallmark.....0000,0124
 Harley Davidson.....0309
 Harman.....0288
 Harvard.....0224,0310
 Hisense.....0068,0212,0226,0554,0560
0561,0562,0564,0568,0569,0579
0599,0600,0611,0656,0657,0659
0661,0669,0670,0682,0683,0684
0685,0692,0693,0725,0726,0727
0728,0739,0740,0741,0742,0743
0744,0745,0778,0779,0787,0819
0820,0823,0824,0825,0827,0828
0853
 Hitachi.....0000,0085,0094,0106,0124
0129,0136,0139,0143,0151,0170
0176,0179,0184,0196,0202,0209
0282,0290,0297,0332,0333,0337
0342,0347,0358,0362,0375,0400
0402,0408,0554,0560,0561,0562
0564,0568,0569,0581,0602,0733
0782
 HITCHI FUFIAN.....0561,0565,0569,0577
0578,0582,0587,0588,0594,0597
0607,0610,0614,0615,0619,0633
0656
 HONGMEI.....0557,0563,0565,0570
0572,0577,0578,0579,0587,0594
0597,0610,0611,0612,0633
 HONGYAN.....0565,0587,0607,0610,0633
 HUAFU.....0561,0570,0579
 HUANGHAIMEI.....0570,0579
 HUANGHE.....0565,0570,0577,0578
0579,0594,0597,0605,0657,0679
0709
 HUANGLONG.....0570,0579
 HUANGSHAN.....0565,0570,0577,0578
0579,0586,0587,0594,0597,0607
0610,0633
 HUANYU.....0563,0565,0569,0577,0578
0587,0594,0597,0607,0610,0611
0612,0633
 HUAQIANG.....0587,0607,0610
0633,0790
 HUARI.....0561,0587,0607,0610,0633
 HUJIJABAN.....0655
 HUODAKEJI.....0555,0571,0586,0601
 ILO.....0116,0244,0253,0227
 IMA.....0254
 IMPERIAL COWN.....0566,0573,0579
0580,0581,0582,0583,0584,0585
0587,0596,0607,0610,0633
 Infinity.....0119,0201,0288,0294
 Initial.....0253
 Insignia.....0038,0059,0071,0088,0093
0188,0126,0140,0229,0232,0415
 INTEL.....0767
 Inteq.....0182,0274
 Janeil.....0015,0284
 JBL.....0201,0288,0394
 Jc Penny.....0000,0005,0026,0027,0036
0080,0082,0098,0124,0133,0145
0148,0173,0196,0197,0200,0372
0379,0387,0393,0410
 JCB.....0195,0331
 Jensen.....0000,0124,0232
 JIAHUA.....0555,0571,0586,0587,0601
0655,0703,0761
 JIALICAI.....0570,0579,0582,0587
0607,0610,0633,0678,0732
 JIAN SHENG.....0658
 JINGFENG.....0555,0565,0575,0576
 JINGHAI.....0563,0611,0612,0653
 JINGLIPU.....0592
 JINGTA.....0563,0570,0577,0578,0579
0587,0594,0597,0607,0610,0611
0612
 JINGXINGBAN.....0658
 JINQUE.....0565,0570,0579,0586
0587,0607,0610,0633
 JINXING.....0561,0562,0565,0567,0578
0579,0586,0587,0593,0605,0611
0619,0625,0627,0633,0645,0651
0656,0661,0692,0779
 JUHUA.....0565,0577,0578,0587
0594,0597,0607,0610
 JVC.....0032,0050,0078,0091,0095,0130
0151,0184,0196,0243,0287,0337
0342,0359,0372,0380,0402,0408
0643,0715
 KAIGE.....0565,0570,0577,0578,0579
0587,0594,0597,0607,0610
 KANGHONG.....0563,0611,0612
 KANGHUA.....0657

SETUP CODES FOR TV

KANGLI.....0559,0565,0566,0570
0573,0577,0578,0579,0580
0581,0582,0583,0584
0585,0587,0594,0596
0597,0674,0758,0825
 KANGWEI.....0631,0655,0658
 KANGYI.....0570,0579,0587,0607
0610,0633,0675
 Kardon.....0288
 Kawasho.....0000,0124,0195
 Kaypani.....0040
 KEC.....0199,0310
 Kenwood.....0000,0124,0276
 KLH.....0019
 Kloss.....0279,0284
 Kloss Novabeam.....0015,0104
 KONGQUE.....0565,0570,0577,0578
0579,0587,0594,0595,0597,0578
 Konka.....0049,0054,0076,0126,0171
0218,0224,0229,0242,0565,0571
0583,0586,0588,0608,0621,0623
0625,0629,0630,0631,0632,0633
0634,0635,0661,0667,0671,0717
0718,0719,0731,0764,0771,0789
0804,0805,0806,0807,0808,0809
0810,0811
 KTV.....0001,0152,0172,0199,0224
0283,0310,0311,0316,0337,0351
 KUAILE.....0570,0579,0587
0607,0610,0633
 KUNLUN.....0555,0565,0566,0575
0576,0579,0587,0593,0594,0596
 Kurazai.....0170
 Lasonic.....0123,0164
 Lehua.....0565,0567,0570,0577
0578,0579,0594,0597
0650,0681,0802,0821,0822
 LG.....0000,0026,0062,0077,0094,0120
0124,0150,0153,0196,0290,0578
0594,0597,0652,0694,0813,0814
0815
 Lidgenet.....0145,0170,0173,0214
 LIHUA.....0565
 Liquidvideo.....0089,0113,0194
 Lodgenet.....0387
 Loewe.....0191,0201
 Logik.....0145,0170,0173,0387
 Luce.....0031
 Luxman.....0000,0124,0290
 Lxi.....0000,0027,0082,0094,0124
0128,0133,0145,0173
0201,0274,0288,0300,0301,0330
0340,0341,0363,0387,0394
 Magnasonic.....0000,0124,0201
 Magnavox.....0000,0033,0069,0071
0098,0104,0119,0124,0184,0201
0237,0277,0279,0281,0288,0295
0306,0309,0312,0313,0319,0335
0337,0394
 Majestic.....0145,0170,0173,0387,0273
 MANTIANXING.....0668
 Marantz.....0000,0124,0188,0201
0281,0288,0394
 Matsui.....0394
 Matsushita.....0315
 Medion.....0112,0116,0240
 Megatron.....0000,0124,0129,0272,0297
 MEI.....0001,0311
 MEILE.....0563,0565,0577,0578,0587
0594,0597,0607,0610,0611,0612
0633
 Memorex.....0000,0038,0118,0124,0128
0145,0167,0170,0173,0175,0273
0290,0291,0298,0300,0315,0387
 MENGMEI.....0577,0578,0594,0597
 MGA.....0000,0026,0124,0161,0175
0184,0196,0197,0276,0281,0299
0343,0393
 Midland.....0005,0027,0082,0173,0182
 Minut.....0200
 Mitsubishi.....0000,0020,0026,0124
0161,0175,0184,0185,0197,0276
0294,0298,0308,0361,0565,0605
 Mitsui.....0419,0420
 Mitsubishi.....0393
 Monivision.....0051
 Montgomery Ward.....0145,0170,0173
0387
 Moteva.....0128
 Motorol.....0147,0221
 Motorola.....0289,0294,0401
 MTC.....0000,0001,0026,0036,0124
0133,0276,0281,0290,0291
0311,0381
 MUDAN.....0555,0556,0565,0570,0574
0575,0576,0579,0586,0587,0593
0594,0597,0607,0610,0613,0617
0619,0633,0655,0661,0699,0700
0703,0772,0777
 Multitech.....0224,0310,0353,0381
 Multivision.....0008,0356

SETUP CODES FOR TV

Myron&Davis.....0215
 NAD.....0000,0041,0124,0133,0301
 0305,0308,0341
 NANBAO.....0563,0570,0579,0587
 0607,0610,0611,0612,0633
 NANSHENG.....0565,0587,0607
 0610,0633
 National.....0289
 NEC.....0000,0026,0035,0124,0146
 0184,0188,0221,0276,0281
 0290,0323,0360,0558,0560
 0565,0570,0578,0579,0587
 0607,0610,0633,0643,0694
 NET TV.....0012,0052
 Nexxtech.....0088,0256
 Nickel.....0199
 Nikko.....0000,0103,0124,0274,0281
 0285,0293,0300,0301,0308,0330
 NIKON.....0563,0611,0612
 Norcent.....0053,0068,0223
 Noshi.....0275
 NTC.....0103,0293
 Olevia.....0248
 Oncommand.....0190
 Onking.....0199
 Onwa.....0199,0224,0310
 Optimus.....0021,0041,0160,0192
 0300,0305,0315
 Optoma.....0249
 Optonica.....0035,0147,0294,0301,0304
 Orion.....0029,0038,0182
 0309,0314,0321
 OTHER BRAND.....0590,0598,0611
 0627,0631,0651,0655,0656
 0657,0658,0660,0668,0732,0847
 OULIN.....0655
 Panasonic.....0005,0021,0097,0111,0152
 0160,0169,0187,0192,0201,0221
 0271,0285,0286,0287,0288,0289
 0291,0294,0297,0298,0300,0301
 0304,0308,0315,0330,0344,0394
 PANASONIC.....0555,0556,0568,0569
 0574,0575,0576,0613,0620
 PANDA.....0555,0563,0565,0570,0575
 0576,0577,0578,0579,0580,0582
 0587,0594,0597,0605,0607,0610
 0611,0612,0615,0616,0627,0633
 0643,0645,0655,0678,0679,0735
 0757,0758,0762,0817,0818,0850
 PDLYTRON.....0705,0706,0768
 Penney.....0272,0275,0276,0278,0280
 0281,0282,0283,0285,0286
 0290,0291,0301,0308,0330,0337
 Philco.....0000,0026,0033,0098,0104
 0124,0184,0201,0221,0237
 0276,0277,0279,0281,0288
 0297,0312,0313,0321,0335
 0337,0364,0394,0402
 Philips.....0000,0016,0018,0033,0043
 0056,0067,0071,0080,0093
 0098,0104,0117,0119,0140
 0141,0163,0184,0201,0221
 0237,0567,0577,0578,0593
 0594,0597,0695,0795,0796
 Philips-Magnavox.....0018,0069,0092
 0119,0201,0237
 Pilot.....0000,0276,0281,0283
 Pioneer.....0000,0041,0124,0139,0154
 0188,0202,0305,0332,0386,0143
 Piva.....0246
 Polaroid.....0000,0026,0103,0110
 0124,0158,0212,0232
 0236,0276,0283,0293,0337
 Precision.....0063
 Price Club.....0036
 Prima.....0039,0059,0088,0250
 Princeton Graphics.....0132,0147
 Prism.....0005,0286
 Proscan.....0027,0082,0145,0173
 0210,0235,0281,0285,0387
 Proton.....0000,0040,0065,0124
 0213,0228,0272,0308
 0322,0337,0370,0397,0402
 Proview.....0245,0247
 Pulsar.....0000,0182,0274,0276
 QINGDAO.....0555,0565,0575,0576
 0587,0607,0610,0633
 Quasar.....0005,0021,0111,0152,0160
 0187,0192,0201,0221
 0286,0289,0304,0315
 Radio Shack.....0000,0035,0094,0102
 0124,0128,0145,0160,0173
 0174,0196,0199,0217,0224
 0276,0282,0283,0285,0290
 0300,0304,0308,0310,0337
 0340,0363,0387,0390,0402
 RCA.....0000,0005,0009,0026,0027,
 0037,0057,0082,0090,0102
 0115,0124,0135,0139,0144
 0145,0155,0173,0189,0197
 0205,0210,0217,0221,0230
 0235,0275,0276,0285,0286

SETUP CODES FOR TV

.....0292,0294,0329,0330,0332,0348
 0377,0384,0386,0387,0398,0409
 Realistic.....0000,0035,0094,0102,0124
 0128,0145,0160,0173,0174,0196
 0199,0224,0281,0282,0283,0290
 0300,0304,0308,0310,0340,0345
 0363,0387,0390,0402
 Rhapsody.....0001,0311
 RIHONG.....0627
 RISHENG.....0651
 RIZHI.....0627,0651
 Runco.....0181,0182,0188,0274
 0281,0323,0324,0350
 Ruyi.....0565,0569,0577
 0578,0594,0597
 SAIGE.....0565,0570,0579
 Sampo.....0000,0012,0040,0052
 0124,0196,0281,0282,0283
 Samsung.....0000,0010,0026,0027
 0034,0036,0055,0058,0072,0079
 0121,0124,0133,0153,0196,0211
 0220,0281,0282,0283,0290,0291
 0308,0337,0349,0366,0396,0402
 0403,0410,0562,0565,0570,0575
 0578,0579,0587,0591,0593,0594
 0597,0604,0605,0645,0667,0677
 Samsux.....0124,0283
 Samtron.....0036
 SANJIAN.....0587,0607,0610,0633
 SANKEN.....0769
 SANLING.....0590
 Sansei.....0320
 Sansui.....0038,0167,0321,0368
 Santeca.....0017
 Sanyo.....0000,0081,0107,0118,0128
 0156,0161,0196,0298,0300
 0303,0340,0373,0378,0554
 0561,0562,0568,0569,0587
 0589,0607,0610,0633,0659
 0686,0687,0688,0756,0777
 SANYUAN.....0557,0565,0570,0572
 0577,0578,0579,0594,0597
 Scotch.....0000,0124,0308
 Scott.....0000,0002,0029,0124,0175
 0199,0224,0276,0308,0309
 0310,0314,0337,0354,0402
 Sears.....0000,0022,0027,0036,0071
 0082,0124,0128,0131,0133,0141
 0145,0156,0161,0173,0175,0196
 0201,0206,0285,0288,0290,0298
 0300,0301,0303,0306,0308,0309
 0340,0341,0342,0387
 Selectron.....0252,0254,0255
 Semivox.....0310
 Semp.....0301
 SEYE.....0651
 SHANCHA.....0565,0587
 0607,0610,0633
 SHANGGUANGDIAN.....0712
 0720,0721
 SHANGHAI.....0563,0565,0570
 0571,0576,0577,0578,0579
 0587,0594,0597,0607,0610
 0611,0612,0633,0677
 SHANSHUI.....0562
 SHAOFENG.....0554,0560,0561
 0565,0569,0577
 Sharp.....0000,0035,0048,0069
 0070,0124,0131,0147,0207
 0225,0231,0283,0294,0302
 0304,0319,0337,0351,0391
 0395,0401,0402,0405,0411
 0557,0570,0572,0579
 0689,0690,0691
 SHENCAI.....0561,0570,0579,0587
 0607,0610,0611,0655
 SHENGLI.....0558
 SHENYANG.....0565,0570,0579
 0587,0599,0600
 SHERWOOD.....0570,0579
 Shogun.....0000,0276
 SHUYUAN.....0685,0758
 Signature.....0145,0170,0173
 0222,0273,0387
 Sylvania.....0277,0279,0281,0295,0312
 Simpson.....0098,0312,0313
 SKYWORTH-RGB.....0565,0579,0587
 0599,0600,0614,0624,0625,0626
 0627,0628,0633,0637,0655,0661
 0662,0663,0697,0714,0722,0723
 0724,0730,0734,0735,0748,0749
 0750,0751,0752,0753,0754,0786
 0788,0829,0830,0831,0832,0834
 0835,0836,0837,0838
 Some models.....0338
 SONGBAI.....0570,0579
 SONGDIAN.....0655
 Sonic.....0001
 Sony.....0109,0168,0177,0195,0296
 0331,0364,0559,0595,0603
 0648,0660,0702,0791,0792,0793
 Soundesign.....0000,0098,0124,0175

SETUP CODES FOR TV

.....0199,0224,0308,0309,0310,0312
 Spectravisision.....0239
 Spectricon.....0272
 Squareview.....0140,0306
 SSS.....0000,0199,0224,0310
 Star Sight.....0006
 Starlite.....0224,0310
 SUMO.....0768
 Superme.....0331
 Superscan.....0071,0131,0206
 Supersonic.....0025
 Supra.....0000,0203
 Supremacy.....0015
 Supre-Macy.....0284
 Supreme.....0195
 SVA.....0068
 Sylvania.....0000,0033,0038,0071,0094
 0098,0104,0124,0140,0184
 0186,0201,0237,0288,0313
 0318,0335,0339,0363,0392,0394
 Symphonic.....0002,0071,0094
 0140,0224,0306,0363
 Syntax.....0248
 TAISHAN.....0565,0570,0579,0581,0582
 0583,0584,0585,0592,0596
 Tandy.....0147,0294,0401
 Tatung.....0116,0178,0221
 0272,0289,0341,0381
 TCBO.....0570
 TCL.....0605,0607,0622,0625,0627,0636
 0637,0638,0639,0664,0665,0698
 0710,0753,0763,0770,0797,0798
 0799,0800,0801,0802,0803
 Tear.....0000,0065
 Technics.....0005,0274,0285
 0286,0315,0330
 Technika.....0273,0276,0283
 0288,0290,0291,0293
 0298,0309,0310,0312,0342
 Technol Ace.....0309
 Techwood.....0000,0005,0124,0272,0290
 Teknika.....0000,0015,0026,0036
 0098,0103,0124,0133,0145
 0160,0170,0173,0175,0196
 0199,0224,0337,0387,0402
 Telecaption.....0083
 Telefunken.....0290
 Telerent.....0145,0170,0173,0387
 Tera.....0370
 Tevion.....0116
 TIANE.....0557,0565,0572
 TIANGENGBAN.....0655
 TIANKEBAN.....0655
 TMK.....0000,0124,0290,0307,0308
 TONGGUANG.....0587,0607,0610,0633
 TOS.....0579,0587,0607,0610
 0631,0633,0655,0657
 Toshiba.....0022,0024,0035,0036
 0083,0114,0121,0128,0133,0137
 0157,0160,0166,0184,0188,0196
 0291,0300,0301,0340,0341,0342
 TOSHIBA.....0554,0561,0562,0568
 0569,0570,0581,0582,0584
 0587,0607,0610,0633,0643
 0644,0645,0713,0839,0840,0841
 Tersonic.....0311
 Totevision.....0283,0337
 Trical.....0302
 Trutech.....0251
 Universal.....0080,0200,0278,0280
 Vector research.....0281
 Victor.....0151,0287
 Vidikron.....0288
 Vidtech.....0000,0026,0124,0276,0308
 Viewsonic.....0052,0202
 Viking.....0015,0284
 Vizio.....0178,0416,0417,0418
 Wards.....0000,0002,0026,0033,0035
 0080,0098,0104,0124,0134,0145
 0170,0173,0175,0200,0201,0277
 0278,0280,0281,0288,0290,0295
 0296,0301,0304,0308,0309,0313
 0335,0336,0354,0385,0387,0394
 WARUMAIA.....0566,0585,0596
 WEIPAI.....0570,0579
 Westinghouse.....0011,0233,0325,0326
 White Westinghouse.....0061,0094
 0110,0144,0153,0155,0158
 Words.....0273,0276
 XIAHUA.....0565,0570,0578,0579
 0581,0587,0607,0608,0609
 0610,0614,0627,0633,0634
 0649,0652,0763,0765,0771
 0772,0783,0784,0785,0816,0849
 XIANGYANG.....0587,0607,0610,0633
 XIANGYU.....0570,0579,0586
 XIHU.....0565,0577,0578,0587,0592
 0594,0597,0607,0633,0652
 0685,0758,0773,0774,0775,0776
 XINGFU.....0570,0579
 XINGHAI.....0570,0579,0587
 0607,0610,0633

SETUP CODES FOR TV

XINGMENBAN.....0658
 XINRISONG.....0563,0611,0612,0655
 XINSIDA.....0677
 XR-1000.....0363
 XUELIAN.....0563,0577,0578,0594
 0597,0611,0612
 YAJIA.....0587,0607,0610,0633
 Yamaha.....0000,0026,0124
 0160,0276,0281
 YINGGE.....0570,0577,0578
 0579,0594,0597
 YONGBAO.....0563,0611,0612
 YONGGU.....0570,0577,0578
 0579,0594,0597
 YOULANASI.....0565,0577,0578
 0594,0597
 YOUSIDA.....0563,0570,0579
 0611,0612
 YUHANG.....0570,0579
 Zenith.....0000,0006,0013,0038,0045
 0069,0070,0094,0095,0101
 0103,0105,0110,0119,0120
 0121,0124,0127,0129,0150
 0167,0170,0179,0181,0182
 0183,0216,0222,0234,0273
 0274,0293,0298,0355,0363,0387
 ZHUHAI.....0570,0579,0596
 Zonda.....0272
 Other.....0598,0611,0633,0781

SETUP CODES FOR HDTV SetTop Boxes

Pioneer Sh-D505.....0258
 Zenith Hdsat420.....0259
 Zenith Hdsat520.....0259
 Zenith DTV1080.....0259
 Proscan Pshd105.....0260
 Rca Pshd105.....0260
 Rca Dtc-100.....0260
 Rca Dtc-210.....0260
 Hughes Htl-hd.....0261
 LG LSS-3200A.....0261
 LG HTL-HD.....0261
 Hughes Hird-e8.....0261
 Toshiba DST3000.....0261
 Toshiba DST3100.....0261
 Toshiba DW65X91.....0261
 Motorola hdt100.....0262
 Rca Hd65w20.....0263
 Samsung sir-ts160.....0264
 Samsung sir-ts360.....0264
 Go Video Hdt100.....0265
 Sylvania6900dtd.....0266
 Hughes Htl-hd.....0267
 LG LSS-3202A.....0267
 LG HTL-HD.....0267
 Hughes Hird-e10.....0267
 Toshiba DST3001.....0267
 Toshiba DST3101.....0267
 Toshiba DW65X92.....0267
 Hitachi 61hdX98b.....0268
 Hughes Htl-hd.....0268
 LG LSS-3201A.....0268
 LG HTL-HD.....0268
 Hughes Hird-e9.....0268
 Hughes Hird-e11.....0268
 Mitsubishi Srd400.....0268
 Mitsubishi Srd500.....0268
 Philips Dshd800r.....0268
 Samsung sir-t165.....0269
 Samsung sir-t351.....0269
 Sony Sathd100.....0270
 Sony Sathd200.....0270
 Sony Sathd300.....0270

SETUP CODES FOR VCR

Accele.....1009
 Admiral.....1029,1155
 Adventra.....1101,1195
 Aiko.....1112,1180
 Aiwa.....1017,1043,1076,1101,1145,1182
1195,1203,1204,1223,1224,1225
 Akai.....1002,1043,1050,1058,1072
1088,1100,1125,1149,1157,1158
1166,1205,1226,1227,1228
 Alba.....1229
 Allegro.....1045,1080,1122
 American High.....1114,1143
 Amstrad.....1206,1229
 Apex.....1086
 Asha.....1009,1178
 AT&T.....1131
 Audio Dynamics.....1000,1039,1053
 Audiovox.....1017,1145
 Baird.....1230,1231
 Beaumark.....1009,1178
 Bell&Howell.....1060,1165
 Blaupunkt.....1232,1233
 Broksonic.....1012,1031,1044,1046
1057,1078,1090,1095,1137
1169,1171,1174,1181,1185,1207
 Bush.....1226
 Calix.....1017,1145
 Candle.....1000,1001,1009
1017,1089,1111
 Cannon.....1015,1081,1114,1143
 Capehart.....1080,1139
 Carver.....1048,1164
 CCE.....1037,1112,1163,1180
 CGM.....1225,1228,1234,1236
 Cinerall.....1180
 Cinevision.....1017
 Citizen.....1000,1001,1009,1017
1089,1111,1112,1145,1180
 Clatronic.....1229
 Colortyme.....1000
 Coll.....1037,1163
 Craig.....1009,1017,1037,1059
1145,1154,1163,1178,1179
 Curtis Mathes.....1000,1007,1009,1015
1043,1048,1066,1074
1114,1143,1149,1170
 Cybernex.....1009
 Daewoo.....1001,1007,1077,1089,1090
1101,1109,1111,1112,1139
1152,1180,1187,1237,1238
 Dayton.....1139
 DBX.....1000,1039,1053
 Denon.....1150
 Diamond Vision.....1042
 Dimensia.....1015
 Durabraned.....1017
 Dynatech.....1043,1101,1195
 Electrohome.....1002,1017,1145
 Electrophonic.....1017,1145
 Emerex.....1140
 Emerson.....1002,1009,1017,1018,1022
1031,1032,1041,1043,1044,1046
1060,1071,1074,1075,1076,1078
1089,1090,1092,1093,1095,1096
1100,1101,1103,1105,1112,1113
1114,1121,1123,1137,1144,1145
1151,1157,1158,1162,1169,1171
1173,1174,1176,1180,1181,1185
1187,1195,1207
 Ferguson.....1239,1240,1241
 Fisher.....1000,1003,1004,1047
1048,1059,1060,1124,1154
1156,1160,1165,1229
1072,1114,1141,1143
 Funai.....1041,1043,1071
1101,1195,1206,1242
 Garrard.....1101,1195,1206
 GE.....1009,1015,1023,1061,1104,1114
1118,1143,1155,1172,1178
 Go Video.....1183,1186,1208,1209
 Goldstar.....1000,1017,1036,1043
1065,1080,1145,1146
 GoldStar.....1234,1243
 Goodmans.....1237,1244
 GO-Video.....1009,1026,1028,1040
1054,1067,1109
 Gradiente.....1101,1138,1195
 Grundig.....1232,1235,1245
 Harley Davidson.....1101,1195
 Harman Kardon.....1000,1002
1146,1164
 Harwood.....1037,1162,1163
 Headquarter.....1153,1060
 HI-Q.....1059,1154
 Hitachi.....1043,1051,1082,1117
1125,1149,1150,1166
1195,1246,1247,1248
 Ieteq.....1017
 Infinity.....1062
 Insignia.....1017
 Instant replay.....1043,1114

SETUP CODES FOR VCR

ITT.....1230
 JC Penney.....1000,1009,1015,1017
1039,1053,1060,1082
1114,1117,1125,1128
 JCL.....1114
 Jensen.....1082,1125,1149
 JVC.....1000,1039,1045,1053,1060
1070,1099,1125,1138,1149
1161,1233,1249,1250,1251
 KEC.....1145,1180
 Kendo.....1243
 Kenwood.....1000,1039,1053,1060
1125,1146,1149,1153,1161
 KLH.....1037,1163
 Kodak.....1017,1114,1143,1145
 LG.....1043,1056,1065,1080,1234,1243
 Liteon.....1135
 Lloyd.....1043,1101
 Lloyd's.....1173,1195
 Loewe.....1243,1244,1252
 Logik.....1037,1163
 Luxor.....1253
 LXI.....1017,1043,1145
 Magin.....1178
 Magnasonic.....1180,1188
 Magnavox.....1013,1015,1016,1029
1033,1041,1043,1048
1062,1080,1087,1114
1143,1147,1164,1168,1195
 Magnin.....1009
 Marantz.....1000,1039,1048,1053,1060
1078,1081,1114,1143,1146,1164
 Marta.....1017,1145
 Mastui.....1234,1254
 Matsushita.....1114,1143,1170,1184
 Medion.....1042
 MEI.....1114,1143
 Memorex.....1004,1009,1017,1029
1043,1048,1050,1059,1060
1080,1095,1101,1114,1143
1145,1147,1153,1154,1155,1165
1178,1182,1189,1192,1193,1195
 MGA.....1002,1093,1151
1157,1158,1178
 MGN Technology.....1009,1178
 Midland.....1061
 Minolta.....1082,1117,1150,1166
 Mitsubishi.....1002,1019,1039,1053
1063,1082,1093,1151,1155,1157
1158,1161,1210,1211,1255,1256
 Montgomery Ward.....1029,1094
 Motorola.....1029,1114
 MTC.....1009,1043,1101,1178,1195
 Mtorola.....1143,1155
 Multitech.....1009,1037,1043,1061
1101,1163,1195
 NAP.....1141,1142,1143,1145
1147,1150,1160,1166
 NEC.....1000,1039,1053,1060,1074
1078,1103,1115,1125,1146
1148,1149,1161,1165
 Nexxtech.....1049,1085,1086
 Nikko.....1017,1145
 Nikon.....1142
 Noblex.....1009,1178
 Nokia.....1230,1253
 Nokia Oceanic.....1253
 Nordmende.....1240,1241
 Ohilips.....1008,1024,1033,1041,1048
1062,1068,1107,1114,1132
 Okano.....1227,1254,1257
 Olympus.....1114,1143
 Optimus.....1009,1011,1017,1029
1073,1106,1108,1130,1145
1155,1165,1170,1183,1184
1188,1190,1191,1192,1193
 Optonica.....1009,1094,1159
 Orion.....1031,1095,1137
1171,1181,1185,1258
 Panasonic.....1011,1015,1055,1108
1114,1130,1131,1143,1170
1177,1184,1192,1259,1260
 Penney.....1143,1145,1146
1148,1150,1156,1178
 Pentax.....1000,1082,1117,1150,1166
 Philco.....1015,1016,1048
1114,1143,1174
 Philips.....1159,1164,1168,1232
1244,1261,1262,1263
 Phonola.....1235,1244,1263
 Phoolips-Magnavox.....1029,1048,1062
 Pilot.....1017,1145
 Pioneer.....1020,1039,1053
1082,1128,1134,1161
 Polaroid.....1086
 Portland.....1001,1111,1139
 Profitronic.....1178
 Proscan.....1015,1064,1172
 Protec.....1037,1163
 Pulsar.....1080,1147
 Quarter.....1060,1153
 Quartz.....1060,1153

SETUP CODES FOR VCR

Quasar.....1011,1015,1108,1114
1130,1143,1170,1184,1192
 Radio Shack.....1002,1003,1009,1015
1017,1029,1043,1050,1059
1060,1073,1094,1101,1102
1114,1118,1130,1189,1195
 Radix.....1017
 Randex.....1017,1145
 RCA.....1005,1009,1015,1017,1021,1023
1034,1058,1061,1064,1079,1082
1104,1114,1116,1117,1118,1126,1143
1150,1155,1166,1167,1172,1178
 Realistic.....1002,1003,1009,1015
1017,1029,1043,1050,1059
1060,1094,1101,1106,1114
1130,1143,1145,1153,1154
1155,1159,1160,1165,1195
 Replaytv.....1131
 Ricoh.....1129
 Ricon.....1142
 Ridix.....1145
 RIO.....1017,1027
 Roadstar.....1225
 Runco.....1080,1147
 SABA.....1240,1241,1264,1265
 Salora.....1253
 Samsung.....1009,1028,1050,1066,1082
1088,1089,1120,1133,1152,1178
1266,1267,1268,1269,1270
 Sanky.....1029,1080,1147,1155
 Sansui.....1012,1031,1039,1053,1057
1095,1125,1149,1161,1179,1185,1195
 Sanyo.....1004,1009,1047,1059,1060
1153,1154,1165,1178,1230,1271
 Schneider.....1232,1244,1272
 Scott.....1044,1046,1089,1090
1093,1105,1123,1151
1152,1169,1171,1175,1176
 Sears.....1003,1012,1017,1041,1048
1059,1060,1082,1114,1117,1124
1128,1130,1143,1145,1150,1153
1154,1156,1160,1165,1166,1195
 SEG.....1229
 Seleco.....1225,1226
 Semp.....1152
 Sharp.....1002,1029,1032,1043,1094
1097,1106,1111,1155,1159,1253
 Shintom.....1037,1052,1072
1082,1129,1163
 Shogun.....1009,1178
 Siemens.....1230,1272
 Signature.....1043,1143
 Singer.....1037,1114,1163
 Some models.....1196,1197,1198,1199
1200,1201,1202
 Sonic Blue.....1131
 Sony.....1006,1010,1025,1038,1072
1083,1084,1098,1119,1127,1129
1140,1142,1143,1195,1212,1213
1214,1215,1216,1217,1218,1219
1220,1221,1222
 STS.....1082,1114,1117,1150
 Superscan.....1041
 Sylvania.....1015,1030,1041,1043
1048,1071,1093,1101,1114
1143,1151,1164,1168,1195
 Symphonic.....1030,1041,1043
1101,1188,1195,1206
 Taashiko.....1017
 Tandberg.....1237
 Tandy.....1043,1060
 Tatung.....1125,1149
 Teac.....1043,1101,1125,1149,1195
 Technics.....1114,1143,1147,1170,1172
 Technika.....1143,1145,1195
 Techwood.....1136
 Teknika.....1017,1022,1043,1101,1114
 Telegunken.....1265,1273
 Thomas.....1195
 Thomson.....1238,1240
 Thorn.....1230,1243
 TiVo.....1107,1119
 TMK.....1009,1074,1103,1144,1173,1178
 Toshiba.....1003,1014,1048,1066
1069,1082,1089,1091,1093
1102,1105,1151,1152,1160
1175,1176,1274,1275
 Totevision.....1009,1017,1145,1178
 Unitech.....1009,1178
 Universum.....1243,1244,1258,1273
 Vector.....1152
 Vector Research.....1000,1039,1053
1089,1146,1148
 Vediosonic.....1178
 Victor.....1039,1053
 Video Concepts.....1000,1002,1039,1053
1089,1148,1152,1157,1158
 Videosonic.....1009
 W.W.House.....1243
 Wards.....1002,1009,1015,1017,1029
1035,1037,1043,1059,1082,1089
1094,1101,1105,1114,1117,1143

SETUP CODES FOR VCR

.....1150,1152,1154,1155,1159,1163
1164,1176,1178,1195,1263,1276
 White Westinghouse.....1043,1077
1180
 XR-1000.....1037,1101,1114,1143
 XR-1001.....1163
 XR-1002.....1195
 Yamaha.....1000,1039,1053
1125,1146,1149
 Zenith.....1017,1029,1032,1039,1043
1045,1051,1053,1062,1065
1066,1067,1072,1077,1080
1095,1110,1112,1122,1129
1141,1142,1147,1185,1195

SETUP CODES FOR SAT

ADB.....	2325
Aifa.....	2247
Aiko.....	2241
Alfa gold.....	2234
ALL VISION.....	2354,2355
Alphastar.....	2141,2185
Amplica.....	2013
Amstrad.....	2267,2288,2289,2310,2322
Astro Industries.....	2265
Bell Expressvu.....	2010,2020,2040,2050
Best.....	2205
BSR.....	2265
CANAL+.....	2271
Capetronic.....	2265
Channel Master.....	2033,2045,2056
.....	2109,2125
Chaparral.....	2066,2076,2112,2123
.....	2125,2126,2159,2175
Cheyenne.....	2076
Citoh.....	2186
DGTEC.....	2360,2361,2362
Digital satellite TV.....	2236,2237
.....	2238,2239
Directv.....	2008,2023,2024,2026,2028
.....	2036,2041,2051,2061,2064
.....	2073,2082,2084,2092,2093
.....	2095,2101,2102,2105
Dish Network.....	2010,2020,2040,2046
.....	2050,2057,2069,2091,2260
Dishhpro.....	2010,2046,2057,2069
Drake.....	2002,2034,2086,2109
.....	2113,2128,2163,2167,2169
.....	2176,2179,2182,2226,2227
Drake satellite.....	2196,2197,2198
Dreambox.....	2072
DX Anenna.....	2044,2088
Dx Antenn.....	2110
DX Communications.....	2177
Echosphere.....	2050
Echostar.....	2010,2020,2040,2046
.....	2050,2057,2069,2091,2118
.....	2120,2129,2142,2160,2172
.....	2206,2210,2213,2214,2215
.....	2216,2217,2220,2221
.....	2222
Equus.....	2171
Eurostar.....	2223
Expressvu.....	2010,2020,2040
.....	2050,2142
Fortec star.....	2011,2021,2031,2043
.....	2054,2055,2232,2233
Fujitsu.....	2079,2089,2156
Galaxis.....	2275,2277,2279,2291
.....	2295,2296,2317,2335
GE.....	2028,2039,2063,2075
.....	2085,2092,2095,2105
Gemini.....	2015
General Instrument.....	2131,2152,2153
.....	2154,2178,2187,2188
General Instrument(GI).....	2001,2009
.....	2012,2019,2022,2038,2052
.....	2074,2094,2099,2104
Globecast.....	2000
GO Video.....	2071
Gold box.....	2301
Grundig.....	2291,2292,2300,2328
HIRSCHMANN.....	2326
Hitachi.....	2036,2051,2061,2073
.....	2084,2093,2144,2254
Homecable.....	2127
HTS.....	2142,2173
Hughes Network.....	2036,2051,2061
.....	2065,2068,2082,2084,2093
Hughes Network Sys.....	2140
Hughes satellite.....	2254,2261,2262
HUMAX.....	2356
HYTEK.....	2265
Hyundai.....	2308
Instrument.....	2135
Intersat.....	2174
IQ.....	2124
IQ Prism.....	2124
Janeil.....	2119,2156
Jerrold.....	2131,2135,2303
JVC.....	2050,2091,2142,2260
Kathrein.....	2287,2307,2313
Kenwood.....	2047,2157
Legend.....	2129,2160
Luxor.....	2058
Macom.....	2070,2109,2150,2154,2187
Macom satellite.....	2195
Magnavox.....	2023,2062,2091
.....	2138,2139,2263
Matsui.....	2290
MAXTRONICS.....	2358
Memorex.....	2129,2139
Micro formula.....	2228
MICRONAX.....	2357
Mina.....	2224
Mitsubishi.....	2036,2051,2061
.....	2073,2084,2093,2225
Motorola.....	2049,2052,2146

SETUP CODES FOR SAT

NEWLING.....	2359
Nikko.....	2286
Nokia.....	2264,2282,2302
.....	2320,2338,2339
Norstat.....	2080
NTVplus.....	2305
Orb.....	2165
Orbit.....	2219
Pace.....	2006,2016,2029,2246,2252
.....	2280,2281,2285,2323,2324
Panaset.....	2244
Panasonic.....	2024,2025,2027
.....	2119,2137,2149,2330
Pansat.....	2003,2106,2162,2181,2208
Pbi.....	2228
Philips.....	2023,2036,2051,2061
.....	2062,2073,2082,2084,2091
.....	2093,2122,2138,2139,2231
.....	2251,2263,2318,2340
Philips-Magnavox.....	2023,2062,2091
Pioneer.....	2005
President.....	2114
Primestar.....	2038,2074
.....	2131,2135,2207
Prosat.....	2096,2202
Proscan.....	2028,2039,2075,2085
.....	2095,2105,2134
Quick draw.....	2177
Radio Shack.....	2134,2152,2153
Radix.....	2276,2289,2294,2316
RCA.....	2028,2039,2042,2053,2063
.....	2075,2085,2092,2095,2105,2117
.....	2133,2134,2145,2200,2240,2251
RCA DSS.....	2255,2256,2257
RC-AK.....	2209
Realistic.....	2032,2100,2115
Rural cable.....	2152
SABA.....	2273,2274,2293,2297
.....	2298,2311,2333,2348
Samsung.....	2004,2026,2060,2098
.....	2101,2185,2212,2349,2350
Scientific Atlanta.....	2203,2240
Sharp.....	2005
Sierra II III.....	2076
Signal super LT 930.....	2211
Skardin.....	2248,2249,2250
Sky Master.....	2268,2283,2284
.....	2309,2329,2347
SKY Network.....	2006,2016,2029
Some models.....	2199,2229
Sony.....	2014,2041,2064,2090
.....	2102,2136,2266,2306,2321
Space TV.....	2230
Star Sight.....	2103
Star Trak.....	2048,2121,2155
.....	2183,2184,2189
Starchoice.....	2019,2038,2074
STRONG.....	2351,2352,2353
STS.....	2044,2067,2077
.....	2110,2124
STS satellite.....	2194
Sun Moon Star.....	2245
Super Guide.....	2059
Superguige.....	2158,2166
Sylvania.....	2078
Tadiran.....	2242
Technisat.....	2304,2315,2341
.....	2342,2220
Tedex.....	2218
Thomson.....	2251,2297,2334,2336
.....	2337,2345,2346
Toshiba.....	2007,2017,2036,2051
.....	2061,2073,2083,2084,2087
.....	2093,2116,2195,2258,2259
Tosonic.....	2143
TPS.....	2319
UEC.....	2253
Ultimate TV.....	2064,2105
Uniden.....	2081,2097,2103,2111,2114
.....	2115,2127,2132,2138,2139
.....	2151,2158,2160,2168,2170
United.....	2035
United satellite.....	2191,2193
Veecom.....	2228
Video Cipher II.....	2002
Video pall.....	2156
Viewstar.....	2180
Vortec.....	2235
Watson.....	2289
WEB TV.....	2014,2091
Winner.....	2201,2204
Zehnder.....	2272,2278,2312,2314
.....	2327,2331,2332,2343,2344
Zenith.....	2002,2008,2015,2018,2029
.....	2030,2034,2037,2086,2113
.....	2128,2146,2156,2195
Zenith satellite.....	2190,2196,2197
.....	2198

SETUP CODES FOR CBL

ABC.....	5000,5007,5013,5045,5060
.....	5066,5068,5069,5070,5071
.....	5073,5074,5076,5115,5116,5164
Adelohia.....	5050,5057
Aeon.....	5148
Aifa.....	5158,5169,5171,5173
Aikotec.....	5181,5182
Allegro.....	5005,5011,5090,5098
Americast.....	5024
Antena.....	5180
Antronix.....	5025,5031,5080,5092
APO.....	5141
Archer.....	5025,5031,5038,5046
.....	5080,5090,5092,5108
Asia.....	5165
Asiagiant-777.....	5151
AT&T.....	5050
Atlanta.....	5070,5076,5102,5168,5172
Belcor.....	5086
Bell South.....	5024
Bell&Howell.....	5074
Best.....	5118
Cable star.....	5086
Cabletenna.....	5025,5080
Cableview.....	5025,5080
Cablevision.....	5017
Century.....	5046,5090,5159
Citizen.....	5046,5090,5098
Cogeco.....	5050
Color Voice.....	5053,5061,5082,5084
Comtronics.....	5001,5008,5085
Contec.....	5014,5077
Cs-100.....	5138
Digi.....	5107
Digital Music Express.....	5004
DVB-1.....	5185
DVB-2.....	5186
DVB-3.....	5187
DVB-LK05.....	5188
DVB-LK06.....	5189
DVB-LK07.....	5190
DVB-LK08.....	5200
DVB-LK09.....	5201
DVB-LK10.....	5202
DVB-LK11.....	5203
DVB-LK12.....	5204
DVB-RC03.....	5205
Eastern.....	5020,5067,5128,5129
.....	5130,5131,5147,5152
Emerson.....	5108
Everquest.....	5001,5075,5085
Focus.....	5099
G.I.....	5071,5096,5101,5111
.....	5112,5113,5175,5176,5177,5178
Garrard.....	5046,5090
GC Electronics.....	5031,5086,5092
GE.....	5036
Gemini.....	5019,5032,5075
General Instrument (GI).....	5000,5004
.....	5007,5030,5035,5043
.....	5045,5050,5052,5060,5064
GMI.....	5119,5139,5149
Golden.....	5166
Goldstar.....	5085,5089
Goodmind.....	5108
Hamlin.....	5020,5039,5045,5047
.....	5054,5078,5095,5110
.....	5256,5257,5258,5259,5260
Hitachi.....	5060,5071
Hytex.....	5069
IEEC.....	5127,5136,5137,5157
Illico.....	5017
IMC.....	5174
Jasco.....	5046,5075,5090,5098
JEBSEE.....	5143
Jerrold.....	5000,5007,5018,5030,5035
.....	5042,5045,5060,5068,5071,5072
.....	5074,5075,5096,5101,5111,5112
.....	5113,5117,5155,5166,5163,5179
Jerrold/G.I.....	5235,5236,5237,5238
.....	5239,5240,5241,5242
.....	5252,5265,5266
KOKA.....	5123,5126
LEON.....	5119,5139
Linsay.....	5184
Magnasonic.....	5083
Magnavox.....	5009,5074,5083
Mechanics.....	5099
Memorex.....	5015,5109
Moievie Time.....	5021
Motorola.....	5000,5007,5018,5030,5035
.....	5043,5050,5052,5060,5065
Movie Time.....	5087,5183
NAP.....	5069
NET.....	5264
Novaplex.....	5106
NSC.....	5021,5087,5183
OAK.....	5014,5033,5069,5077
OAK Sigma 500.....	5121
Optimus.....	5079
Pace.....	5059

SETUP CODES FOR CBL

Panasonic.....	5253,5254,5029
.....	5037,5079,5088,5109
Panther.....	5107,5162
Paragon.....	5015,5027,5109
.....	5161,5167
Philips.....	5009,5032,5040,5046
.....	5048,5055,5082,5083,5084,5090
Philips-Magnavox.....	5006,5010
Pioneer.....	5002,5017,5026,5062
.....	5081,5089,5105
Popular.....	5099
Proscan.....	5079
Pulsar.....	5015,5109
Qak.....	5261,5262,5263
Radio Shack.....	5045,5006,5010
.....	5011,5075,5098,5108
RCA.....	5023,5037,5046,5079
Realistic.....	5031,5092
Recoton.....	5099
Regal.....	5054,5078,5095
.....	5256,5257,5258
Regency.....	5020,5067
Rembrandt.....	5060,5071
Rogers.....	5017
Runco.....	5015,5109
Samsung.....	5001,5002,5085,5089
Scientific atlanta.....	5243,5244,5245
Scientific Atlanta.....	5012,5013,5016
.....	5017,5022,5028,5057,5114,5170
Seam.....	5103
Sg.....	5132
Shaw.....	5050
Signal.....	5001,5075,5085
Signature.....	5060,5071
Skygiant.....	5133,5134,5135
SL Marx.....	5001,5085
Sprucer.....	5037,5079
Standard.....	5034
Starcom.....	5030,5045,5068,5075
Stargate.....	5001,5085,5108
Starquest.....	5075
Starsight.....	5023
Sylvania.....	5066
TADA.....	5120,5154
Taicom.....	5123,5140
Tandy.....	5041,5094
Tay Shoen.....	5142,5145
Television.....	5001,5085
Texscan.....	5034,5066
TFC.....	5097
Timeless.....	5100
TimeWarner.....	5017
Tocom.....	5000,5031,5042,5046,5049
.....	5065,5072,5073,5250,5251,5265
Toshiba.....	5015,5109
Trans.....	5144,5146,5150,5153,5160
Tusa.....	5075
Tv86.....	5021,5087
Unika.....	5025,5031,5046
.....	5080,5090,5092
United artists.....	5069
United Cable.....	5045
Universal.....	5005,5025,5031,5038
.....	5046,5056,5080,5086,5090
.....	5091,5092
Videotech.....	5044
Videotron.....	5017
Videoway.....	5003,5093
Viewstar.....	5008,5009,5021,5041
.....	5083,5087,5094
Winer.....	5122
WISO.....	5124,5125
Zenith.....	5011,5015,5046,5051,5057
.....	5058,5063,5070,5075,5092
.....	5104,5109
Zenith Network.....	5024
Zentek.....	5099
Foshan.....	5226
Guangxi.....	5232
Guangzhou.....	5217
Haerbin.....	5224
Hangzhou.....	5228
Hebeineimenggu.....	5229
Linyi.....	5220
Nanhai.....	5225
Shandong zibo.....	5221
.....	5222,5223,5227
Shanghai.....	5230
Shenzhen.....	5218
Sichuan.....	5233
Tianjin.....	5219
Hongkong.....	5216
Hongkong NOW.....	5215
Hongkong Kowpin.....	5231

SETUP CODES FOR DVD

Advent.....3151
 Afreey.....3057
 Aierprince.....3458,3459
 AIKO.....3571
 Aiwa.....3003,3275,3341,3542
 Akai.....3019,3023,3279,3398
 AKISHI.....3573
 AKUSTIC.....3571,3650
 Ames.....3127
 Amoi.....3503,3504,3506,3527
 AMW.....3064,3082
 Anaba.....3137
 Aone.....3691
 Apex.....3004,3024,3037,3042,3061
3084,3094,3096,3102,3106
3110,3123,3124,3140,3167
3274,3276,3325,3574
 Aspire.....3169
 A-trend.....3158
 Audelong.....3708
 AUDIA.....3690
 Audiovox.....3133,3575
 AVLIGHT.....3535
 Axion.....3133
 B&K.....3088
 BBK.....3410,3413,3419,3420
3425,3440,3470,3483,3486
3491,3537,3679,3704
 Blaupunkt.....3110
 Bodysonic.....3057
 Bose.....3147,3358
 Boss.....3132
 BROCSONC.....3378
 Broksonic.....3001,3069,3152
 BULANTE.....3456,3457
 CAIXING.....3480,3487
 CAT.....3362
 Centrios.....3095,3133,3136,3175,3176
3178,3179,3184,3187,3189,3193
3197,3201
 Changhong.....3124,3528,3529
3530
 CHESTRON.....3361
 Cinevision.....3020
 Citech.....3206
 Citizen.....3206
 Classic.....3124,3127,3196,3576
3662,3663
 Coby.....3008,3024,3047,3048
3050,3067,3083,3577
 Concept.....3110
 Criterion.....3078
 Curtis International.....3083,3100
 Cyberhome.....3017,3101,3158
3356,3578
 Cytron.....3043,3072
 D.L.K.....3363
 Daewoo.....3006,3034,3111
3128,3138,3278,3299
3304,3324,3478,3479,3579
3580,3581,3582,3583,3584
3585,3586,3659,3671,3717
 Denon.....3107,3126,3272,3302
3332,3343,3587
 Denzel.....3076
 Desay.....3086,3315
 DESAY.....3418,3466,3509,3692
 Diamond vision.....3045,3085,3148
 Digitrex.....3024
 Digix.....3012
 DIGIXMEDIA.....3588
 Dihe.....3462,3469,3499,3709
 DingTian.....3519
 Disney.....3079
 Dual.....3000,3043,3051,3060,3076
 Durabrand.....3020,3043,3095
 DVD.....3408,3411,3653
 DVD 2000.....3141
 ELEKTRA.....3584
 Elta.....3005,3023,3277,3282,3364
 Emerson.....3020,3044,3079,3097
3118,3283
 ESA.....3051
 F & D.....3677
 Farenheit.....3120
 Fisher.....3040,3284,3625,3654
 Funai.....3044,3079,3383
 FUSSION.....3590
 GE.....3091,3110,3298,3623
 GeWang.....3200,3205
 GIEC.....3481,3684,3686
3687,3688,3702,3714
 GO VIDE.....03591,03592
 Goldstar.....3020
 GoldStar.....3381
 GO-Video.....3007,3025,3041,3056
3066,3127,3131,3138
3149,3269,3285
 GPX.....3013,3049,3593
 Gradiente.....3021
 Greenhill.....3110
 Grundig.....3352

SETUP CODES FOR DVD

GVG.....3681,3682
 Haaz.....3129,3146
 Haier.....3031,3508,3538
 Haoji.....3460
 HARMAN.....3668
 Harman Kardon.....3058
3270,3288,3344
 Himage.....3517
 HISENSE.....3526,3535,3703
 Hitachi.....3002,3056,3076
3092,3268,3296
3334,3594
 Hiteker.....3024
 HITER.....3481
 HUABAO.....3421,3453,3454
3455,3694
 Humax.....3150
 HYUNDAI.....3477
 IDALL.....3520
 ILO.....3103,3194
 Infinity.....3057
 Initial.....3110,3194
 Insignia.....3020,3028,3044,3110,3133
 Integra.....3143,3307
 JAMO.....3359
 JBL.....3058
 Jingewangpai.....3423
 JingWei.....3403
 Jugao.....3710
 JVC.....3015,3039,3075,3114,3168
3202,3267,3293,3333,3372
3437,3543,3595,3667
 Jwin.....3027,3106,3165
 Kawasaki.....3032,3095
 Kenwood.....3093,3107,3265,3272
3316,3355,3467,3596
3597,3598
 Ketai.....3422
 Kiss.....3076
 KLH.....3037,3046,3110,3336
 Konka.....3028,3108,3125
3142,3160,3297,3301
3306,3311,3531,3599
 Koss.....3021,3072
 KXD.....3008
 LAFAYETTE.....3617
 Lasonic.....3085,3129
3600,3601
 Lenoxx.....3023,3134
 LG.....3020,3063,3156,3381,3400
 LINITRON.....3633
 Linn.....3163
 Liquidvideo.....3133
 Liteon.....3080,3103
3149,3157,3190
 LONGZHIPAI.....3676
 Magnavox.....3010,3029,3044,3073
3074,3104,3105,3122
3139,3261,3291,3292,3317
 MAJESTIC.....3602,3657
 Malata.....3394,3401,3415
3416,3465,3538,3539
3543,3689,3705
 Marantz.....3020,3073
3074,3139,3161
3291,3292,3603
3604,3605,3619
 Matsui.....3351,3389
 Maxent.....3168
 Medion.....3043,3045,3103,3132,3166
 MEGA TANSS.....3606
 Memorex.....3043,3192,3319
 Meridian.....3073
 Microsoft.....3091
 Microsoft X-BOX.....3318,3326
 Mintek.....3110,3320
 Mitsubishi.....3141,3262,3607
 MITSUI.....3608,3609,3661
 MITZU.....3571,3643
 MTB.....3610
 Mustek.....3127,3303,3357
 Myron & Davis.....3155
 NAD.....3020,3162,3313
 Nakamichi.....3144,3308,3353,3612
 NAPA.....3613,3669
 Nesa.....3110,3155
 Nexxtech.....3012,3014,3033,3051
3095,3102,3154,3175
3176,3178,3181,3183
3200,3205
 NINTAUS.....3395,3427,3463
3471,3472,3473,3474
3482,3485,3521,3522
3683,3712,3714
 Norcent.....3030,3048,3065
3083,3157,3614
 OKON.....3464
 Onkyo.....3035,3143,3261
3307,3342,3435,3615,3616
 Optimus.....3002,3263,3268
 Orion.....3001,3021,3193,3280
 Pacific.....3043

SETUP CODES FOR DVD

PAI GAO.....3719
 Panasonic.....3016,3038
3054,3059,3107,3119
3121,3272,3300,3328
3332,3369,3370,3371
3377,3380,3390,3406
3596,3665,3666
 PANDA.....3430,3443,3444
3445,3494,3497
 PHILCO.....3617,3618,3655,3660,3664
 Philips.....3026,3044
3073,3074,3079,3104
3105,3122,3139,3161
3261,3273,3291,3292
3312,3338,3384,3391
3404,3535,3544,3545
3546,3619,3656
 PHILIPS KARAOKE.....3620
 Philips-Magnavox.....3073,3074,3105
3122,3161
 Pioneer.....3002,3052,3070
3087,3098,3159,3177
3263,3268,3322,3330
3345,3347,3368,3385
3386,3436,3621
 Piva.....3180
 Polaroid.....3018,3068,3102
 Polk Audio.....3073,3074,3139
 Portland.....3023
 POWER SOUND.....3571
 PRIMAS.....3360
 Proline.....3021
 Proscan.....3091,3113,3310
 Prosonic.....3048,3644
 Pyle.....3115
 QIsheng.....3397,3429,3484,3490
3493,3674,3697,3698
3699,3700,3715,3723
 Radio Shack.....3095,3099,3116,3164
 Radioshach.....3305,3314
 RCA.....3091,3095,3110,3113
3116,3164,3298,3305
3310,3314,3331,3622,3623
 Regent.....3134
 Reoc.....3129
 RIO.....3020
 RJ Technology.....3182
 rosen.....3117
 Rotel.....3039
 ROYAL.....3617,3664
 Saba.....3099
 Sampo.....3057,3287
 Samsung.....3007,3025,3056
3130,3153,3172,3269
3340,3376,3396,3398
3409,3441,3496,3541
3594,3624,3658
 Sansui.....3001,3069,3323,3405
 Sanyo.....3009,3040,3625,3626
 SAST.....3403,3412,3430,3451
3452,3468,3532,3534,3680
 Sears.....3001,3044
 SEG.....3076,3294
 Selectron.....3185,3188,3191
3195,3199,3203,3207
 Sharp.....3055,3062,3081
3286,3321,3337,3382
3627,3628,3629
 Sherwood.....3022,3281
3711
 Shico.....3393,3402,3500
3110,3298,3348
 Shinsonic.....3110
 SHUMALING.....3428
 SKYWORTH-RGB.....3414,3417
3424,3426,3450,3488,3489,3492
3511,3513,3685,3693,3706,3713
 SMC.....3630
 Sonashi.....3696
 Sonic Blue.....3066
 SONICO.....3651
 Sony.....3036,3053,3071,3072
3089,3090,3264,3327
3349,3350,3365,3366
3367,3375,3432,3434
3569,3570,3652
 SOUND TRACK.....3649
 Soundstorm.....3115,3132
 SOWA.....3547
 Star.....3510
 Sungale.....3171
 Superscan.....3044
 Supersonic.....3013,3617,3631,3664
 Sv2000.....3044
 SVA.....3500
 Sylvania.....3044,3079,3346,3379,3383
 Symphonic.....3044,3079,3097
 TCL.....3392,3407,3431,3446
3447,3512,3707
 Teac.....3002,3095,3268,3354,3632
 Technics.....3107,3272
 Techwood.....3162,3198

SETUP CODES FOR DVD

Terapin.....3170
 Tevion.....3043,3060,3072,3078
3112,3129,3146
 Theta Digital.....3002,3268
 Thomson.....3339,3388
 THOMSON.....3475,3622
 THOSHIBA.....3433,3461,3634
3635
 TIANLI.....3523
 Tivo.....3098,3150
 TOP TEC.....3633
 Toshiba.....3001,3011,3073,3173,3174
3261,3290,3329,3373,3374,3387
 Tredex.....3135
 Trutech.....3204
 TSINGHUA TONGFANG.....3448
3449,3701
 UNIREX.....3636
 United.....3095
 UNITRON.....3633
 VCD2.....3637
 Venturer.....3095
 Victor.....3439,3476,3495
 VIDEO CD.....3645,3646,3647,3648
 Vifa.....3442
 VOX.....3638
 WANBAO.....3688
 Wanyan.....3518
 WEGA TANSS.....3670
 Wharfedale.....3057,3145,3309
 White Westinghouse.....3079
 X-BOX.....3091
 Xenius.....3072
 Xian pai.....3462
 Yamaha.....3074,3105,3107,3109
3122,3266,3272,3332,3670
 Yamakawa.....3076,3077,3186
3295,3640
 YMT.....3695
 YUBISHEN.....3507
 Zenith.....3020,3063,3261,3271
3283,3289,3335,3381
 ZONDA.....3641,3642
 Other.....3399,3408,3411,3498,3501
3502,3505,3514,3515,3524,3525
3533,3536,3540,3549,3550,3551
3552,3553,3554,3555,3556,3557
3558,3559,3560,3561,3562,3563
3564,3565,3566,3567,3568,3637
3653,3672,3673,3716,3721,3722
3724,3538,3548,3589,3611

SETUP CODES FOR CD

ADC.....	4051,4116
Adcom.....	4002,4077,4132,4145
Aiwa.....	4035,4098,4100
	4115,4129,4134
Akai.....	4016,4037,4075,4133
Audio Alchemy.....	4142
Audio Technica.....	4011,4136
BSR.....	4142,4147
Burmester.....	4157
California Audio Labs.....	4025,4118
Capetronic.....	4052
Carrera.....	4142
Carver.....	4019,4020,4031,4041
	4134,4139,4160
Casio.....	4039
Centrios.....	4109
Citizen.....	4027
Crown.....	4128,4128
Curtis Mathes.....	4039,4118
DAK.....	4147
DBX.....	4148
Demon.....	4113
Denon.....	4063,4170
DKK.....	4112
Emerson.....	4077,4101,4132
	4135,4152,4162
Fisher.....	4012,4021,4031,4032
	4045,4125,4139,4153
Garrard.....	4147,4149,4155,4157,4158
GE.....	4114
Genexxa.....	4042,4057,4101
	4119,4135,4152
Goldstar.....	4068,4156
Harman Kardon.....	4064,4079
	4134,4137,4159
Hitachi.....	4042,4119,4132
Inkel.....	4078
JC Penny.....	4039,4065
JVC.....	4089,4110,4123
Kenwood.....	4013,4036,4046,4049
	4053,4102,4117,4120
	4141,4164,4167
Kodak.....	4150
Krell.....	4020,4134
Kyocare.....	4116
Kyocera.....	4051
Linn.....	4134
Luxman.....	4022,4033,4047,4058,4126
LXI.....	4039,4152
Magnavox.....	4020,4073,4083
	4134,4152
Magnavox CD-R.....	4163
Marantz.....	4020,4043,4054
	4094,4118,4134,4140
McIntosh.....	4150
MCS.....	4039,4065,4118,4121
MGA.....	4079
Mission.....	4020,4134
Mitsubishi.....	4079,4090
MTC.....	4157
NAD.....	4082,4108
Nakamichi.....	4000,4087,4103,4131
NEC.....	4065,4121,4145
Nexxtech.....	4009,4048,4060
	4061,4072,4088,4096
Nikko.....	4012,4021,4101,4135,4136
NSM.....	4020,4134
Onkyo.....	4014,4023,4086
	4093,4127,4169
Optimus.....	4005,4031,4034,4038,4041
	4042,4044,4053,4055,4066
	4085,4112,4119,4120,4124
	4130,4138,4139,4142,4143
	4149,4152,4153,4157,4159
	4160,4161
Panasonic.....	4025,4070,4074,4099
	4107,4118,4151,4154,4165
Paramount Pict.....	4171
Parasound.....	4142,4157
Philips.....	4019,4020,4083
	4134,4150,4163
Pioneer.....	4030,4040,4042,4057
	4071,4080,4091,4119
	4146,4152,4161
Proscan.....	4122
Proton.....	4020,4134
QED.....	4134
Quasar.....	4025,4118
Radio Shack.....	4010,4024,4026
	4030,4041,4050,4055,4071
RCA.....	4008,4010,4018,4030,4031
	4071,4077,4104,4106,4111,4114
	4122,4132,4139,4152,4166
Realistic.....	4031,4034,4042,4052
	4054,4055,4077,4101,4132
	4135,4138,4139,4140,4157
Rotel.....	4020,4134,4157
SAE.....	4020,4134
Samsung.....	4084
Sansui.....	4001,4004,4020,4106
	4134,4144,4152

SETUP CODES FOR CD

Sanyo.....	4015,4017,4031
	4045,4095,4124,4139
Scott.....	4077,4101,4132,4135,4152
Sears.....	4039,4053,4054,4152
Sharp.....	4053,4054,4120,4140,4168
Sherwood.....	4024,4044,4054
	4062,4078
Shure.....	4065
Sony.....	4007,4035,4073,4097,4112
STS.....	4051
Sylvania.....	4020
Symphonic.....	4056
Teac.....	4021,4029,4054,4055
	4056,4067,4081
Technics.....	4025,4074,4099,4107
Theta Digital.....	4083
Toshiba.....	4082
Victor.....	4089
Yamaha.....	4003,4013,4028
	4092,4105
Zenith.....	4006,4021,4059
	4069,4076

SETUP CODES FOR AMP

Aiwa.....	6086,6099,6111,6123,6158
Apex.....	6032
Apple ipod.....	6029
Bose.....	6115,6161
Carver.....	6023,6150
Centrios.....	6008,6138
Citizen.....	6041
Criterion.....	6060
Curtis Mathes.....	6151
Delphi.....	6062
Denon.....	6052,6124,6131,6144
Fisher.....	6005,6109
GE.....	6141
Goldstar.....	6037
Harman Kardon.....	6004,6069
Ipod.....	6010
JVC.....	6084,6095,6132,6154
Kenwood.....	6040,6068,6070,6089
	6122,6128,6155,6156
Koss.....	6013
Linn.....	6150
Luxman.....	6145
Magnavox.....	6005,6031,6036
	6038,6150
Marantz.....	6006,6061,6150,6153
Mitsubishi.....	6058
NAD.....	6077,6103,6129
Nakamichi.....	6153
NEC.....	6149,6015
Nexxtech.....	6008,6066,6081,6085
	6094,6112,6118,6138
Norcent.....	6059
Onkyo.....	6021,6108,6120,6126
Optimus.....	6002,6046,6048,6063
	6078,6104,6116,6130,6157
Panasonic.....	6009,6022,6096,6101
	6106,6114,6133,6136,6152
Parasound.....	6148
Philips.....	6005,6006,6017,6023
	6133,6150
Pioneer.....	6045,6054,6056,6075
	6137,6140,6151
Radio Shack.....	6002,6027,6028,6034
	6039,6045,6056,6074
	6075,6090,6130
RCA.....	6020,6025,6028,6030,6035
	6045,6047,6053,6057,6075,6076
	6090,6100,6105,6113,6117,6125
Realistic.....	6121,6157
RIO.....	6012
Saba.....	6011
Samsung.....	6000
Sansui.....	6139,6153
Sanyo.....	6014
Scott.....	6064
Sharp.....	6001,6083,6102
Sherwood.....	6034,6039,6073,6088
Shure.....	6149
Skyfi.....	6015
Sony.....	6007,6019,6024,6042,6050
	6065,6067,6080,6082
	6091,6127,6134,6135,6147
Soundesign.....	6141,6146
TAO.....	6015
Teac.....	6026,6044,6051,6056,6092
Technics.....	6009,6022,6096,6106
	6133,6136,6152,6160
Tevion.....	6060
Venturer.....	6016
Victor.....	6154
Wards.....	6140,6141,6146
XM Radio.....	6015
Yamaha.....	6043,6055,6071,6072,6087
	6097,6107,6110,6119,6142
	6143,6155,6159
Zenith.....	6003,6005,6012,6018,6033
	6037,6049,6078,6079,6093,6098

SETUP CODES FOR AUX

TAPE

Carver.....	8113
Denon.....	8111
Harman/Kardon.....	8113
Magnavox.....	8113
Marantz.....	8113
Philips.....	8113
Sony.....	8115

CASSETTE DECK

Aiwa.....	8096,8097,8133
Akai.....	8104
Carver.....	8133
Denon.....	8089
Fisher.....	8088
Garrard.....	8106,8108
Garman/Kardon.....	8133
JVC.....	8101,8102
Kenwood.....	8086,8087
Magnavox.....	8133
Marantz.....	8084,8133
Mitsubishi.....	8104
Onkyo.....	8092,8093,8103
Optimus.....	8085
Philips.....	8133
Pioneer.....	8085
Sansui.....	8084,8133
Sherwood.....	8107
Sony.....	8094,8100,8105
Teac.....	8106
Technics.....	8099
Victor.....	8102
Wards.....	8085
Yamaha.....	8090,8091

HOME AUTOMATION

GE.....	8110
Lite Touch.....	8109
Radio Shack.....	8110
GE HOMEMINDER.....	8004
HOME AUTOMATION.....	8005
X10(NEC).....	8006

TURNTABLE

Aiwa.....	8114
Carver.....	8114
Magnavox.....	8114
Marantz.....	8114
Philips.....	8114
Sony.....	8115

VIDEO

Archer.....	8116
GC Electronics.....	8116
Jebsee.....	8116
Magnavox DSS.....	8128
Panasonic DVR.....	8142
Philips.....	8128
Philips DVR.....	8141
Philips/Magnavox.....	8128
Philips Web TV.....	8129
Radio Shack.....	8116
Replay DVR.....	8143
Sony DVR.....	8138,8139,8140
Sony Web-TV.....	8118
TeleCaption.....	8117
Web TV.....	8129
Web Video STB-2010.....	8134

AUDIO

Aiwa.....	8119,8123,8125
Fisher.....	8120
Harman/Kardon.....	8127
JBL.....	8127
JVC.....	8122
Nikko.....	8124
Paramount Pict.....	8211
Philips.....	8127,8144
Polytek.....	8145
RCA.....	8121
Schneider.....	8124
Scientific Atlanta.....	8126
Sony.....	8119
Soundesign.....	8124
SSI.....	8211

LD

Aiwa.....	8014
Carver.....	8009,8012,8017
Denon.....	8000,8008,8010
Disco vision.....	8007
Funai.....	8014
Harman/kardon.....	8012
Hitachi.....	8007
Magnavox.....	8012,8016
Marantz.....	8009,8012
Mitsubishi.....	8008
NAD.....	8008
Panasonic.....	8015

SETUP CODES FOR AUX

Philips.....8009,8012
 Pioneer.....8000,8007,8008
 Proscan.....8001
 Quasar.....8015
 RCA.....8001,8137
 Realistic.....8014
 Samsung.....8017
 Sanyo.....8002,8136
 Sega.....8007
 Sony.....8003,8011,8013
 Technics.....8015
 Theta Digital.....8012
 Yamaha.....8016
 Zenith.....8002,8012,8136

TUNER/RECEIVERS

ADC.....8076
 Adcom.....8077
 Aiwa.....8041,8045,8052,8069,8130
 Akai.....8036,8056
 Archer.....8116
 Capetronic.....8076
 Carver.....8028,8032,8052,8066,8130
 Curtis Mathes.....8031,8037
 Denon.....8027,8058,8081
 Emerson.....8070
 Fisher.....8032,8055,8066,8082
 Garrard.....8070,8071
 Harman/Kardon.....8040,8052,8130
8131
 Inkel.....8034
 JBL.....8040
 JVC.....8035
 Kenwood.....8030,8032,8036,8051
8060,8061
 Kodak.....8066
 Krell.....8046
 Kyocare.....8027
 Linn.....8052,8130
 LXI.....8050
 Magnavox.....8042,8052,8068
8076,8130
 Marantz.....8031,8042,8052,8130
 MCS.....8031,8064
 NAD.....8062
 Nakamichi.....8038,8065
 NEC.....8057
 Onkyo.....8039,8043,8067
 Optimus.....8032,8037,8049,8050,8051
8055,8076,8079,8080,8082,8132
 Panasonic.....8031,8059,8074
 Philips.....8052,8068,8130
 Pioneer.....8029,8037,8044,8076
8078,8132
 Proscan.....8033
 Quasar.....8031
 RCA.....8033,8064,8066,8075,8076
 Realistic.....8046,8050
 Sansui.....8052,8064,8130
 Sanyo.....8054,8082
 Scott.....8046,8063
 Sharp.....8051
 Sherwood.....8034,8072,8073
 Siemens.....8070
 Sony.....8045,8047
 Soundesign.....8079
 Teac.....8046,8071
 Technics.....8031,8054,8059,8074
 Victor.....8035
 Wards.....8029,8032,8033,8037
8045,8052,8130
 Yamaha.....8048,8051
 Zenith.....8083

SETUP CODES FOR AC

ALPIN.....9115
 AMICO.....9325
 AMCOR.....9115,9320,9321,9322,9323
 Aidelong.....9038,9039,9040
 Aitue.....9108,9109,9110
 Akira.....9046
 Aoli.....9194
 Aoke.....9129,9130
 Aucma.....9019,9020,9021,9022
 AUX.....9123,9124,9125,9126
9127,9128,9191
 Baixue.....9131
 Beijingjingdian.....9080
 BELCOR CLASSIC.....9115
 Boerka.....9065,9299
 Borler.....9134,9135
 Bosgao.....9115,9136,9137
 Boshi.....9313
 Caixing.....9002,9185,9186
 Carrier.....9003,9294,9295,9296
9297,9298
 Changfei.....9187
 Changhong.....9003,9230,9237
9238,9242,9253,9307
9308,9309,9319
 Changling.....9004,9005,9006,9007
9008,9009,9010,9011,9012,9189
 Chuanghua.....9115,9139
9140,9288
 Chunlan.....9112,9203
 Conrowa.....9033,9041,9042
9043,9044,9283
 Corona.....9255,9256,9257
9258,9259,9260,9261,9262
 Daewoo.....9002,9033,9190,9191
 Daikin.....9284,9285,9286,9287
 Dajinxing.....9199,9200
 Daotian.....9180,9181
 Diboer.....9001,9002,9030,9031
 Dongao.....9001,9002,9030,9031
 Dongxia.....9115,9146,9148
 Dongxibao.....9082
 Dunan.....9003,9188
 ELCO.....9003
 ELECTER.....9002,9003,9115
9325,9324
 Falanbao.....9001,9002
9030,9031
 Fedders.....9205
 Feigo.....9288
 Feiedrich.....9204
 Fujitsu.....9272,9273
9274,9275,9276
 Geer.....9196,9197
 Galanz.....9033,9079
 Geweier.....9001,9002,9030,9031
 Geyang.....9001,9002,9030,9031
 Goldstar.....9289
 Gree.....9095,9096,9190,9208
9209,9210,9281,9282
 Guangda.....9115,9142,9143,9145
 Guqiao.....9119
 Haier.....9086,9186,9288,9291
 Hisense.....9028,9029
9230,9233,9238
 Hitachi.....9006,9271
 Huabao.....9300,9301,9303
9304,9305,9317,9318
 Huagao.....9001,9002,9030
9031,9220
 Huake.....9154
 Hualing.....9031,9033,9052
9053,9054,9119,9193
 Huamei.....9151
 Huanghe.....9081,9119
 Hui Feng.....9059,9060,9061,9062
 INYCIN.....9002,9003,9030
9031,9032,9033,9036,9037
9079,9192
 Jiale.....9170
 Jiangcheng.....9001,9030
9002,9031
 Jiangnan.....9198
 JMSTAR.....9149,9150
 Jinbeijing.....9157
 Jinlu.....9001,9002,9030,9031
 Jinsong.....9083,9084
 Johson.....9279
 Jichun.....9001,9002,9030,9031
 Kangli.....9088,9312
 Keer.....9001,9002,9030,9031
 Kelong.....9193,9266,9300
9301,9302
 Keming.....9001,9002,9030,9031
 Klimatair.....9026,9189
 Konka.....9033,9158,9159
 Kris.....9179
 MCQUAY.....9292
 Langge.....9001,9002,9030,9031
 LG.....9204,9205,9206,9207
9289,9290
 LIANGYU.....9003
 LOREN-SEBO.....9085,9189
 MD.....9003,9060,9201,9202,9217
 Meidian.....9001,9002,9030,9031

SETUP CODES FOR AC

Meiling.....9296,9297,9298
 Mingyi.....9001,9002,9030,9031
 Mitsubishi.....9033,9055
9056,9057,9058,9076,9080
9192,9217,9220,9277,9278
9279,9280,9283,9325,9503
 National.....9013,9115,9119,9120
 NEC.....9230,9231,9232,9233
9234,9235,9236,9237
9238,9239,9240,9241
9242,9243,9244,9245
9246,9247,9248,9249
9250,9251,9252,9253
9254
 Nikko.....9045
 Ojun.....9001,9002,9030,9031
 OPAL.....9115
 Others.....9064
 Panasonic.....9053,9054,9119
9120,9121,9122
 Panda.....9092,9093,9094
 Phillips.....9001,9002,9030
9031,9114,9115,9116
 Qidi.....9133
 Rayao.....9306,9047,9048,9049
9050,9051,9202,9261
 RAYBO.....9324
 Ricai.....9160
 Rijiang.....9115,9161
 Rowa.....9063,9211,9212,9213
9214,9215,9216,9217
9218,9219,9220,9221
9222,9223,9224,9225
9226,9227,9228,9229
 Saijo Denki.....9296,9310,9311
 Samsung.....9023,9024,9025
9026,9027,9189
 Sandi.....9132
 Sanzuan.....9165
 SANYO NEC.....9320,9321,9322,9323
 Shangling.....9033,9070,9071
9072,9073,9074
 SHARP.....9115,9263,9264,9265
9266,9267,9268,9269
 Shenbao.....9115,9163
 Shengfeng.....9013
 Sacon.....9115,9167
 SHINING.....9033
 Sova.....9303
 STARWAY.....9115
 Sunburg.....9065
 TADIAR.....9320,9321,9322,9323
 TADIRAN.....9115,9320,9321
9322,9323
 TCL.....9033,9079,9116,9117
9118,9314
 Teco.....9086
 Tianjinkongtiao.....9175
 Tianyuan.....9105,9106,9107
 Tobo.....9066,9067,9068,9069
 Tongyi.....9001,9002,9030,9031
 Toshiba.....9003,9270
 UNI-AIR.....9088,9312
 Wanbao.....9102,9103,9104
 Weili.....9078,9087,9088
9089,9090,9091
 Weiteli.....9195
 Whirlpool.....9115,9119,9279
 Wufeng.....9183,9184
 SAST.....9155,9156
 UTTLEDUCK.....9176,9177,9178
 Xiayang.....9001,9002,9030,9031
 Xileng.....9013,9111,9113,9186
 FRESTECH.....9115,9169
 SHINCO.....9099,9100,9101
9173,9174
 Xinle.....9097,9098
 YAIR.....9000,9001,9002,9003
 Yaoma.....9171,9172
 Yidazhou.....9001,9002,9030
9031
 ELECTROLUX.....9299,9316
 York.....9292,9293
 Yutu.....9013,9014,9015,9016
9017,9018,9019,9033
9308,9315
 JINDA.....9075
 Zhongy.....9182
 Zuodan.....9219

**SETUP CODES FOR HTB
 (HOME THERTER IN A BOX)**

AMW.....015
 APEX.....011
 BOSE.....023
 CENTERIOS.....018,027,029
 CLASSIC.....031
 CRITERION.....014
 DURABRAND.....004,018
 EMERSON.....021
 INSIGNIA.....028
 JVC.....002
 KLH.....012
 KOSS.....005
 LENOXX.....022
 LG.....026
 MAGXAXBOX.....008
 MYRON&DAVIS.....025
 NESA.....025
 NEXXTTECH.....018,027,028
 NORCENT.....016
 ONKYO.....009
 PANASONIC.....003
 PHILIPS.....006
 PIONEER.....013,017
 RADIO SHACK.....001,007,018
 RCA.....018,020
 REGENT.....022
 SABA.....019
 SAMSUNG.....000,024
 SELECTRON.....030,033
 SONY.....010
 TECHWOOD.....032
 TEVION.....014