WHAT'S INCLUDED



180º Camera







Camera Stand

 
Mounting Screw



4

& Anchor

SETTING UP YOUR GUARDZILLA







2 Launch the Guardzilla app and follow the set-up instructions.

For additional help go to www.guardzilla.com/support for our step-by-step camera set-up support documents.

ALL-IN-ONE HD Wi-Fi CAMERA Model: GZ180

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursua nt to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful into ference in a residential installation. This equipment generates uses and can radiate adult frequency energy a nd, if not installed and used in accordance with the instructions, may cause harmful interference to radio commitmentations. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turn ing the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Radiation Exposure Statement

CAMERA MOUNTING & PLACEMENT OPTIONS

Placing on a Flat Surface

- When placing the camera on a flat surface the viewing angle can be adjusted up or down with the sliding foot on the camera's bottom.
- ▶ Sliding the foot on the bottom of the camera forward or backwards will adjust the camera's viewing angle.



- Fasten the mounting screw into the wall, and hang the magnetic mount from the screw.
- If you're attaching the ball mount to drywall, be sure to use the plastic drywall anchor that is provided.
- Place the back of the camera onto the ball mount.
- Adjust the camera's position as desired.

 






Hanging Your Camera on the Display Stand

- Hang the ball mount on the camera stand.
- Place the camera on the ball mount.
- Adjust the camera position as desired.





1