

# SPARK - Swing Manual

## READ MANUAL FIRST


\*If you have any problems/questions at any stage, please stop the installation and call 1300 782 661

### Site Checks

You should setup this swing set in an environment which:



 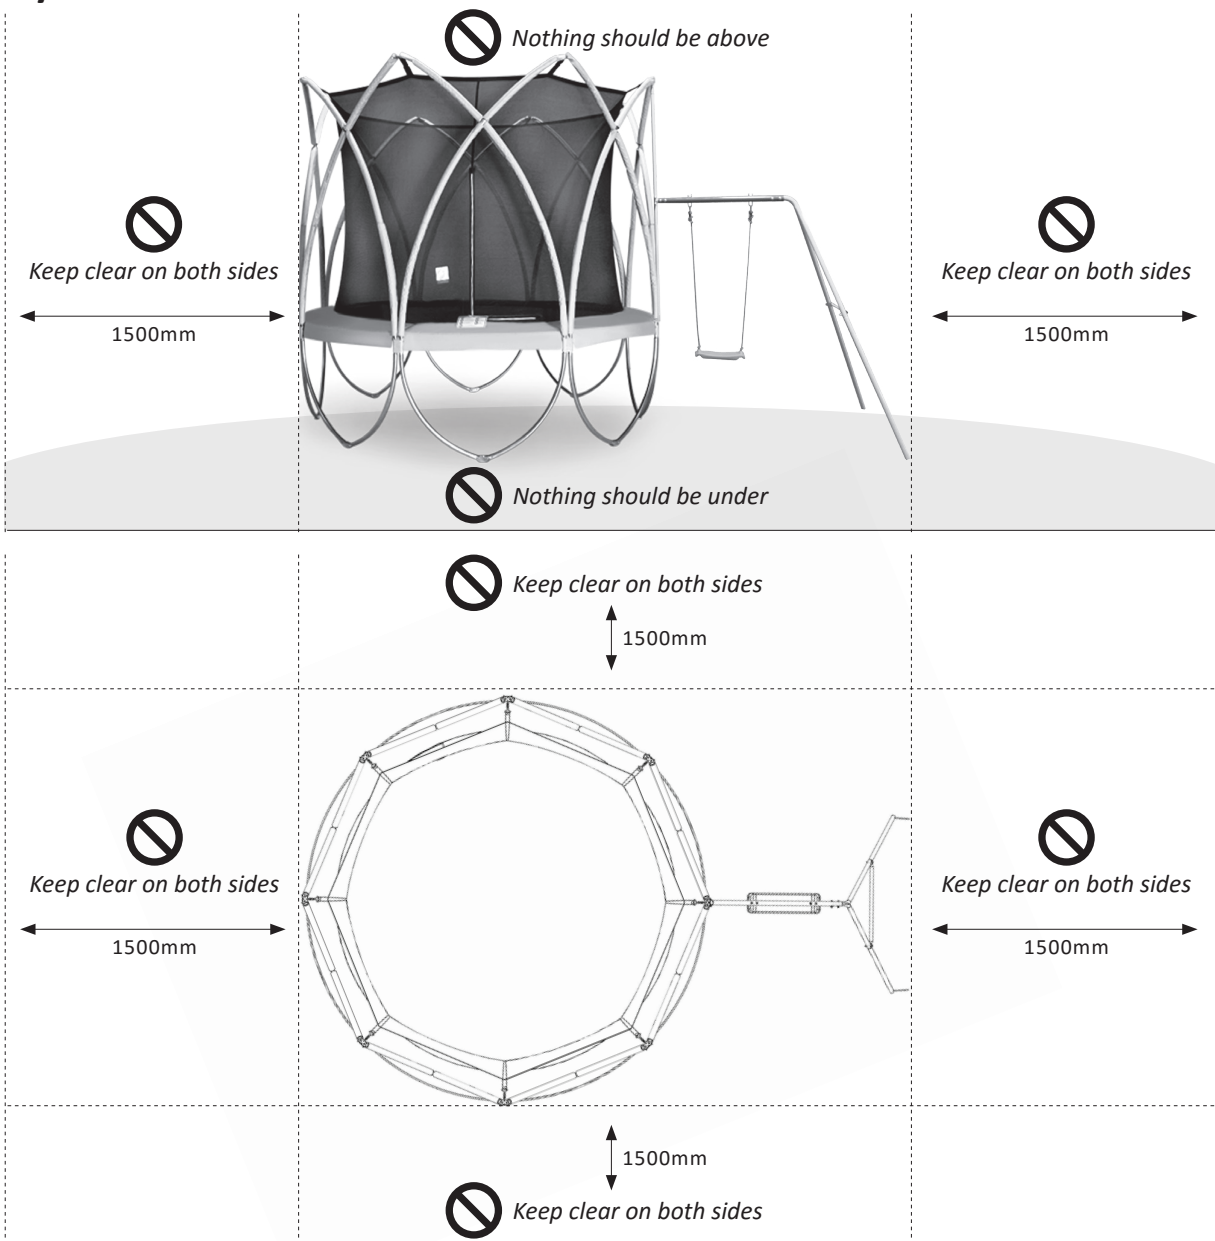



 




1. is clear from walls, structures, fences and anything that will cause injuries.
2. is a flat and firm ground such as grass field

### Safety Distance Guide




\*Please make sure you have placed your swing in the safety zone

## Parts Check List - 1

Parts No	Parts	Description	Quantity
SW-P01		Swing Upper Hanger Tube (Blue)	1
SW-P02		Bottom Support Tube (Green)	1
SW-P03		Top Support Tube (Green)	1
SW-P04		Upper Leg Tube Left (Green)	1
SW-P05		Upper Leg Tube Right (Green)	1
SW-P06		Lower Leg Tube (Green)	2
SW-P07		Leg Cross Bar (Green)	1
SW-P08		Leg Cross Bar (Green)	1
SW-P09		Leg Cross Bar (Green)	1
SW-P10		Anchor Set (Green)	2
SW-P11		Swing Seat (Red)	1

*\*If you are missing any parts or have problem finding them, please do not try to install the swing and call 1300 782 661 for help*

## Parts Check List - 2

Parts No	Parts	Description	Quantity
SW-P12		Upper Leg Tube Left (Green)	2
SW-P13		Upper Leg Tube Right (Green)	10
SW-P14		Upper Leg Tube Right (Green)	10
SW-P15		Lower Leg Tube (Green)	4
SW-P16		Lower Leg Tube (Green)	4
SW-P17		Lower Leg Tube (Green)	5
SW-P18		Leg Cross Bar (Green)	1
SW-P19		Leg Cross Bar (Green)	2
SW-P20		Leg Cross Bar (Green)	1
SW-P21		Leg Cross Bar (Green)	1

*\*If you are missing any parts or have problem finding them, please do not try to install the swing and call 1300 782 661 for help*


## Preparation



1.



2.

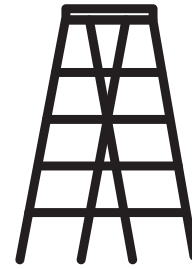


3.

**1. Gloves:** It is recommend that people who are willing to install the swing should wear gloves to prevent injuries.

**2. Tools:** Screwdriver is recommended to install swing

**3. Ladder:** Ladder is recommend to help you install the upper parts of swing.

## SPARK Swing Explosive View

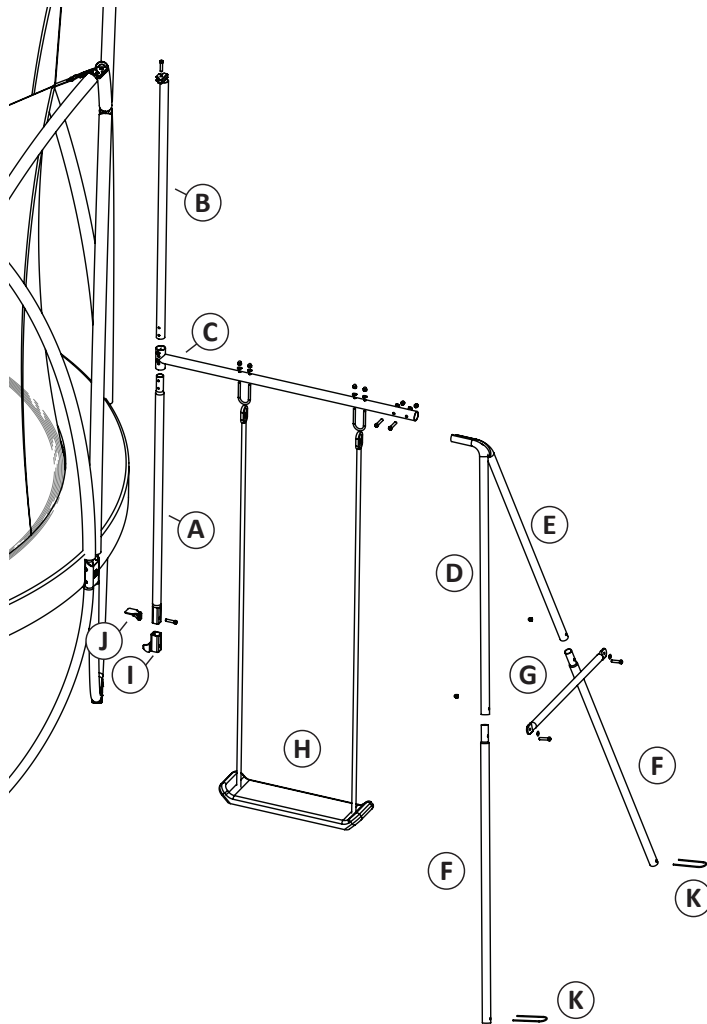

### Parts

A = SW-P02

B = SW-P03

C = SW-P01

D = SW-P04

E = SW-P05

F = SW-P06

G = SW-P06

H = SW-P11

I = SW-P08

J = SW-P09


K = SW-P10

### \*For Main Parts Only!


*Screws, bolts and washers not shown in the drawing*

*\*If you are missing any parts or have problem finding them, please do not try to install the swing and call 1300 782 661 for help*


1

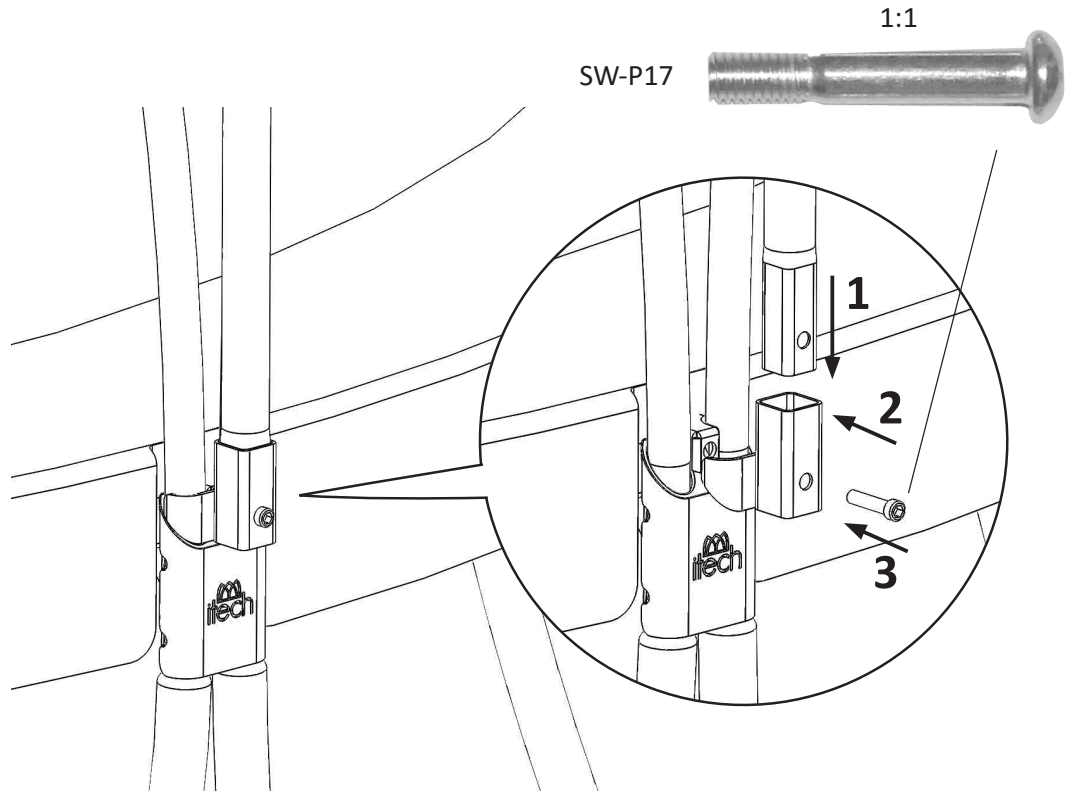


2

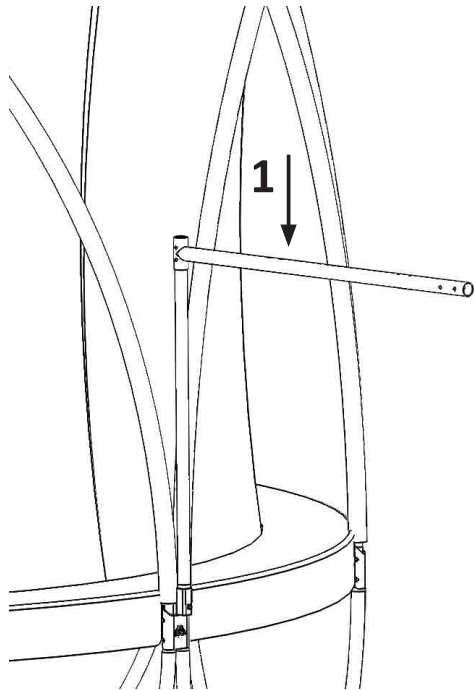


3

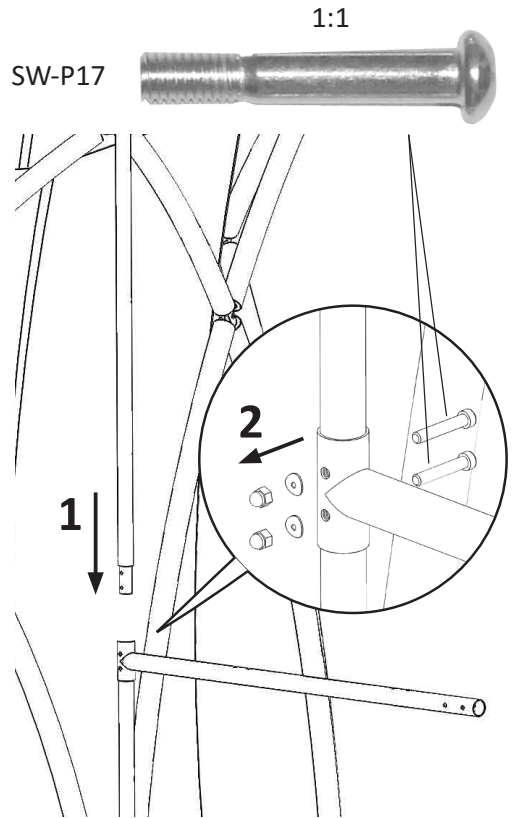


4

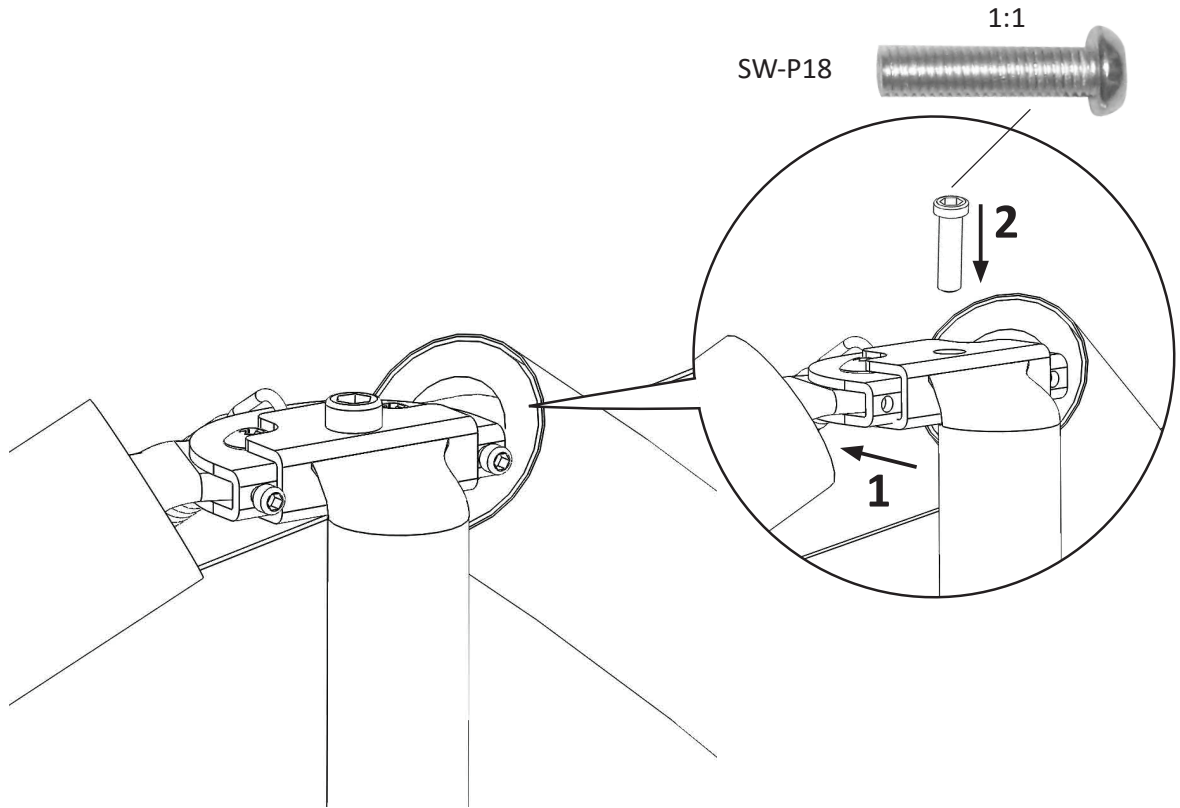


5

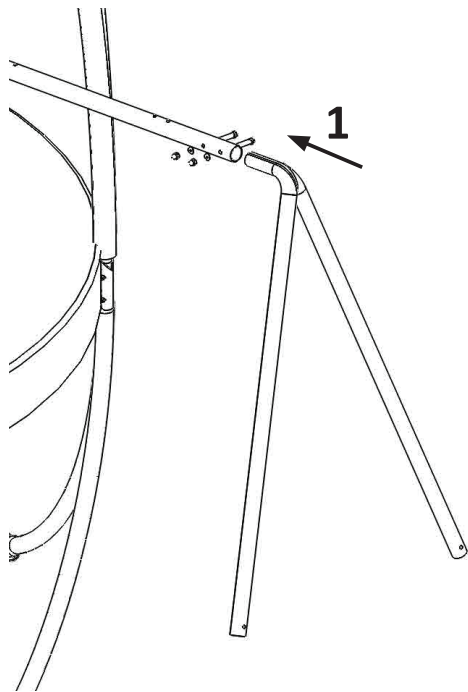


6

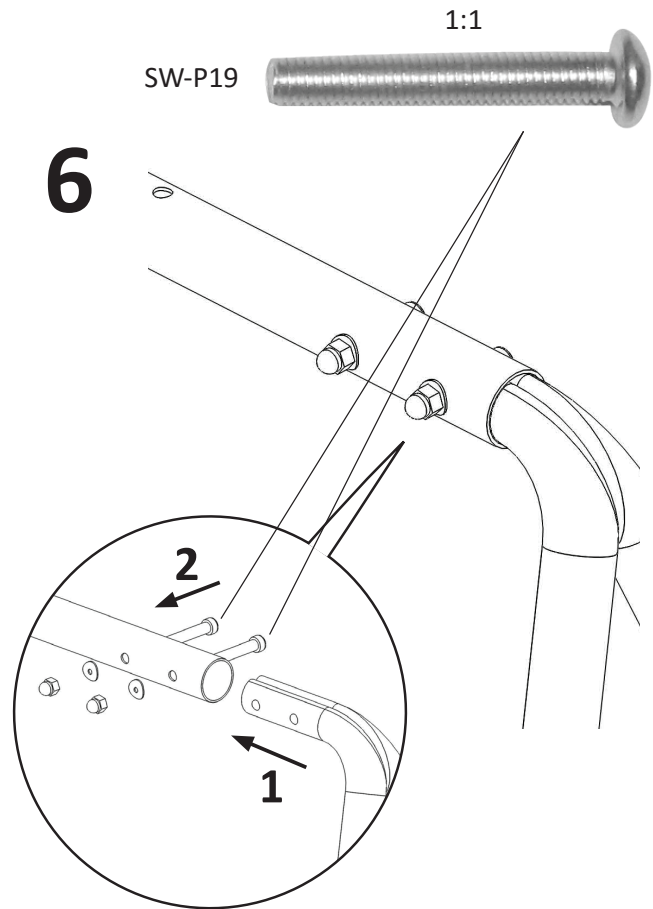


7

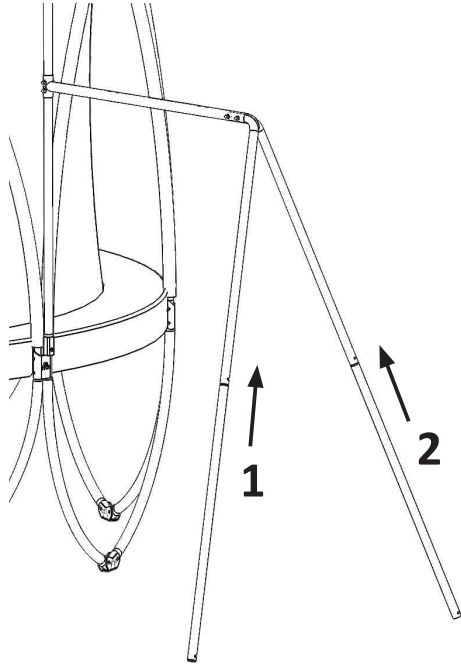


8

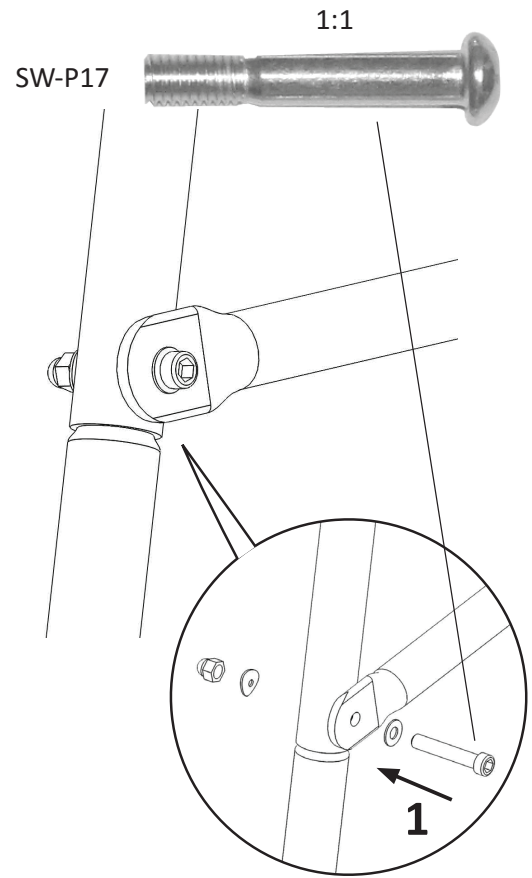



9

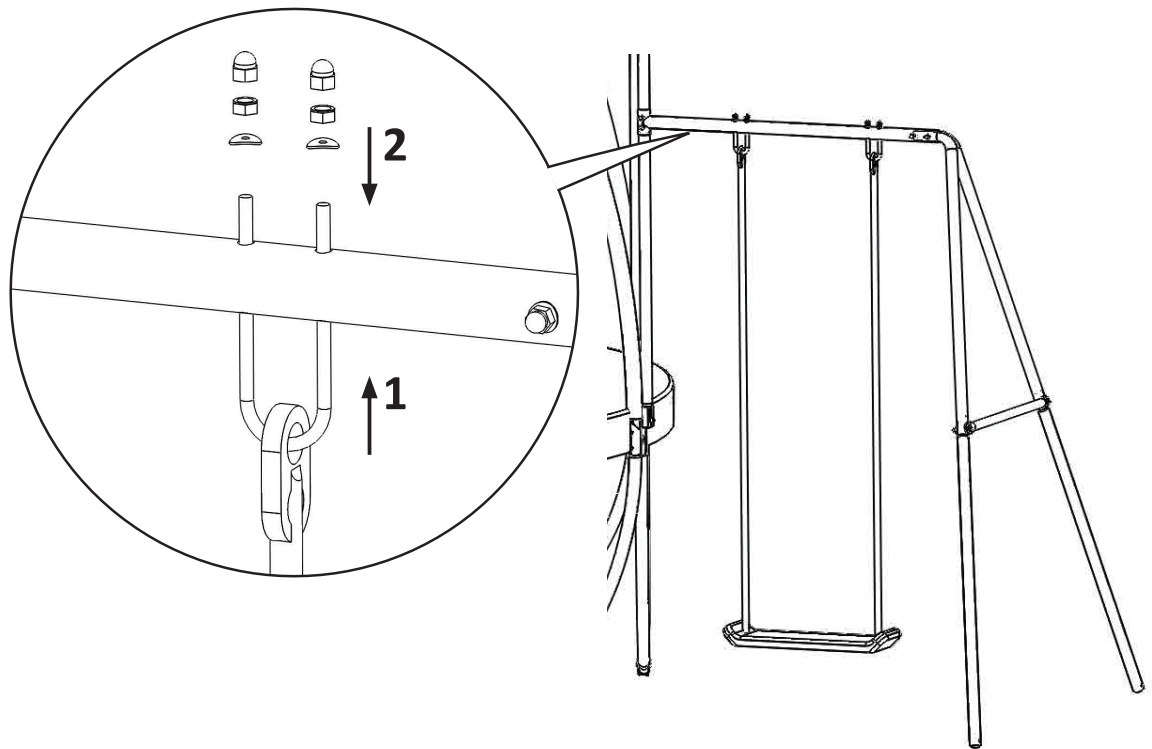

10

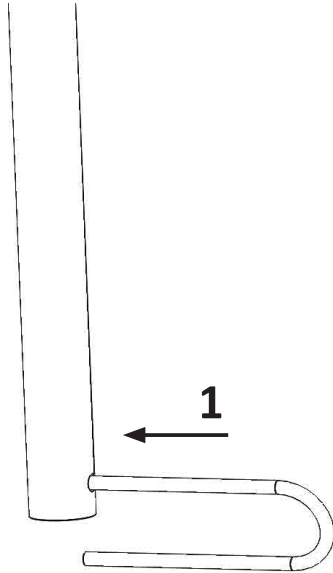

11

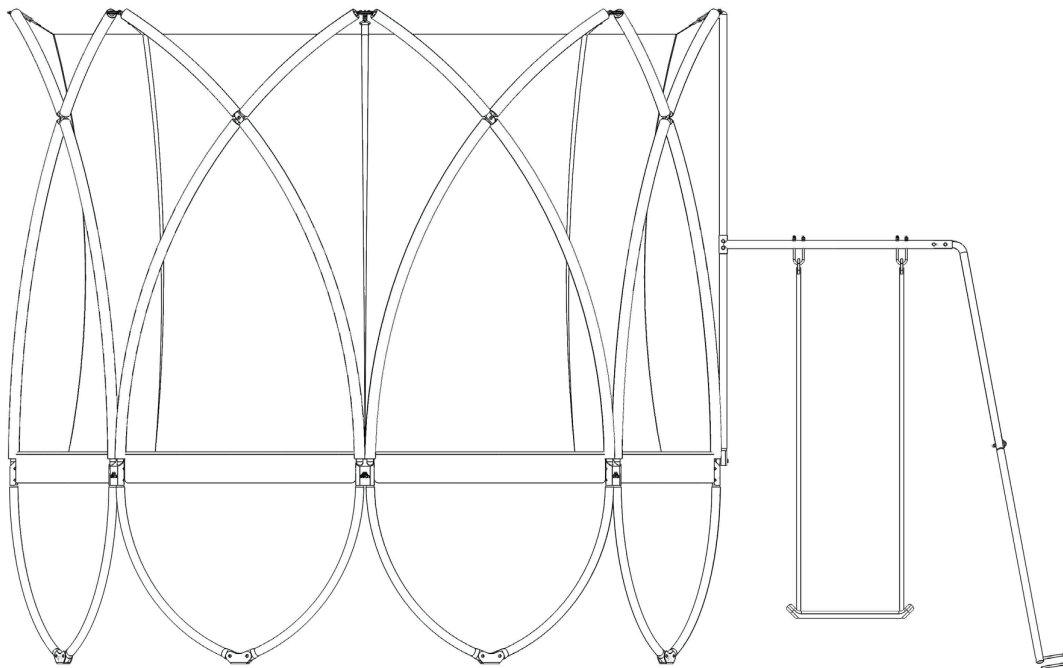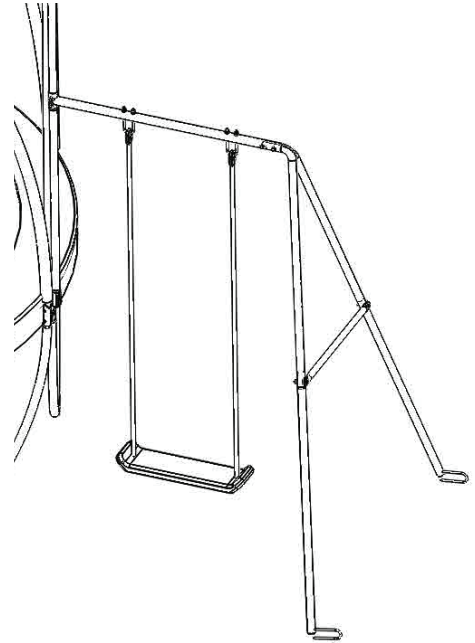

**Congratulations you have successfully installed your swing set!**



## **WARNING**

- This swing set is for family domestic use only.
  - This swing set is designed for use by children 3-9 years of age weighing no more than 45kgs.
  - Children of all ages must be supervised by an adult at all times when using this swing set.
  - Adult assembly of this swing set is required. Two adults are recommended for assembly.
- 
1. Read and understand enclosed safety information before assembly and use of the swing set.
  2. Place the swing set on a level and soft surface before use.
  3. Lateral clearance is essential. The swing set should be placed not less than 2m (6 feet 6 inches) from any structure or obstruction ie. a fence, garage, house, shed, overhead branches, clothes line etc.
  4. DO NOT install this swing over hard surfaces such as concrete, asphalt or any other hard surface.
  5. It is recommended that this swing set be positioned over soft lawn or fine sand.
  6. Anchor the swing set using the wiggling anchor pegs provided to prevent overturning or lifting. The anchors should be placed level with or under the ground in order to reduce the tripping hazards.
  7. Never place the swing set under or near powerlines.
  8. Never place the swing set inside a garage or basement or under any structure.
  9. Always position the swing where it can be seen from the house.
  10. This swing set is designed to be used by one child per seat at one time.
  11. Do not allow additional items to be attached to the swing set such as ropes, chains, cords, or other items not designed for use.
  12. Do not use the swing set when it is wet as it will become slippery and serious injury may result.
  13. Do not wear apparel such as hats with chin straps, helmets, scarves, garments with pull strings and other items of loose clothing while using this swing set as they can cause serious injury.
  14. Do not walk close to, in front of or behind the swing set when in use. Walking between moving rides can cause serious injury.
  15. Do not jump from the swing set when they are in motion.
  16. Do not stand on the seats when using the swing set.
  17. Do not climb on the side braces or the top support of the swing set.

## **MAINTENANCE INSTRUCTION**

To maximise the life of your swing set, make sure your children enjoy your swing sets safely. It is important to check and inspect the following regularly before each use of the swing set, and carry out necessary maintenance immediately. Nuts and Bolts: Check before each use for tightness and tighten if required. Replace any damaged, distorted or missing fasteners immediately.

Plastic components: Check before each use for deterioration. Replace immediately if cracked or damaged. Use only genuine iTech Trampolines's replacement parts. Metal components: Check before each use for corrosion, cracking, tears, distortion or other damage. Replace immediately if these conditions exist. In particular, check the Braces on the top tubes and the Brackets on the Glide Ride, as these can be damaged through improper use / or excessive lateral movement. Oil all metallic moving parts at least one time a month.

## **CAUTION**

Do not allow children to use the swing set until the maintenance has been carried out. The use of swing set not in first class condition exposes the child to the risk of injury. As a parent, supervisor, owner or guardian, it is your responsibility to ensure that the swing set is properly maintained. Spare parts are available through iTech Trampolines Customer Service centre. Please call 1300 782 661 (Australia).

## **SWING SETS LIMITED WARRANTY**

iTech Trampolines warrants its swing set products to be free from defects in material and workmanship under normal use and service conditions. The various components of the swing set are warranted against defects and workmanship for 6 months.

All warranty coverage extends only to the original retail purchaser from the date of purchase. iTech Trampolines' obligation under this Warranty is limited to replacing or repairing, at iTech Trampolines's option, the product or parts therein. Any enquiries relating to warranties or spare parts must be directed to our Freecall 1300 782 661 (Australia). For efficient processing of your enquiry please have relevant date of purchase, retailer name you purchased the item from and the brand on the product. This warranty does not extend to any damage to a product caused by abuse, improper or abnormal usage (as detailed in this instruction manual), or repairs not provided by iTech Trampolines. Nor does this warranty extend to products used for commercial or rental purposes. This warranty does not cover ordinary wear, tear and weathering, failure to follow directions, improper installation, improper maintenance or acts of God (such as damage caused by storms, lightning and by snow or ice). No other Warranty beyond that specifically set forth above is authorised by iTech Trampolines.

Our sales and service centre has been set up to provide assembly assistance, replacement parts and accessories, and to efficiently handle all warranty related matters. Freecall 1300 782 661 or email [info@itechtrampolines.com.au](mailto:info@itechtrampolines.com.au)

