

Installation Instruction for Logic Controls MP-4200 TH Receipt Printer



This guide covers in detail the installation of the drivers for the Logic Controls MP-4200 TH Receipt Printer and Cash Drawer along with how to configure them for CornerStore.

How to install receipt printer MP4000TH

Step 1: Create a **folder** named “Spooler” on your desktop.


Step 2: Download the driver:

http://cornerstorepos.com/downloads/hardware/MP4200_Spooler.exe

Step 3: Click **Run**




Step 4: Click **Browse**, then select the spooler folder you created on the desktop.

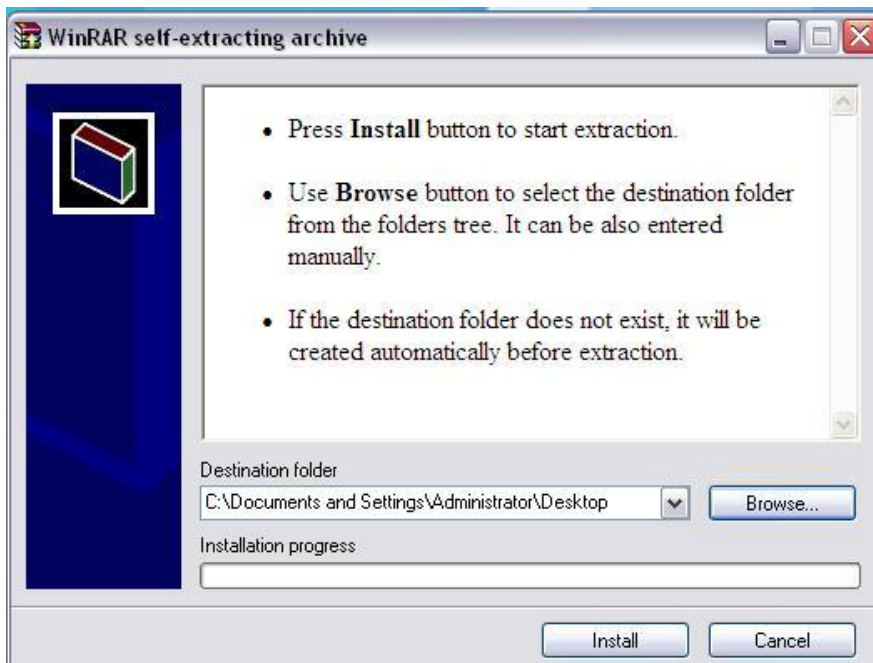

Step 4: Click **Install**.


Step 5: Open the spooler folder, if you are using **32 bit** then open the **LciSetup_LR3K_V4.1.1**
If you are using **64 Bit** use the **LciSetup_LR3K_x64_v4.1.1**.

To check if you have 32 or 64 bit operating system, go to **Start > Right Click Computer > Properties**.

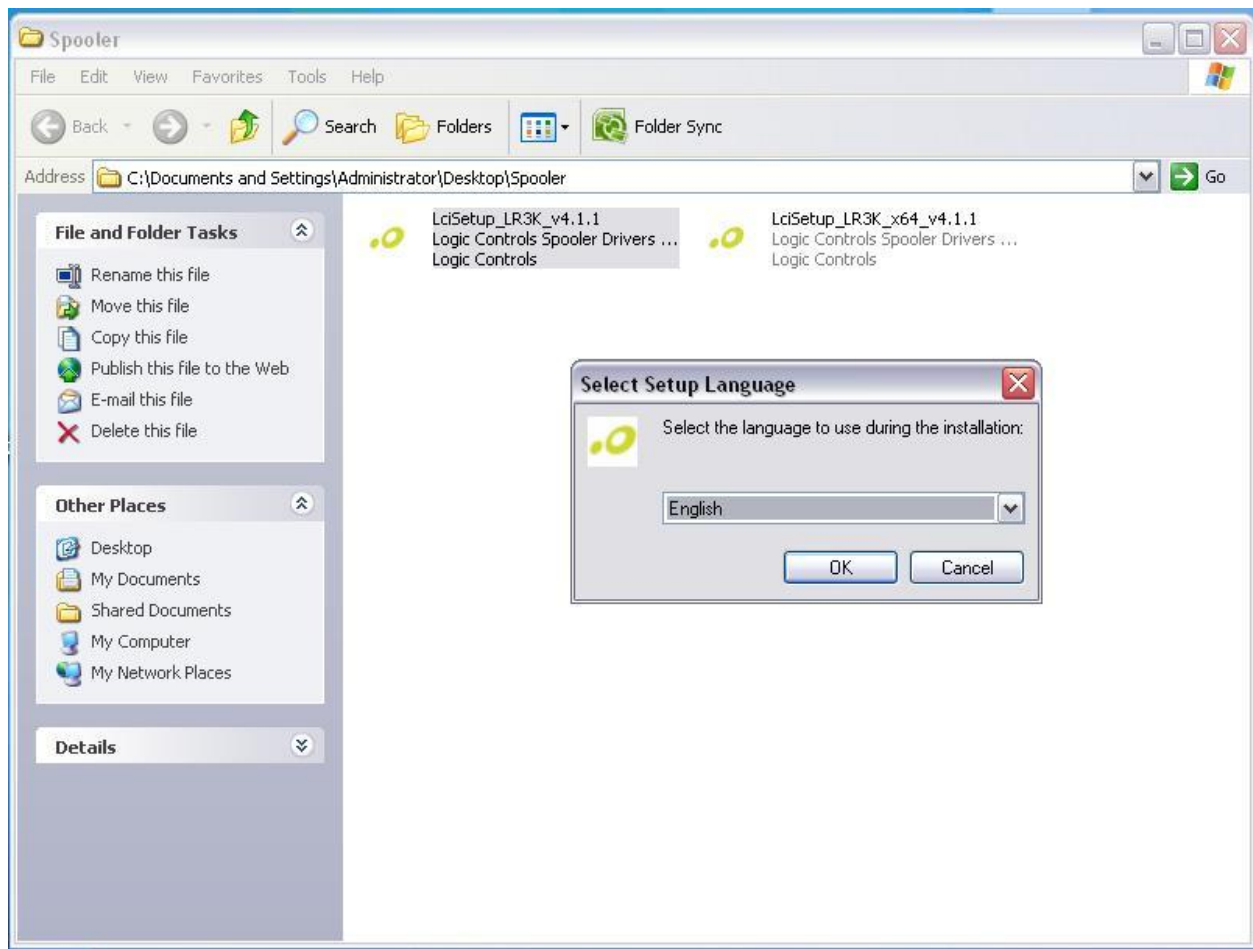

Step 6: Click **OK**.


Step 7: Click **Next**.

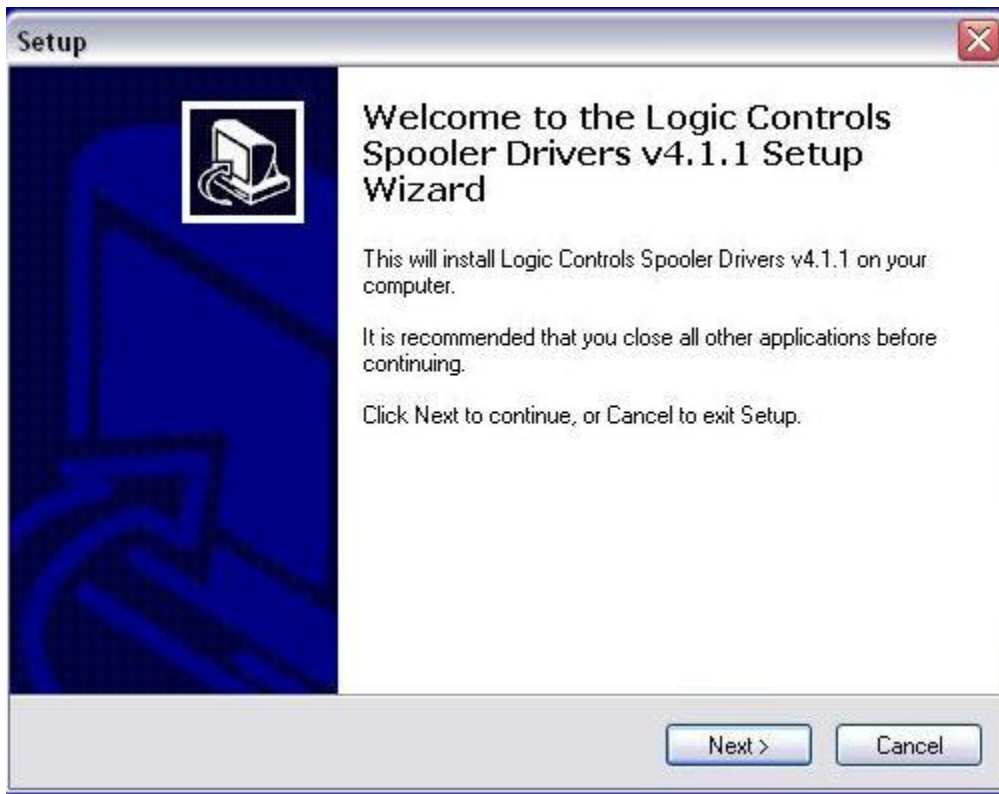


Step 8: Select the printer **MP4000TH** and click **Continue**.



Step 9: Make sure USB is selected, and then click **Add a New Port**, follow the directions on screen to make sure the proper com port is produced. Click Install Printer. If it asks you to install a driver click **Install**.

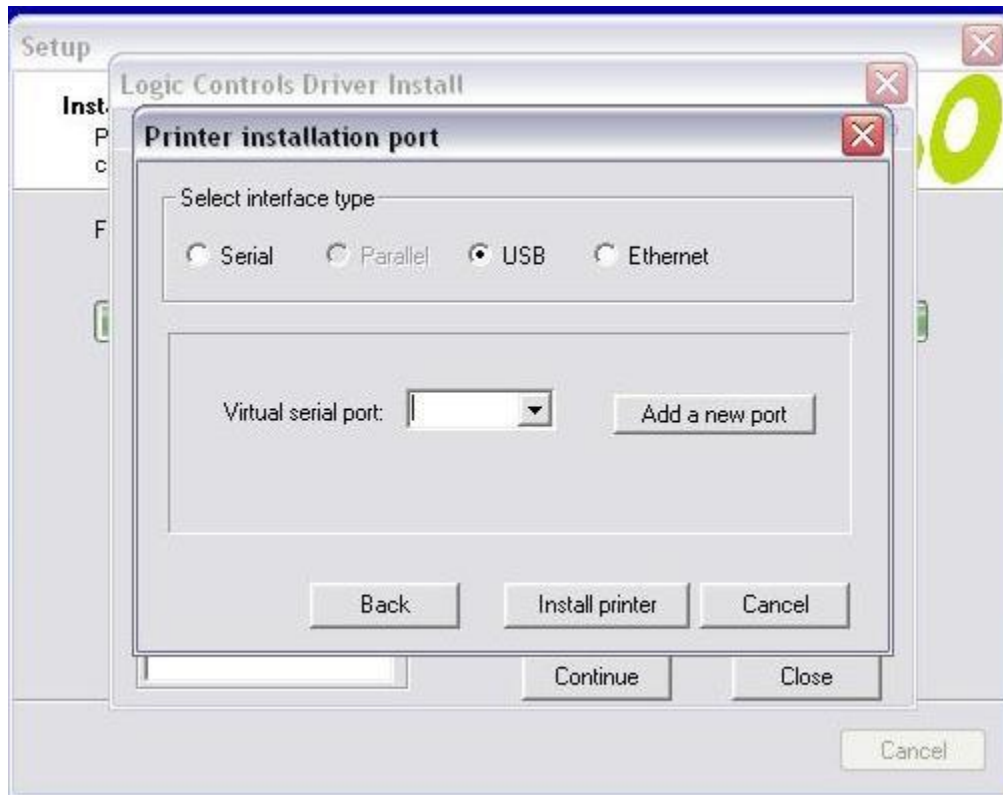

Step 10: Click **OK**, a small test page should print from the printer.

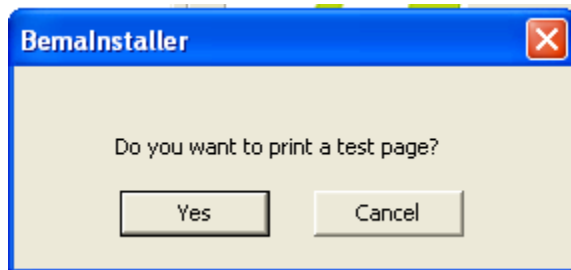

Step 11: Click **Finish**.

Installing the OPOS driver

Download the Driver: http://cornerstorepos.com/downloads/hardware/MP4200_OPOS.exe


Step 1: Click **Run**




Step 2: Click **Next**




Step 3: Click **Next**

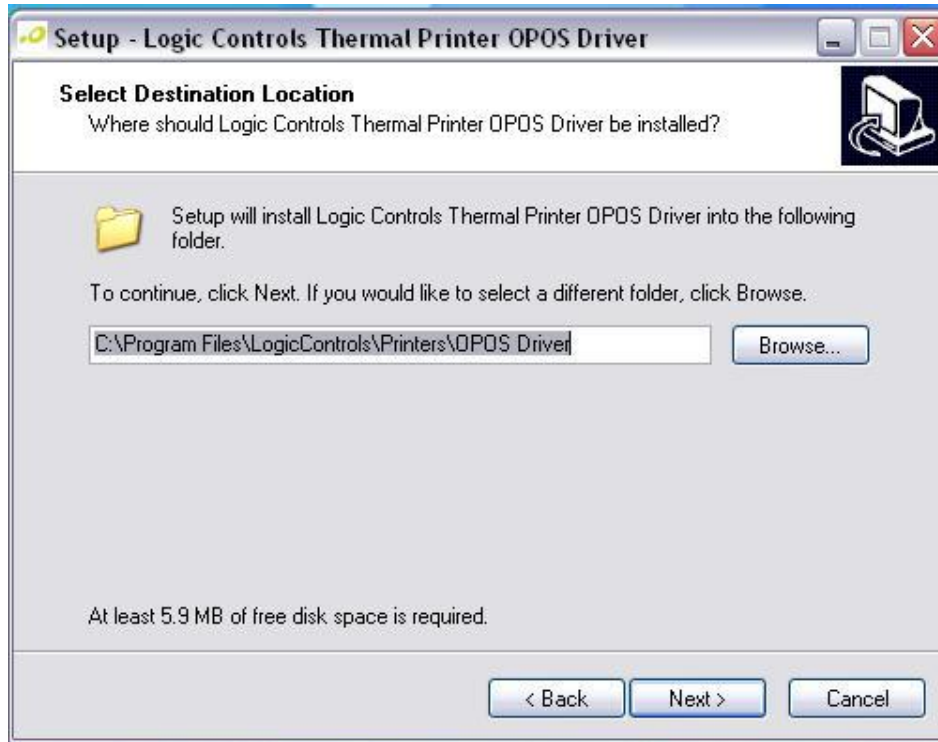


Step 4: Click **Next**

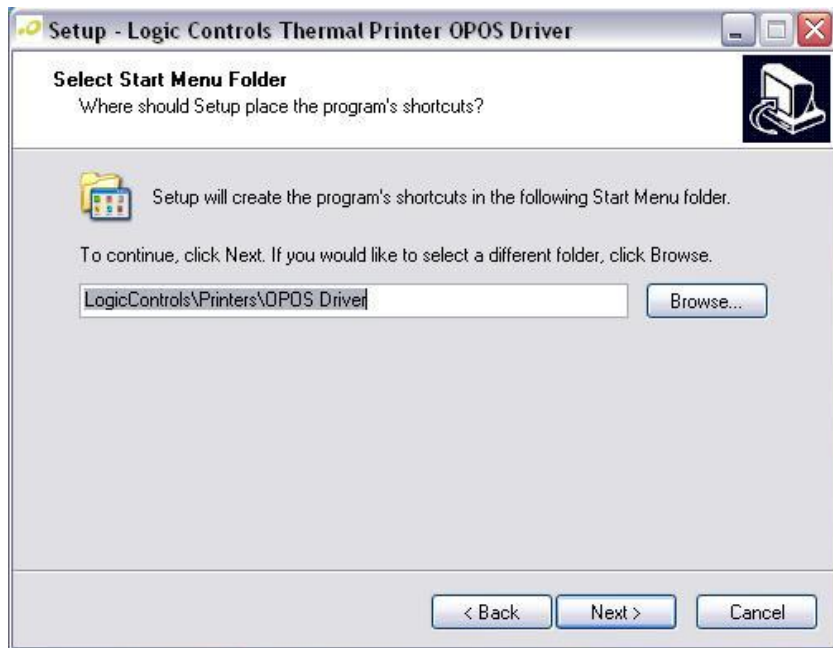


Step 5: Click **Next**

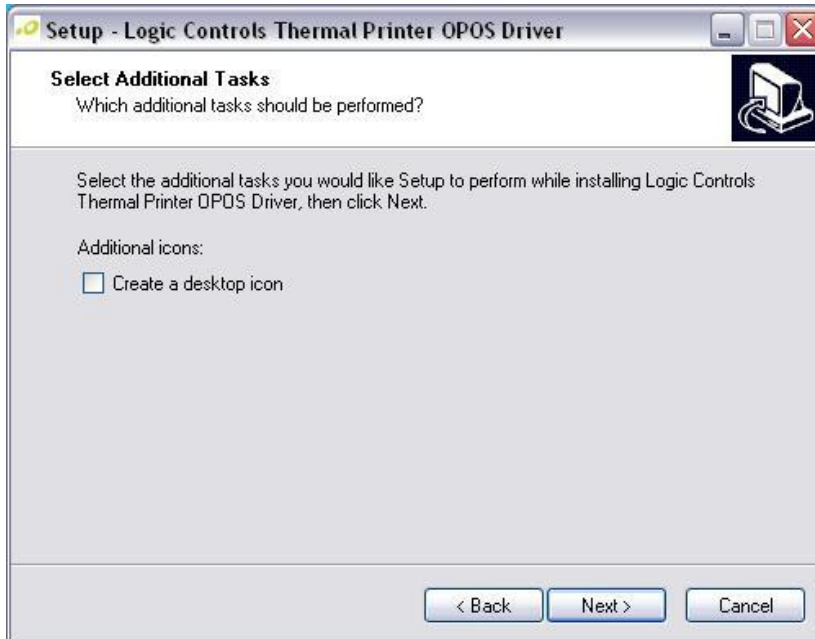


Step 6: Click **Install**

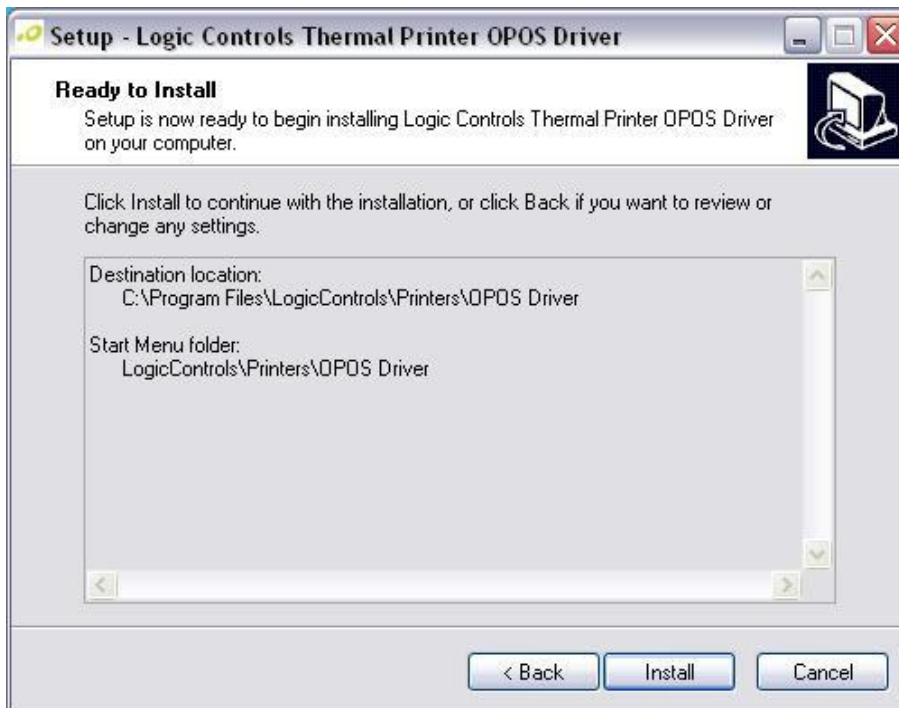

Step 7: Turn your printer on and click **OK**

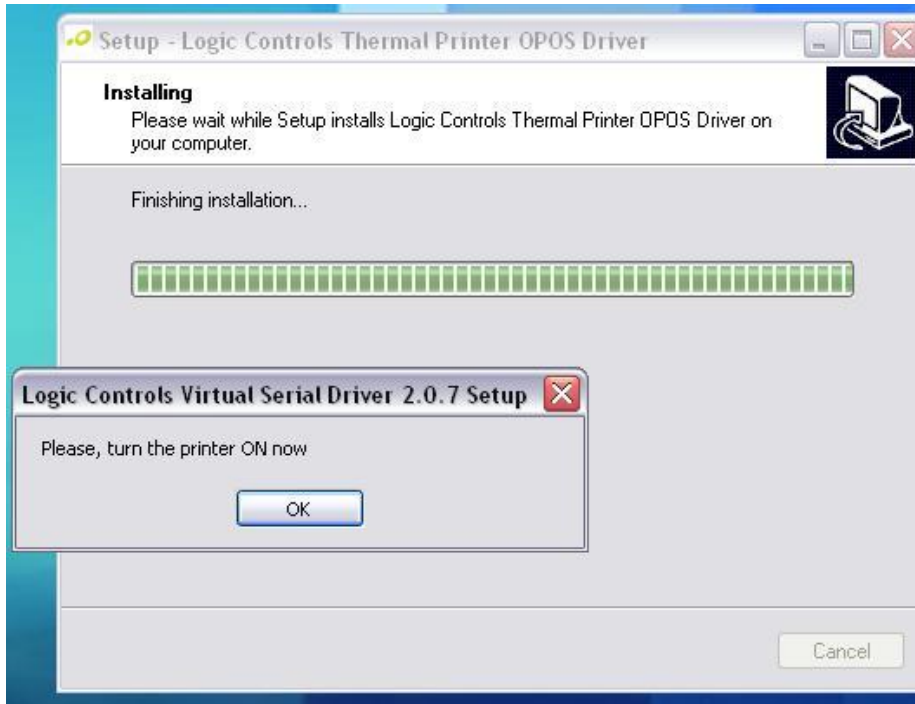

Step 8: Click **Continue Anyway** (This may or may not pop up)

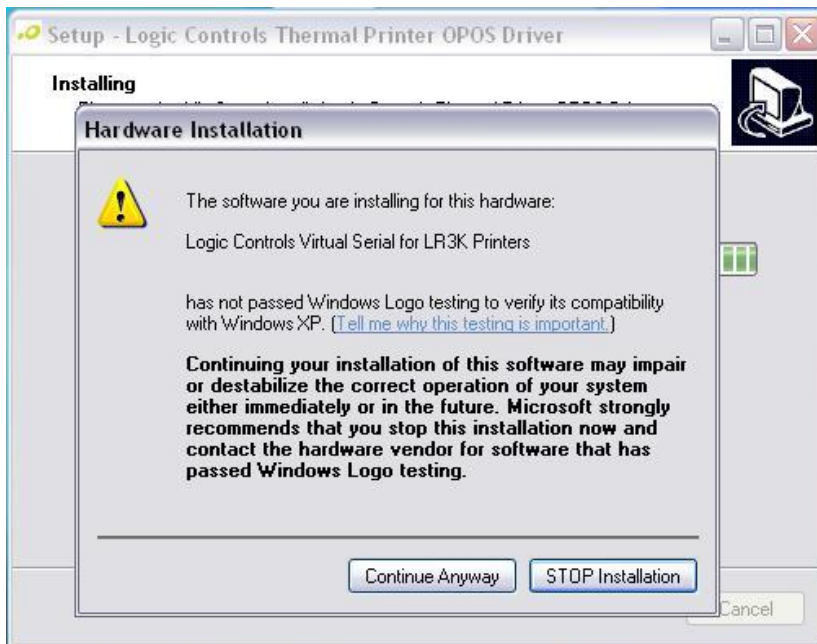


Step 9: Click **Finish**, the **OPOS Driver Setup** should open.




Using the OPOS Setup


Step 1: Press **New**

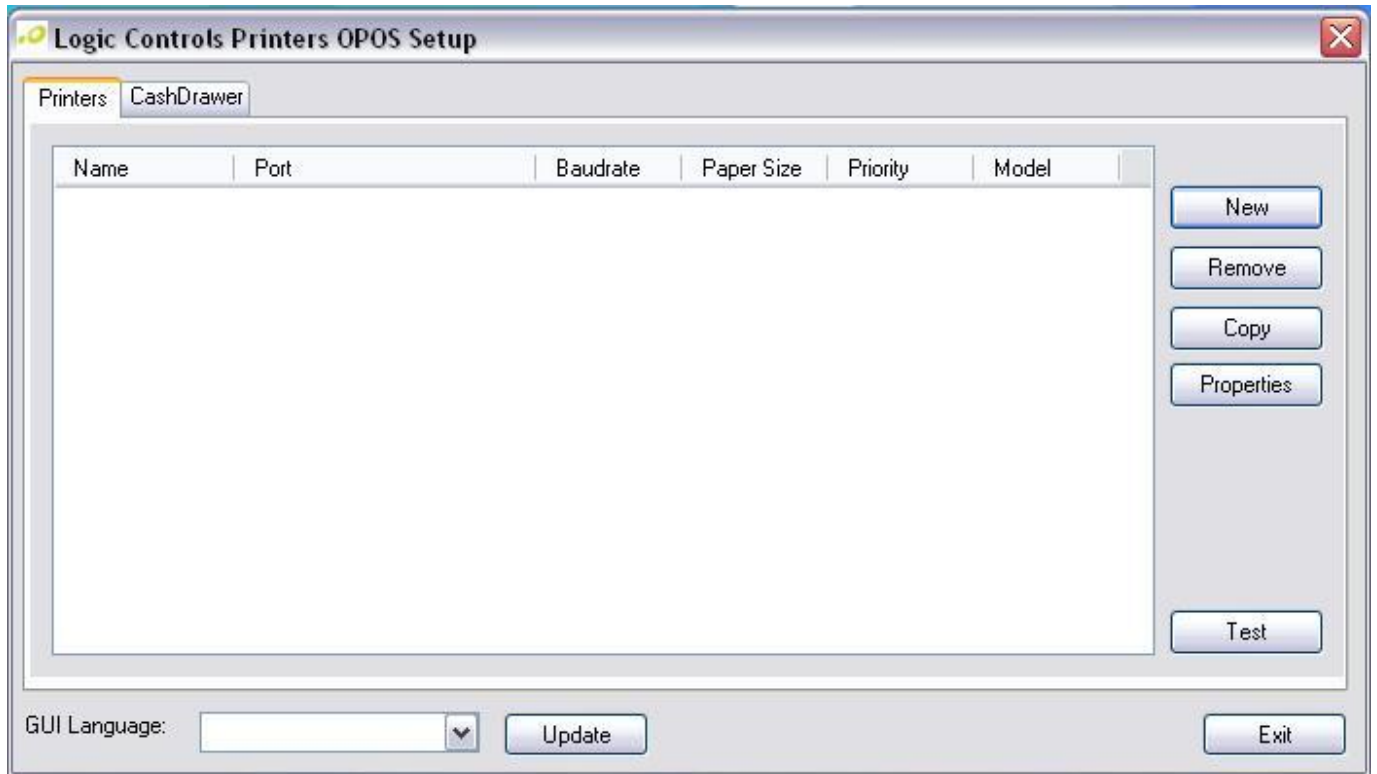


Step 2: Make sure the fields below match the fields in the window, make sure the **COM port** matches the one for your computer.

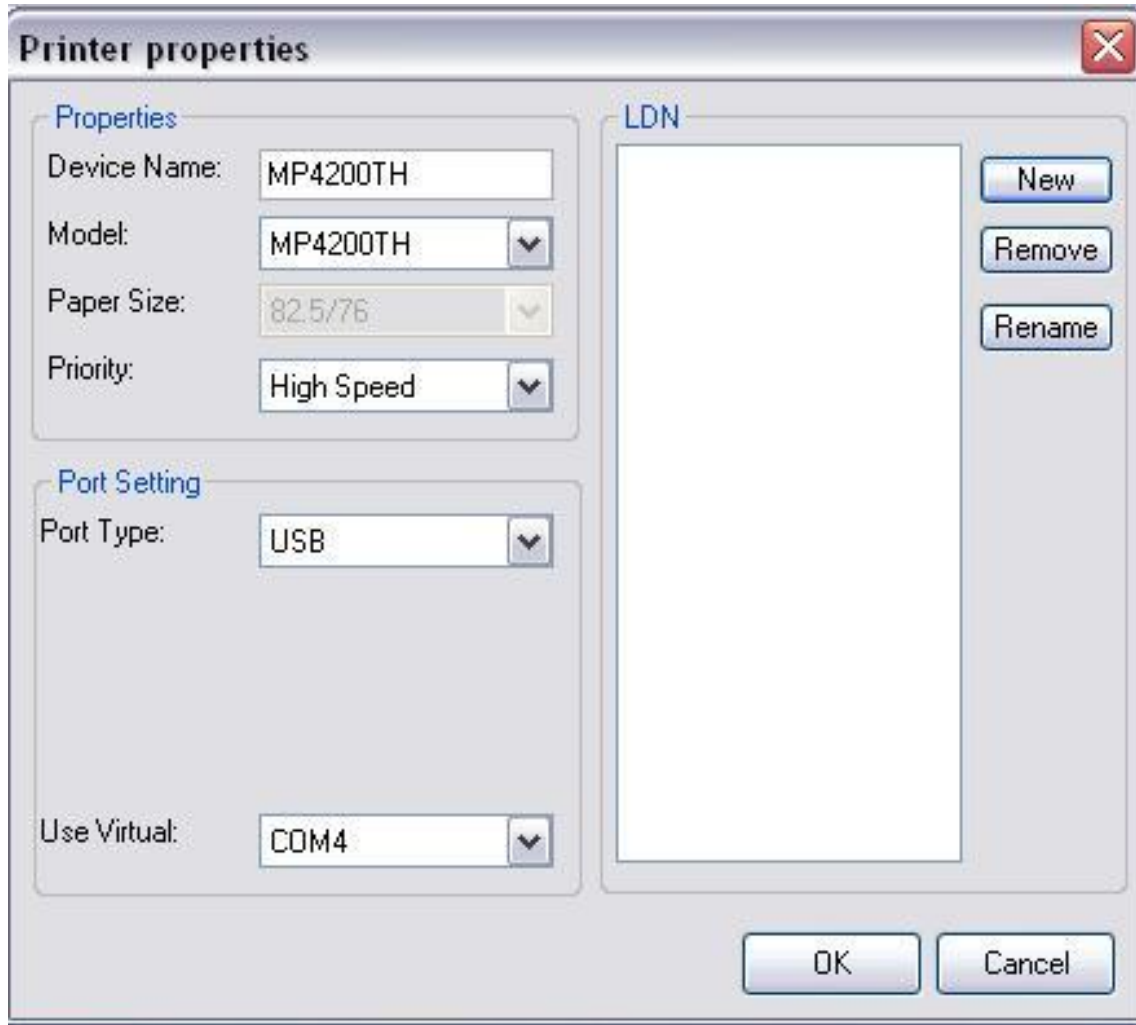


Step 3: Click **New** and type a name for your printer. Click **OK**, then click **Test**. A test page should print. Click **OK**.

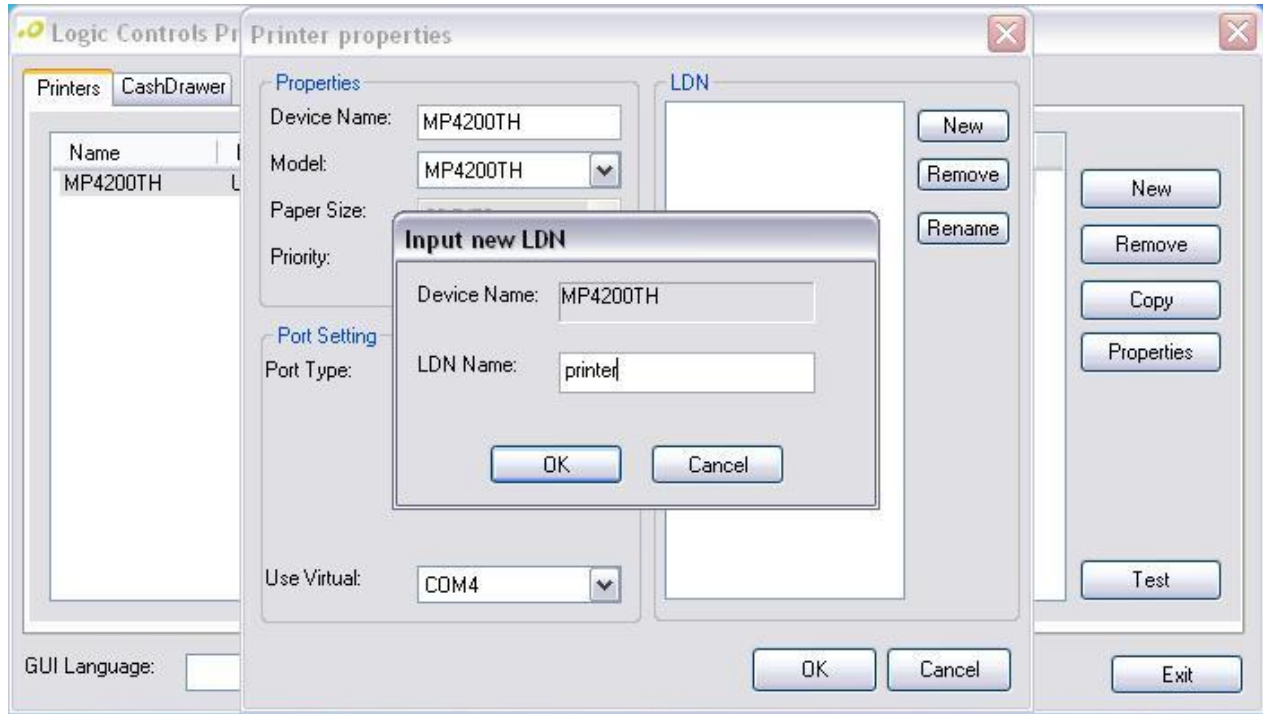

Step 4: Click the **CashDrawer** tab, and then click **New**.

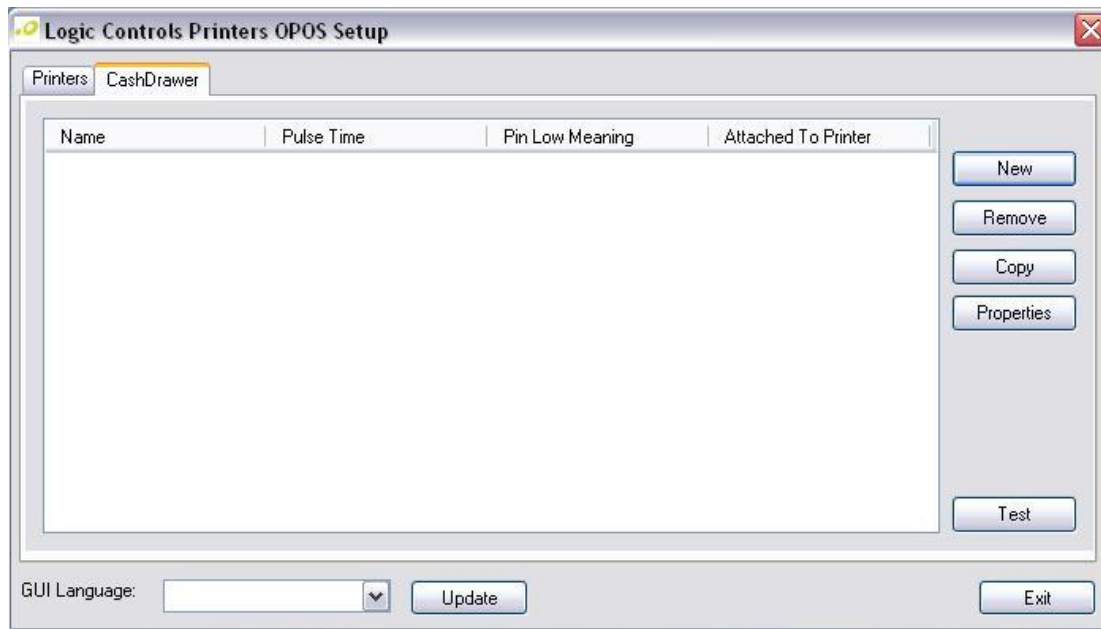

Step 5: Make sure the fields match the ones below. Then click **New**.

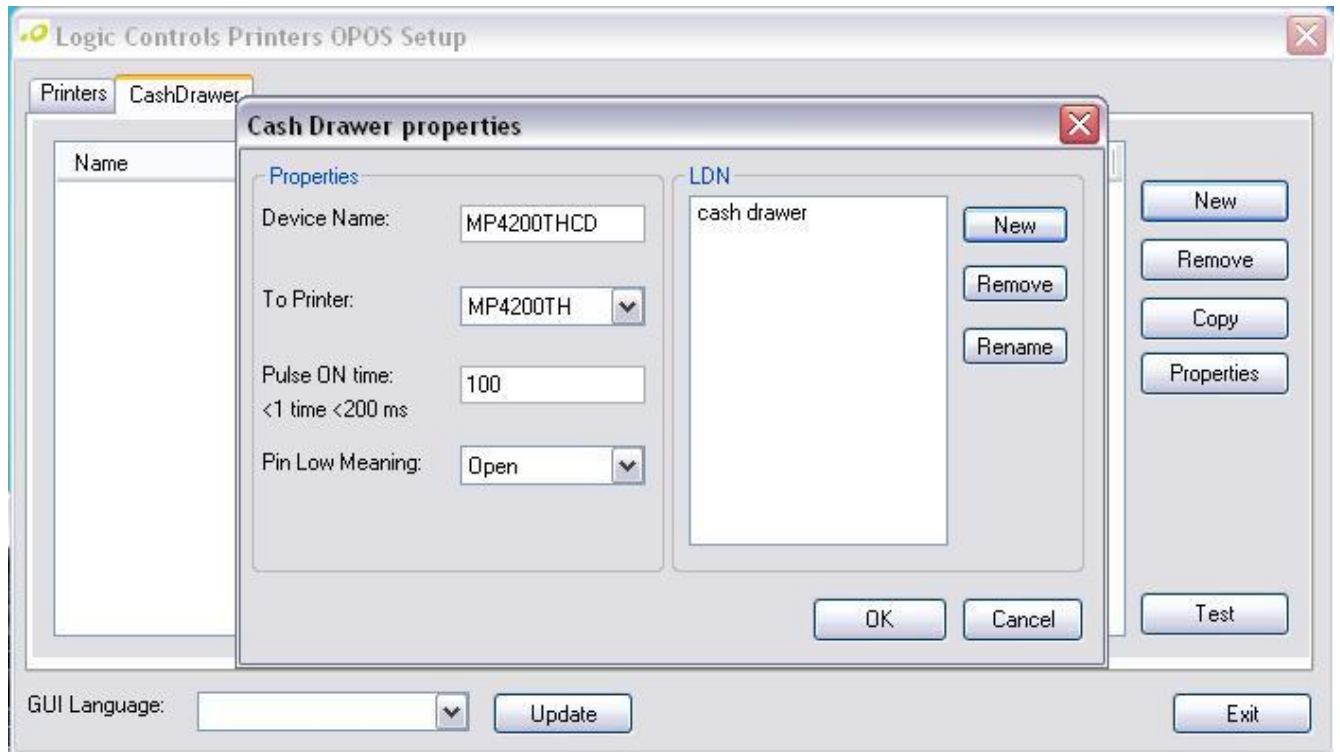

Step 6: Type an appropriate name for the cash drawer



Step 7: Click **OK** then **Test**. If successful click **OK** and exit the program.

Setting up the printer with CornerStore

Open CornerStore and log in. Go to **Setup -> Hardware Setup -> Printers**. Then under Receipt Printer select the MP4300TH.



Then open up the **Cash Drawer Tab** and select the MP4200TH Cash Drawer

