 
 
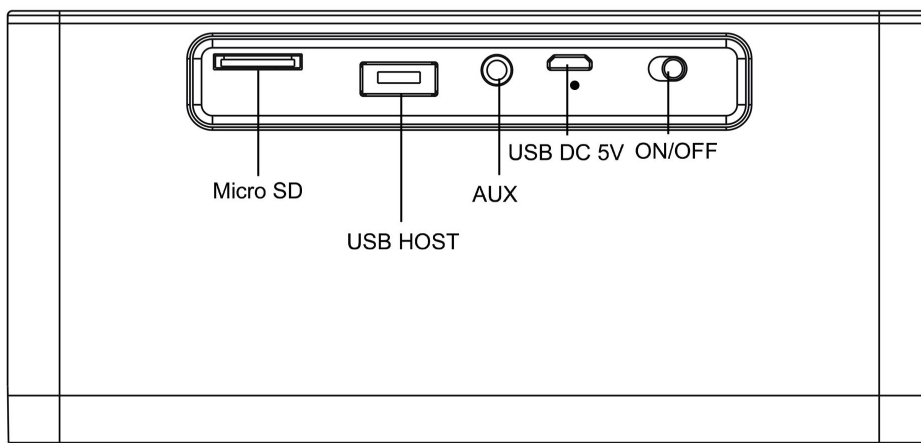 


## Product appearance

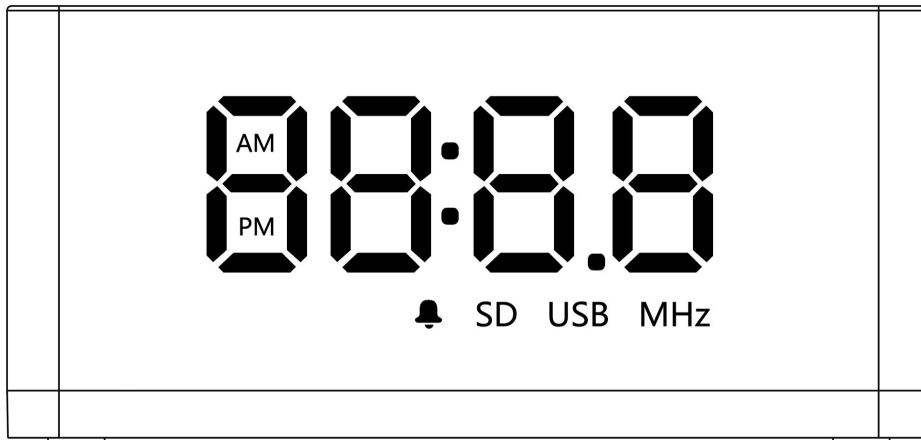

## KEY DEFINATION

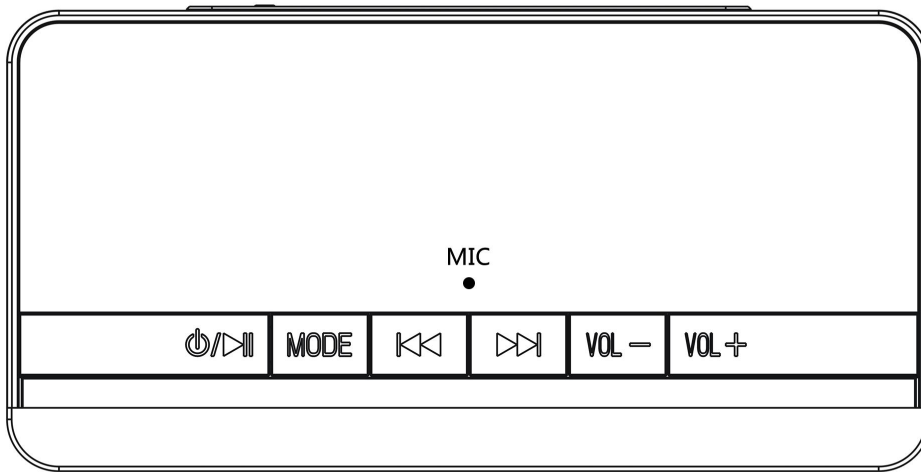

1. “⏻/⏸” key: long press to turn on or turn off speaker. In music mode, short press to let music play or pause. In hands free mode, short press to hang on/ hang off calling.
2. “MODE” key: short press to choose mode; In FM radio mode, long press to search channels; in clock and calendar mode, long press to set time.

3. "⏮" key: short press to last song; long press to fast backward; Change 12/24 hours mode when in clock mode
4. "⏭" key: short press to next song; long press to fast forward; Change 12/24 hours mode when in clock mode



5. "V-" key: decline voice
6. "V+" key: increase voice
7. "switch" key: ON/OFF

### Power supply mode

1. (USB 5V) power supply
  2. build- in lithium battery power supply
- Charging supply mode

#### 1. Charging by lithium battery:

Connect USB cable with speaker, red indicator shines. After 5 hours, it reaches to full capacity.

#### 2. Lithium battery safeguard:

Please charge inner lithium battery once if speaker does not work for long time within two to three months, in avoid of battery autistic or battery leakage problems.

### Functional usage

Turn on/off switch button to ON, LED display show HI -

Modes: Clock mode- Calendar mode- Alarm mode-Bluetooth mode-MP3 mode-LINE IN mode-FM radio model

It enters Clock mode after you turn on:




### Clock mode

Short press "Mode" key, it enters clock mode from Bluetooth Mode. Long press "Mode" key, hour / minute shines on display. Then, short press "⏮" or "⏭" to set hour/minute.



After you set hour and minute, short press "MODE" key, you can set year/month/date.


Short press "⏮" or "⏭" to set them one by one.

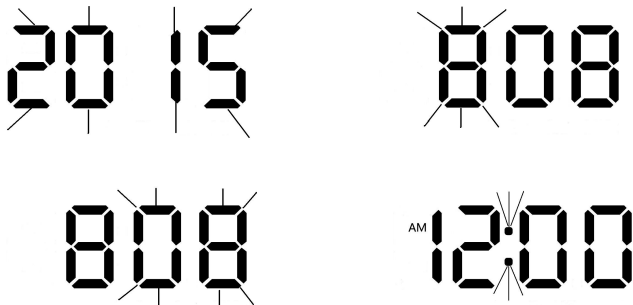

### Alarm Mode

Long press "MODE" key in alarm mode, it enters to alarm setting. The display shines an alarm icon, you can set

alarm time as you need.

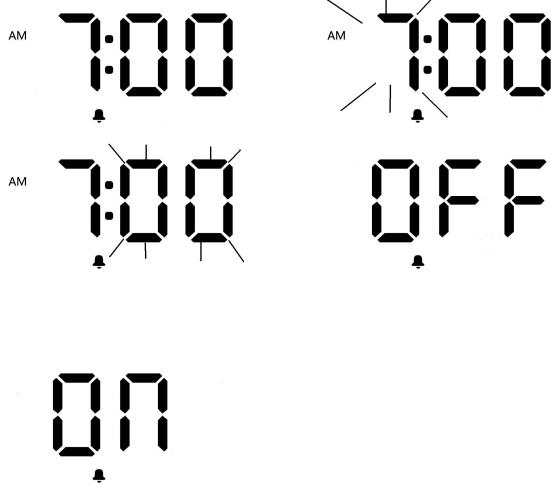

Press “MODE” key to turn on/ off alarm, repeat this key again to let it work. Standard alarm song is bird singing. It supports to other songs from external U-disk or TF card. (Pay attention to two steps: 1. Build a file, named as Alarm; Put one music to this file. Only first song will be alarm music, if there are many songs in the file.. 2. Keep external U-disk or TF card connect with speaker, which has alarm song file)

### Bluetooth Mode

1. Short press “MODE” key to enter to Bluetooth Mode
2. You can see “BLUE” on LED display and hear a voice

BLUE

3. Turn on Bluetooth device, such as cell phone/ MID/computer, connect it with a device named as “DY-27”. You will hear a voice after succeed.

### Multimedia speaker

#### In Music playing mode

Press “◀” key to select previous music .Press “▶” key to select next music.

Press “▶|◀” key to play / pause the music. Press “V+” key to increase the volume. Press “V-” key to decrease the volume. The User use Mobile phone to control the multimedia speaker

4. Handset and Hands-free MODE

The Bluetooth device has handset and Hands-free function. Press “▶|◀” key to answer a call. Press “▶|◀” key to hang up the call. When return Bluetooth mode, Bluetooth device and Mobile phone will paired automatically

### MP3 Mode

Press “MODE” key to select the other mode, when there is USB or TF card inserted, the mode will automatically turn to USB or TF card mode.

LED display show NO S, without external U-disk or TF card

NO d SCH

00:01 | 00:01  
 SD USB

**<AUX>LINE-IN**

1. Press "MODE" key to select Audio Input (Line / AUX) Mode. LINE-IN cable is inserted in the "AUX" socket to connect external player device or computer audio out.
2. Press "V+" key to increase the volume. Press "V-" key to decrease the volume

LINE

**FM MODE** (Built in internal antenna )

1. Short press "MODE" key to enter FM Mode from Line in Mode
2. Short press "◀" key to search station manually forward
3. Short press "▶" key to search station manually backward
4. Press and hold "MODE" key to search and store the FM station automatically
5. Press "▶◀" key to select the stored programmed FM station
6. Adjust the position of the device to get best quality receiving

87.5 MHz | P01

**Sleep Mode**

Short press "Mode" key, it changes to Sleep Mode from FM mod. Short press "▶◀" to set the time when it will be turn off. Time can be turn off directly/ in 15 minutes/ in 30 minutes/in 60 minutes/in 120 minutes, just work for once. It needs to be set again after you turn on speaker next time.

SOFF | 5 15

**FAQ**

No power	Check Lithium Rechargeable Battery which has power or not Check DC5V Plug which is plugged properly
No sound or Sound distortion	Check the level of volume which is not on zero status Check music file which is damaged or not .The damaged music file produce sound distortion and cannot played .Please keep the good music files. Check Lithium Rechargeable Battery which is not enough power
Device hang up	Switch OFF the power then Switch ON the power again or After Charging, Switch ON the power once again

**Specification**

DISPLAY	7 SEGMENT LED
Built in Lithium Rechargeable Battery	Play time :Max 3.5~ 6 Hours *According to the level of Volume
LINE-IN Audio in (AUX)	Max. input (L) 300mV+ (R) 300mV
	Output power 5W x2
MP3/WMA/APE/FLAC /WAV	MP3 Bit Rate 8K bps – 320K bps
	Signal noise Ratio(SNR) 70dB
	Signal Distortion <0.55%
Music Format	MP3/WMA/APE/FLAC/WAV
Operation temperature	-5 to 40 Celsius Degree

\* Product appearance, function and specification might change without prior notice.