

Instructions

MHP3132

Getting Started

1. Remove the battery compartment cover from the bottom of the unit, properly align and insert 2 AAA alkaline batteries, replace cover.
2. Uncoil the antenna and extend to its full length.
3. Plug the unit into an AC power outlet. The factory default time of 12:00 AM displays.

Note:

Backup batteries maintain time, alarm, and radio station pre-sets; however they do not power the display, nor trigger the alarm during power interruptions. For best results, replace batteries every 6 months.

Set Time

1. With the radio off, press and hold the **Time** button until the time display starts to blink, then release **Time** button.
2. Set the unit to the current time using the **Hr** (Hour) and the **Min** (Minute) buttons while time display is blinking.
3. When the current time is displayed, press the **Time** button to confirm. The display will stop blinking.

Note:

When the time display starts to blink, the seconds' timer re-sets to zero. If no buttons are pushed within 4 seconds, the unit will revert to previous settings. When setting current time, be careful to select AM or PM, as appropriate, by monitoring the PM indicator light.

Set Alarm

1. With the radio off, press and hold **AL1** (ALARM 1) button until alarm time starts to blink, then release **AL1** (ALARM 1) button.
2. Set Alarm 1 time using the **Hr** (Hour) and the **Min** (Minute) buttons while alarm time is blinking.
3. When the desired Alarm 1 time is displayed, press the **AL 1** (ALARM 1) button to confirm.
4. For Alarm 2, repeat the remainder of steps 1, 2, 3 with **AL 2** (ALARM 2) button.

Note:

When setting alarm times, be careful to select AM or PM, as appropriate, by monitoring the PM indicator light. If no buttons are pushed within 4 seconds, the unit will revert to previous settings.

Turn Alarm On

With the radio off, press **AL1** repeatedly to toggle between Buzzer and Radio alarm modes, as indicated by the buzzer alarm indicator or radio alarm indicator lights.

Disable/Cancel Alarm Function

With the radio off, press **AL1** or **AL2** buttons, as appropriate, until both the buzzer and radio alarm indicators are off.

Wake to Alarm

When the alarm sounds, the appropriate alarm indicator blinks. The buzzer alarm sounds at average volume. The radio alarm plays the most recently tuned station at the selected volume. Both alarm options sound for up to 1 hour.

Turn Alarm Off

1. Press the **Snooze/Sleep** button to temporarily suspend the alarm for 9 minutes.
2. To turn off the alarm, press On/Off button to re-set the alarm for the next day.

Listening to the Radio

Turning Radio On

Press **ON/OFF** to turn on the radio and toggle between AM and FM bands.

Auto station search and manual presets

With the radio on, press and hold the **T+** (Tune +) or the **T-** (Tune -) buttons. The unit will automatically locate the first strong station. When a desired station is found, press and hold the **M+** button, "P01" will blink on the display. Press the **M+** button to

enter it as a preset. Station frequency will display for few seconds. Same procedures apply for the next strong station. The unit can store up to 10 strong signal stations per band.

Manual station search and manual preset store

With the radio on, tap the **T+** (Tune +) or the **T-** (Tune -) buttons. The unit will increase or decrease the frequency incrementally with each tap. When a desired station is found, press and hold the **M+** button, the next preset number will blink on the display. Press the **M+** button to enter it as a preset. Station frequency will display for few seconds. Same procedures apply for other strong stations.

Listen to Preset Stations

With the radio on, press **M+** button to your desired station. The preset number and station frequency will be briefly displayed.

Adjust Volume

With the radio on, press the **V+** (Volume +) or **V-** (Volume -) buttons to adjust the volume level (00 – 16). The selected volume will be briefly displayed.

Turning Radio off

Press and hold the **On/Off** button for more than 2 seconds.

Radio Reception

Uncoil the antenna completely for best reception. Taping the uncoiled antenna to a wall may improve reception.

Sleep Function

With the radio on, press the **Snooze/Sleep** button repeatedly to select between 90 and 10 minutes (in 10 minute increments) of listening time. The radio will turn off after the specified time interval.

Troubleshooting

We offer 180 days unlimited warranty. If you encounter problems using this unit, check the following points, request service at sales@us-myehome.com, or contact Amazon Customer Service before leaving a feedback/review. It is our intent to ensure all problems are resolved.

No power

- Ensure power plug is connected properly
- Check that there is power to the outlet
- Unplug and plug the unit back in

No Sound

- Adjust the volume

Poor radio reception

- Move the unit away from TV or VCR
- Fully extend the antenna

Alarm does not work

- Ensure alarm indicator light is on.

Alarm goes off at midnight

- Change the alarm time (Factory default is 12:00 AM)
- Ensure alarm indicator lights are off

Single Alarm Function

- Disable/Cancel one set alarm

Thank you for your purchase. Have a wonderful day!

US MyeHome LLC