 
 


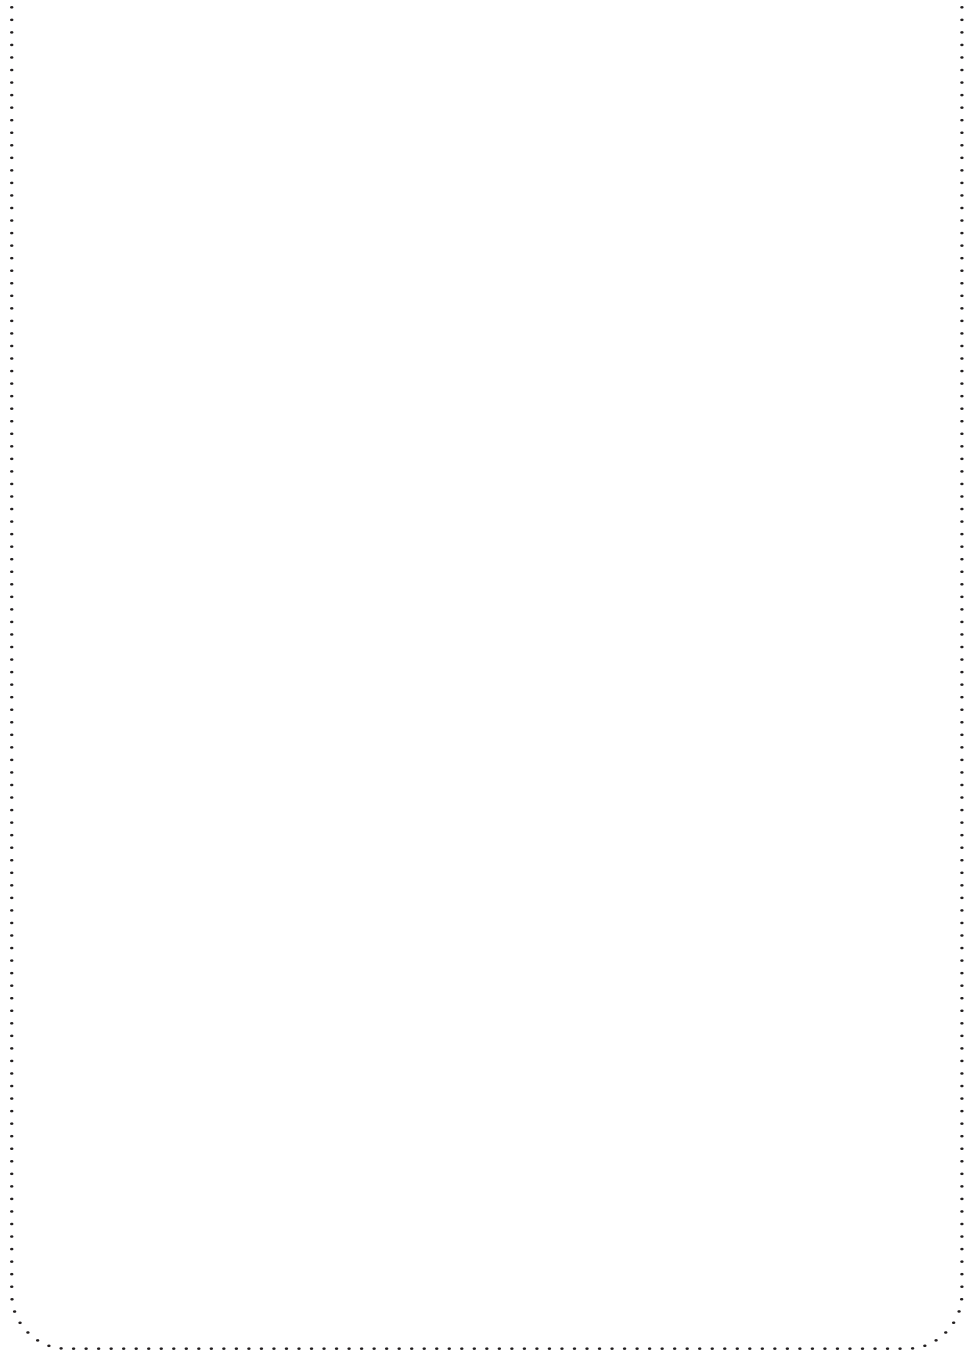

EN

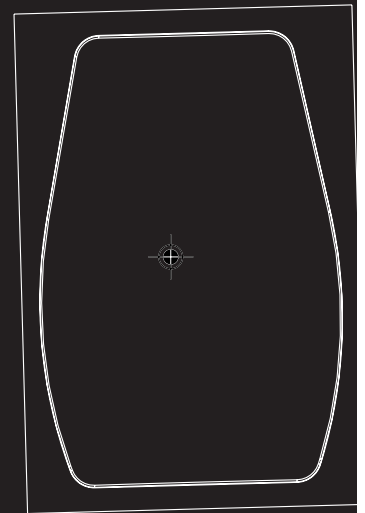



IMPORTADOR

Comercializadora Thomson de México, S.A. de C.V.
Miguel de Cervantes Saavedra 57
Col. Ampliación Granada
C.P. 11529 Mexico D.F.
Telefono: (55)25 81 53 20
RFC: CTM-980723-KS5

0151

EXPORTER

 
Thomson multimedia Inc.
P.O. Box 1976
Indianapolis, IN 46206 -1976
© 2002 Thomson multimedia Inc.
Trademark(s) ® Registered
Marca(s) ® Registrada(s)
Marque(s) ® Deposée(s)
55305520 (EN/F/E)
www.rca.com
www.rca.com/LatinAmerica
Printed In China / Impreso en China





RCA

u
s
e
r
m
a
n
u
a
l

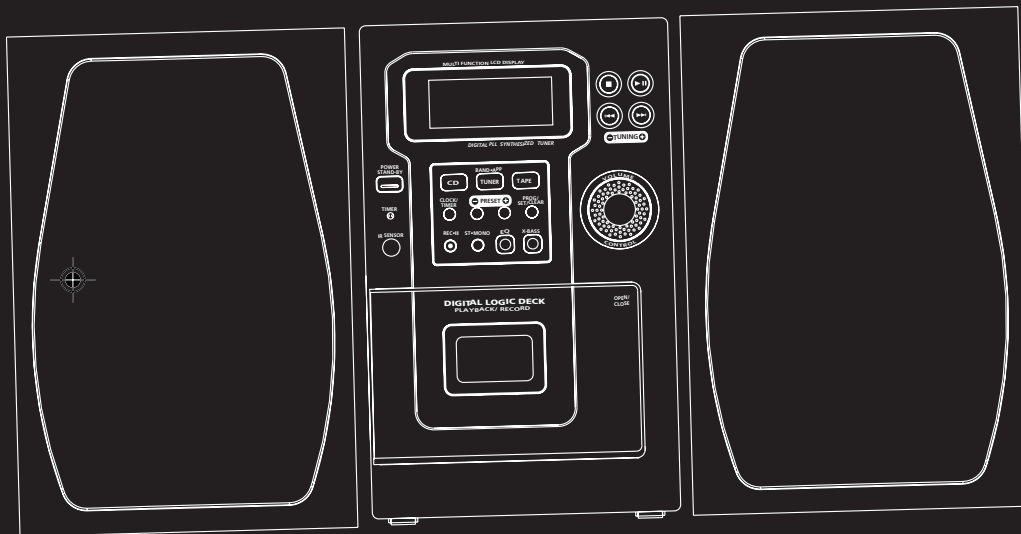

RS2001

It is important to read this instruction book prior to using your new product for the first time.
Es importante leer este manual antes de usar por vez primera su equipo.

FCC Information

EN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson multimedia could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by

turning the equipment off and on), try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.

 
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits. If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions.

Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J.

Applicable at the date of manufacture.

For Your Safety



The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way.

If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. **Do not attempt to bypass this safety feature.**

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Technical Specification

Product: Ultra Mini System

Brand: RCA

Model: RS2001

Electrical Consumption

Power Supply: 120V~60Hz

Power Consumption: 38 Watts

IMPORTER

Comercializadora Thomson de México, S.A. de C.V.




Miguel de Cervantes Saavedra 57

Col. Ampliación Granada

C.P. 11529 Mexico D.F.

Telefono: (55)25 81 53 20

RFC: CTM-980723-K55

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
SEE MARKING ON BOTTOM / BACK OF PRODUCT		

WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



Safety Information

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

- Model No.
- Date of Purchase
- Place of Purchase
- Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide

EN

Content

FCC Information	
Getting Started	1
CD Micro System	2
Remote Control	3
Settings	4
Tuner	5
Tape Deck	6
CD Player	7
Troubleshooting Tips	8
Maintenance	9
More Information	10
Limited Warranty	11

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a guarantee. In order to provide you with the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and operational details should any discrepancies arise in other languages.

Getting Started

EN

 
Unpacking Your System

You should have:


- One main unit (with 2 speakers);
- One remote control;
- One user's guide;
- Safety Leaflet
- Owner Registration Card

Installation

To ensure sufficient ventilation, keep the spacing shown as below:

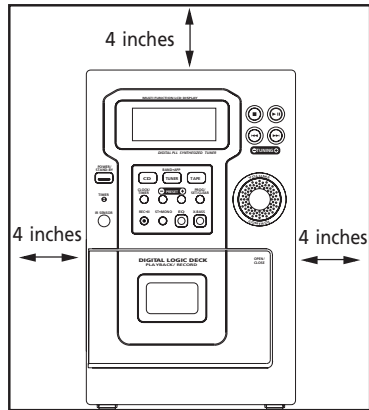


Front View

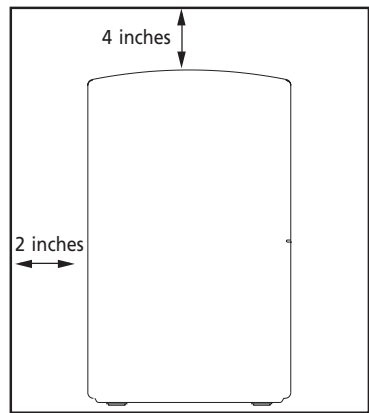 


Side View

Connecting the Speakers

 When connecting the speakers, match the red wires to the red jacks and the black wires to the black jacks. Each speaker has a black and a red jack, one for positive and one for negative. The top two jacks are for the left speaker, while the bottom two jacks are for the right speaker.

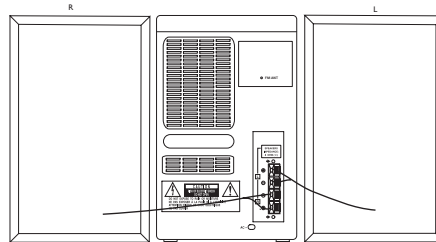

Speaker Wire Connection

 

Push Speaker terminal tab down to insert wire.

Release tab to lock wire in the terminal.

NOTE: Make sure the insulation is completely removed from the ends of the speaker wires at all connection points.

 
Using the Antenna

Before you use your audio system, you'll want to make sure the FM antenna is positioned properly. The FM antenna is the coiled wire connected to the back of the unit. Uncoil it, making sure it is fully extended (you may even want to tape it to the wall behind the unit, if possible. The higher, the better.)

For better AM reception, move or rotate the unit.

CD Micro System

EN

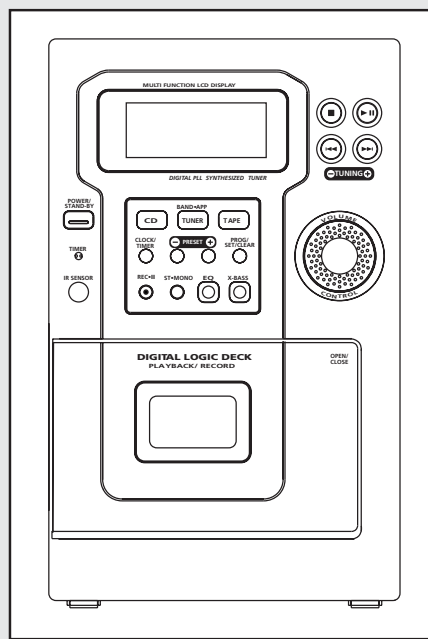

Front View

POWER/STAND-BY – Turns power on or off (Standby mode).

CD - Selects CD mode.

TUNER / BAND / APP – Selects tuner mode; selects radio band in tuner mode; begins auto preset programming.

TAPE – Selects tape mode.

CLOCK / TIMER - Shows clock time and timer on/off time; enters clock and timer setting mode; enable or disable timer mode.

PRESET - / + - *In tuner mode* - selects preset station.

PROG./SET/CLEAR – Enters program setting mode; confirms your settings; clears settings.

REC•II - Starts/pauses recording from CD / Tuner mode.

ST•MONO - *In Tuner mode* - Selects between stereo and mono mode in FM tuner.

EQ - Selects among different sound effects (flat / classic / rock / pop / jazz).

X-BASS - Enables / disables X-Bass

PLAY/PAUSE (▶||) – *In CD mode* - Plays and pauses CD playback.

In Tape mode - Plays and pauses tape playback.

STOP (■) - *In CD mode* - Stops CD playback.

 
In Tape mode - Stops tape playback.

TUNING - / + (SKIP BACKWARD ◀◀ / SKIP FORWARD ▶▶) – *In CD mode* - skips backward or forward to the other tracks.

In Tape mode - Rewinds or fast forwards tape.

In tuner mode -searches down or up radio frequency.

VOLUME CONTROL – adjusts the sound level.

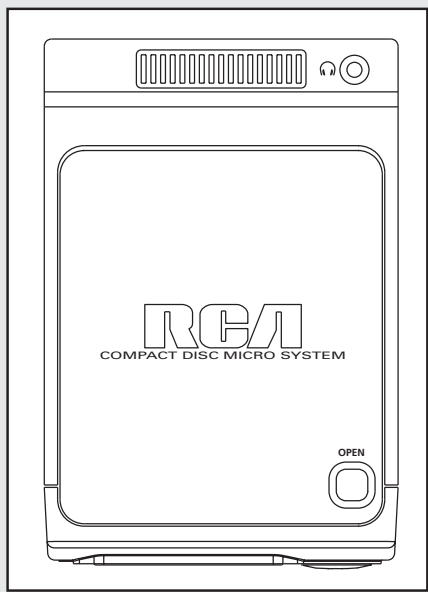

Top View

 
OPEN - Press to open the CD compartment door.

PHONES 🎧 - Jack for connecting headphones.

2

Remote Control

EN

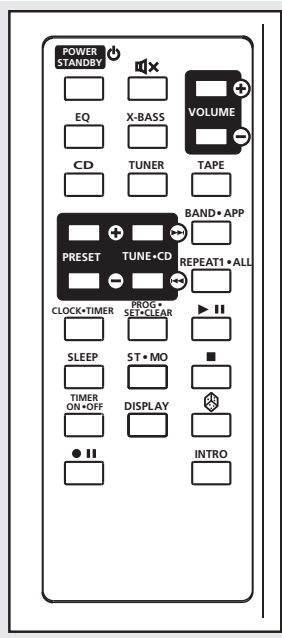

POWER/STANDBY - Turns the unit on/off

MUTE - Mutes volume.

EQ - Selects among different sound effects (flat / classic / rock / pop / jazz)

X-BASS - Enable and disables X-Bass.

VOLUME + / - - Turns up or down volume level.

CD - Selects CD player.

TUNER - Selects radio tuner.

TAPE - Selects tape player.

PRESET + / - - Selects next / previous preset stations.

TUNE•CD ◀ / ▶ - *In Tuner mode* - Searches down or up radio frequency.

In CD mode - Skips to the previous or next track.

BAND•APP - Selects radio bands; starts auto preset programming.

REPEAT1•ALL - *In CD mode* - toggles repeat options (repeat disc / repeat track / repeat off).

CLOCK•TIMER - Enters clock and timer setting mode.

PROG•SET/CLEAR - Enters program setting mode; confirms your settings; clears preset station in tuner programming mode; clears CD program in CD programming mode and resets tape counter in tape mode.

▶ || **PLAY/PAUSE** - *In CD mode* - Plays disc and pauses CD playback.

In Tape mode - Plays tape and pauses tape playback.

SLEEP - Selects sleep time.

ST•MO - Toggles stereo and mono mode in FM tuner.

■ **STOP** - Stops CD and tape playback.

TIMER ON•OFF - Enables and disables timer.

DISPLAY - *In CD mode* - toggles among displaying track elapse time, track remain time and disc remain time.

♻️ **SHUFFLE** - Selects random playback in CD mode.

● || **REC/PAUSE** - Starts recording or pause recording.

INTRO - Selects Intro play in CD mode.

Installing Batteries

The remote control must be inserted with 2 "AAA" or "UM-4" or "R03" batteries prior use. Follow the steps below to ensure correct installation.

1. Remove the battery compartment door (located at the back of the remote control) by sliding the compartment door in the direction of the arrow and then lifting the door out and off the cabinet.
2. Before inserting the batteries, observe the polarities (that is, + and -) of the battery, then relate the polarities to the engraved diagram inside the battery compartment. Now insert the batteries.
3. After installation of the batteries, replace and fit the lid to cover the batteries. Lightly push it closed with a snap.

3

Settings

Setting Clock Time

Manual Setting

1. Press **CLOCK/TIMER** to enter clock setting mode. CLK XX:XX will show on the display.
2. Press **TUNING -** or **+** to set the hour.
3. Press **PROG./SET/CLEAR** to shift to the minute digits.
4. Press **TUNING -** or **+** to set the minute.
5. Press **PROG./SET/CLEAR** to confirm the setting.

Setting the Timer

1. Press **CLOCK/TIMER** twice to enter timer on setting mode. ON XX:XX will show on the display.
2. Press **TUNING -** or **+** to set the hour.
3. Press **PROG./SET/CLEAR** to move to the minute digits.
4. Press **TUNING -** or **+** to set the minute digits.
5. Press **PROG./SET/CLEAR** to move to source selection.
6. Press **TUNING -** or **+** to select source (Tape / Tuner / CD / Rec TU)
7. Press **PROG./SET/CLEAR** to move to volume setting.
8. Press **TUNING -** or **+** to select desired volume level.
9. Press **PROG./SET/CLEAR** to move to timer off time setting. OFF XX:XX will show on the display.
10. Repeat steps 3-5 to set timer off hour and minute.
11. Press **PROG./SET/CLEAR** to confirm settings.

Timer will be activated automatically after settings are finished.

Activating the Timer

Press **TIMER ON•OFF** on the remote control or press and hold **CLOCK/TIMER** on the main unit for 2 seconds to activate and deactivate the timer function.

If clock time is not set, *SET CLK* will flash on the display when you try to activate the timer. Follow instructions under "Setting Clock Time" to set clock.

If timer settings have not been entered, *SET TMR* will flash on the display when you try to activate the timer. Follow instructions under "Setting the Timer" to enter timer settings.

If timer off time is set as the same as timer on time, *TIMER NG* will flash on the display. Set the correct timer off time again.

Setting Sleep Time

Press **SLEEP** on the remote control to toggle among OFF, 90, 80, 70, 60, 50, 40, 30, 20, and 10 minutes.

Sound Features


Preset Equalizer Curves

Press **EQ** to toggle among FLAT, CLASSIC, ROCK, POP and JAZZ.

X-Bass

Press **X-BASS** to turn on/off the x-bass feature.

Muting Audio

Press **MUTE**  to silence playback.

EN

Tuner

EN

Searching for a Station

1. Press **TUNER/BAND/APP** on the main unit or **TUNER** on the remote control to select radio mode.
2. Select a radio band by pressing **TUNER/BAND/APP** on the main unit or **BAND•APP** on the remote control:
FM – Frequency Modulation
AM = Amplitude Modulation
In FM band, **ST•MO** on the remote to select between stereo and mono sound.
3. Press **TUNING** - or + on the main unit or **TUNE•CD** ◀ or ▶ on the remote control to search for a radio station. To search automatically, press and hold **TUNING** - or + on the main unit or **TUNE•CD** ◀ or ▶ on the remote control for 1 second.
FM = 87.5 – 108 MHz,
AM = 520 - 1720KHz

Presetting a Station

1. Press **TUNER/BAND/APP** on the main unit or **BAND•APP** on the remote control to select band.
2. Press **TUNING** - or + on the main unit or **TUNE•CD** ◀ or ▶ on the remote control to select station to be stored.
3. Press **PROG./SET/CLEAR** to enter program mode.
4. Press **PRESET** - or + to select memory location (up to 30 memory locations). When you are selecting the preset location, the preset station number is flashing.
5. Press **PROG./SET/CLEAR** to confirm the setting.

 
Auto Preset Programming

Press and hold **TUNER/BAND/APP** on the main unit or **BAND•APP** on the remote control to scan stations in selected band. A maximum of 30 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button.
Press any button to stop scanning.

Listening to the Preset Station

1. Press **TUNER/BAND/APP** to enter tuner mode.
2. Press **PRESET + / -** repeatedly to locate your desired memory location.

Tape Player

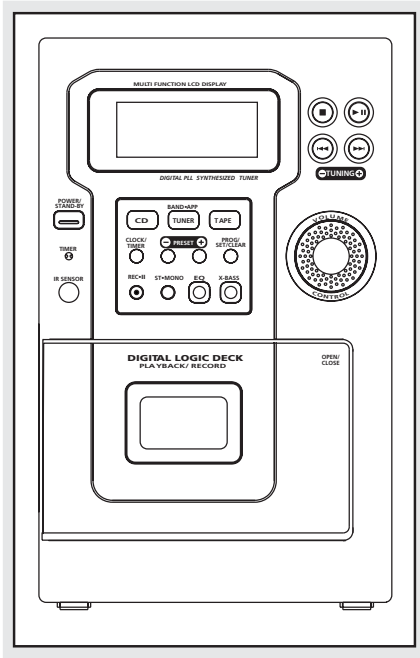

Playing Cassette Tape

1. Press **TAPE** to select tape mode.
2. Press on the **OPEN** area to open the deck door.
3. Load a cassette tape into the deck. Then, lightly press the deck door closed.
4. Press **PLAY/PAUSE** **▶||** to start tape play.
5. Press **STOP** **■** to stop.

Recording a Radio Program

EN

1. Press **TUNER/BAND/APP** on the main unit or **BAND•APP** on the remote control to select tuner mode and desired band.
2. Tune to the station you want to record by pressing **TUNING -** or **+** on the main unit or **TUNE•CD** **◀◀** or **▶▶** on the remote control.
3. Press **REC•II** on the main unit or **●||** on the remote control. The REC. icon will flash on the display. Press **REC•II / ●||** again to start recording.
4. Press **STOP** **■** to stop recording. Press **REC•II / ●||** to pause during recording. To resume recording, press again.

Recording a CD


1. Press **CD** to select CD mode.
2. Press **SKIP BACKWARD** **▶▶** or **SKIP FORWARD** **◀◀** to select the track that you want to record.
3. Press **REC•II** on the main unit or **●||** on the remote control to record. The REC. icon will flash on the display. Press **REC•II** or **●||** again to start recording. CD automatically start playback at the same time.
4. Press **STOP** **■** to stop recording

Reset Tape Counter

Press **PROG./SET/CLEAR** to reset counter.

CD Player

 EN

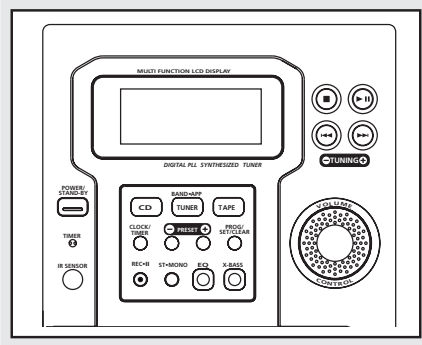

Loading and Playing CDs

1. Push lightly to open the CD door. Load a CD (with labeled side facing up) into the CD compartment. Then, close the door by pushing it down lightly.
2. Press **CD** to select CD mode and the power will be turned on automatically.
3. Press **PLAY/PAUSE** ►|| to play and pause CD playback. You may:
 - skip to other tracks by pressing **SKIP BACKWARD** ◀◀ or **SKIP FORWARD** ▶▶. Press and hold **SKIP BACKWARD** ◀◀ or **SKIP FORWARD** ▶▶ to search.
 - press **REPEAT 1•ALL** on the remote control once to repeat all tracks. **REPEAT** is shown in the display simultaneously. Press again to play a particular track repeatedly, at the same time, **REPEAT 1** is displayed. Press a third time to de-select the function.
 - Press **STOP** ■ to listen to the tracks randomly.
4. Press **STOP** ■ to stop playback.

Tip: If the CD compartment is not loaded with a CD or the CD is unreadable, the message "NO DISC" will be shown.

Setting Intro Play

Intro Play lets you enjoy the CD tracks for 10 seconds. When the last track has played for 10 seconds, the Intro Play stops.

1. Follow step 2 and 3 of "Loading and Playing CDs" above.
2. Press **INTRO** on the remote control and the **INTRO** icon will be shown.
3. Press **PLAY/PAUSE** ►|| to start playback from the first track. Press **SKIP BACKWARD** ◀◀ or **SKIP FORWARD** ▶▶ to select a particular track.
4. Press **INTRO** again to exit intro play.

Programming

1. Select CD mode by pressing **CD**.
2. Press **PROG./SET/CLEAR** after the CD has been loaded into the system. The message "0 PR 1" will be shown on the display and PROG. flashes.
3. Press **SKIP BACKWARD** ◀◀ or **SKIP FORWARD** ▶▶ to select a track to be stored into memory location 1.
4. Press **PROG./SET/CLEAR** to confirm your selection and store that track into memory. Repeat step 3 and this step to store additional tracks. A maximum of 20 tracks can be stored into memory.
5. Press **PLAY/PAUSE** ►|| to run the preset program. When the unit is playing the program, "PROG" icon will be displayed.
6. Press **PROG./SET/CLEAR** in CD programming mode and press and hold **STOP** ■ to clear the stored program.

Notes to CD-R/W

This unit is compatible with CD-RW/ CD-R discs for playback.

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/W disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/W disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/W disc into the unit. This may take a longer time to read the disc.
- **Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.**



Troubleshooting Tips

EN

Problem	Solution	Problem	Solution
<i>System will not turn on</i>	<ul style="list-style-type: none"> • Check power cord for a secure connection. • Unplug the unit for a moment, and then plug into power source again. • Check the outlet by plugging in another device. 	<i>CD button will not respond, or does not change discs when you press DISC SKIP</i>	<ul style="list-style-type: none"> • Switch to another function (TAPE, Tuner) and then back to CD.
<i>No sound</i>	<ul style="list-style-type: none"> • Increase the volume setting. • Check connection to speakers. • Check that you have selected the appropriate function: CD, TAPE, Tuner. • Make sure mute is off. 	<i>Distorted or noisy tape recordings</i>	<ul style="list-style-type: none"> • Inspect the tape head, clean it if necessary.
<i>Poor radio reception</i>	<ul style="list-style-type: none"> • Check antenna connection. • Move antenna. • Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights. 	<i>Remote control does not work</i>	<ul style="list-style-type: none"> • Check that the batteries are properly installed. • Replace weak batteries. • Check that the system is plugged into power source. • Point the remote directly at the system's front panel. • Move closer to the system. • Remove any obstacles between the remote and the system.
<i>CD does not play</i>	<ul style="list-style-type: none"> • Check that CD is in the tray. • Check that CD label is facing up. • Check that PAUSE mode is not on. • Check that CD function is selected. • Use CD lens cleaner. • Clean the disc. 		
<i>CD sound skips</i>	<ul style="list-style-type: none"> • Clean the disc. • Check disc for warping, scratches, or other damage. • Check if something is causing the system to vibrate. If so, move the system. • Make sure the speakers are at least 3 feet away or on a different surface from the main unit. 		

Maintenance

EN

Disconnect the audio system from the power source before performing any maintenance.

Cleaning

Clean the exterior of the system using a soft dust cloth.

 
CD Player

CAUTION! This system operates with a laser. It must be opened by only a qualified technician.


Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

To protect recordings on one or both sides of a tape, remove the corresponding tab. If you later want to record on the tape, affix a piece of adhesive tape over the hole.



 Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

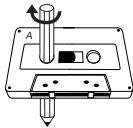

Handling CDs

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs

Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface

CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.



More Information

EN

Safety Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping and splashing.

Headset Safety



Have a Blast-Just Not in your eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone is in place.

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
- If you experience ringing in your ears, reduce volume or discontinue use.

- You should use with extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
 - if mixed with a different battery type,
 - if inserted incorrectly,
 - if all batteries are not replaced at the same time,
 - if disposed of in fire, or
 - if an attempt is made to charge a battery not intended to be recharged

Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for which it is not intended is unlawful and therefore not condoned by Thomson multimedia.

Technical Specification

Power supply: 120V~60Hz
 Dimensions (H x W x D inches):
 Unit size - 9.3 x 5.7 x 8.8
 Speaker - 9.3 x 6.3 x 6.5
 Tape deck: Response curve: 125Hz-8kHz (-5dB)
 CD player: Response curve (+/- 2dB): 60Hz to 20 kHz
 Rating Plate: Look for it at the back of the set.



Limited Warranty (U.S.)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts

^a The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside the U.S.A.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



Limited Warranty (U.S.)

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How State Law relates to warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

If you purchased your unit outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.



Limited Warranty (Canada)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.



Limited Warranty (Canada)

EN

Limitation of Warranty:

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

• REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How Provincial Laws relates to warranty:

• This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from Province to Province.

If you purchased your unit outside Canada:

• This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.