 


Rev.1

EN - cover with new nom address and sentence  
F - updated warranty page with new phone number

# RCA

EXPORTADORA UNIPART

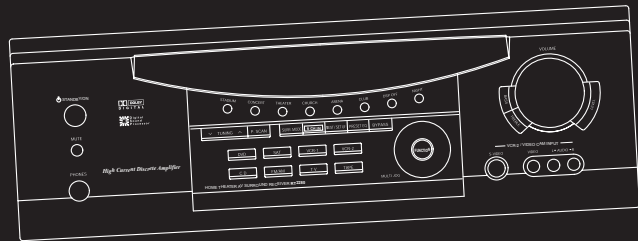

IMPORTADOR  
Comercializadora Thomson de Mexico, S.A. de C.V.  
Miguel de Cervantes Saavedra 57  
Col. Ampliacion Granada  
C.P. 11529 Mexico D.F.  
Telefono: (55)25 81 53 20  
R.F.C.: CTM-980723-KS5

0151

EXPORTER  
Thomson multimedia Inc.  
P.O. Box 1976  
Indianapolis, IN 46206 - 1976  
© 2002 Thomson multimedia Inc.  
Trademark(s) © Registered  
Marca(s) Registrada(s)  
Marque(s) Déposée  
55403750 (EN/F/E)  
www.rca.com  
www.rca.com/LatinAmerica  
Printed in China / Impreso en China

## RT2580

It is important to read this instruction book prior to using your new product for the first time.  
Es importante leer este manual antes de usar por vez primera su equipo.

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Multimedia Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

 
- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

### For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.



**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

### For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.

Remote Control No.

Date of Purchase

Place of Purchase

Serial No.

### Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide

## Table of Content

### FCC Information

#### Getting Started

Unpacking the Receiver	2
Unpacking the Speakers	3
Inserting Batteries into Remote Control	3
Set Up and Maintenance of the Receiver	3
Protect your Components from Overheating	3
Connecting to Audio-Visual Components	4
Digital Connection	5
Connecting Antennas	5
Connecting the Speakers	6
Connecting the Subwoofer	6
Positioning your Speaker	7
Front Speaker Placement	7
Surround Placement	8
Advanced Surround Setting	8
Test Tone / Channel Balance	9
Connecting for Power	9
Using Headphones	9
Factory Setting	9

#### Operating your Receiver

Receiver Controls	10
Your Remote Control	11
Display	12
Switching On/Off	13
Selection of Audio/Video Source	13
Using the Remote to Control Additional Components	14
Using the receiver to play a Source	15

#### Advanced Sound Control

Sound Enhancement Systems	19
Fine Setting of Components	20
Fine Setting of the Speakers	21
Advanced Setting	21

### Care and Maintenance

 
Troubleshooting Tips	23
Receiver/Tuner Operation	23
Remote Control Operation	23
General	23
Cleaning the Exterior	23
Equipment Specifications	23

### Remote Codes

Cable Codes	24
VCR Codes	24
TV Codes	25
Satellite Receivers	26
Audio (RCA only)	26
Laser disc Players	26

### Limited Warranty (US) . . . . .27

### Limited Warranty (Canada) . . . . .28

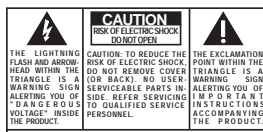

THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.


CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

## Getting Started
 
### Unpacking the Receiver

You should receive the following items:



One receiver unit



One pair of "AA" batteries



One RCA Universal Remote Control



 
One external FM Dipole antenna




One external AM loop antenna



one audio cable (two wires) with red and white RCA connectors;

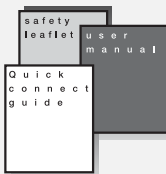

 - one instruction book;
- one safety leaflet;
- one Quick Connection Guide




one video cable (single wire) with yellow RCA connectors;


2

### Unpacking The Speakers

 - one set of speakers including 2 left and right front speakers, 1 centre speaker, 1 subwoofer and 2 left and right rear speakers.

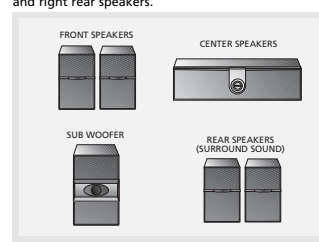


- 6 speaker cables including:

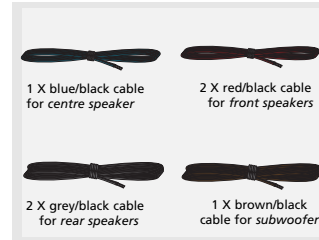 

### Inserting Batteries into Remote Control

 Insert two AA(R6) batteries according to the + and - signs on the battery compartment. To use the remote control, point it directly at your receiver.

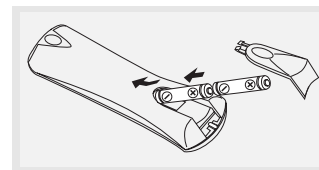


## Getting Started

### Set up and Maintenance of the Receiver

EN

 - Provide spaces for sufficient ventilation as indicated:

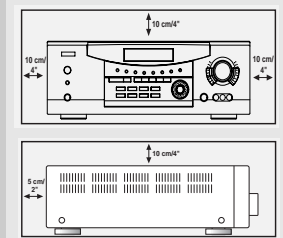

- Do not connect to the AC power cords until all connections are completed.
- Do not use your set immediately after transferring it from a cold place to a warm place: there is risk of condensation.
- Do not expose your set to water and excessively high temperatures.
- After having disconnected your set, clean the case with a soft cloth, or with a slightly damp leather chamois. Never use strong solvents.


### Protect your Components from Overheating

 - Do not block ventilation holes in any component. Arrange the components so that air can circulate freely.
- Do not stack components directly on top of each other.
- Allow adequate ventilation when placing your components in a stand.
- Place an amplifier near the top shelf of the stand so heated air rising from it will not affect other components. If you have a satellite receiver, you should place it on the top shelf.

3

# Getting Started

## Connecting to Audio-Visual Components

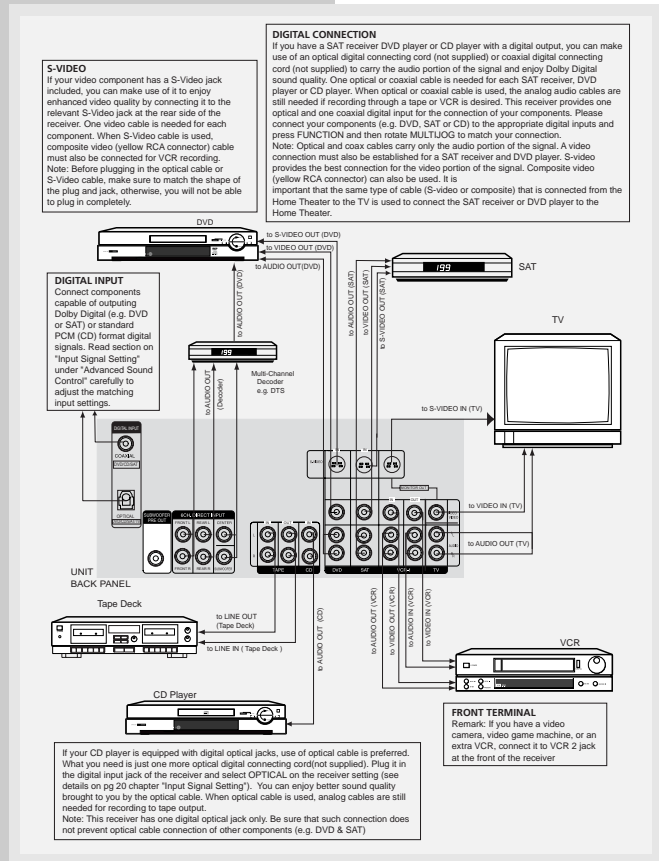


# Getting Started


## Digital Connections

Read instructions carefully when connecting components to the receiver.

 Digital In Jacks can accept Dolby Digital (AC-3), or PCM signals when compatible components are connected.

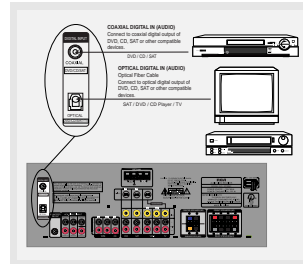


## Connecting the Antennas

 


The AM and FM antennas connect to the AM and FM terminals on the system's back panel.

They must be hooked up in order to receive clear reception.

 - AM Loop Antenna and FM Indoor Antenna**
1. Uncoil the Antenna wire and located the base end
  2. Press down on the Antenna tab to open the terminal

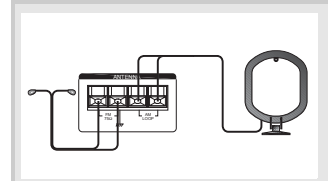


### AM Loop Antenna

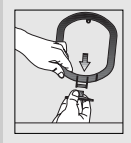 

### HINT

- For FM reception, extend antenna to its full length and arrange the Antenna as a T Shape
- For AM reception, rotate the antenna horizontally to get better reception.

 
### Antenna and Speaker Wire Connection



**NOTE:** Make sure the insulation is completely removed from the ends of the Antenna and speaker wires at all connection points.

## Getting Started
 
### Connecting the Speakers

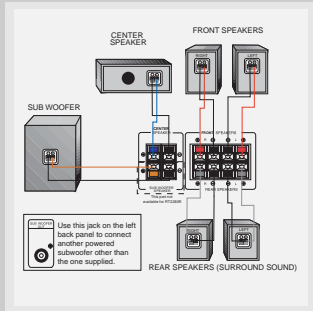

### Speakers

 
There are 6 speakers equipped with the unit (2 front, 1 center, 2 rear, 1 subwoofer). In order to enjoy good surround effects all six speakers need to be connected to the receiver

At least two front speakers (left and right) are required. For better sound quality, Center speaker, rear speakers and Subwoofer should also be connected. Adding center and rear speakers will enhance surround effects. Adding a Subwoofer will increase bass response.

If you want to enjoy full range of sound effects, with small speakers, it is a must to use the subwoofer with the speakers to maintain adequate bass signal.

### Speaker cords

1 for each speaker, is needed for connection. Twist the stripped ends of speaker cord about 2/3 inch (15 mm). Press down on the tab to open the terminal and insert the wire. Snap the tab closed.

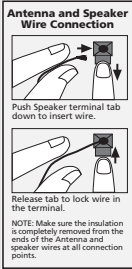

To ease speaker connections, the speaker cords and the terminals are color-coded.

- Red/Black (Front Speakers),
- Blue/Black (Center Speaker)
- Grey/Black (Rear Speakers),
- Brown/Black (Subwoofer)

Connect the L, R speaker (with red/black terminal) on the back of the speakers to the corresponding color on the receiver. Do the same for center (with blue/black terminal), rear speaker (with grey/black terminal) and the subwoofer (with brown/black terminal).

### Speaker Polarity

When connecting the speakers, make sure the polarities (“+” speaker wire to “+” on the receiver) of speaker wires and terminals are matched. If the cords are reversed, the sound will be distorted and will lack bass (“out of phase” effect).

### Connecting the Subwoofer

For RT2580, connect the subwoofer with the speaker cord (brown/ black) provided. For RT2580, or if you want to connect your own powered subwoofer, a mono aural audio cord (not supplied) is needed (RCA terminal).

This receiver offers a high flexibility for user to use a large variety of speakers and subwoofers. For more information please refer to section “Fine Setting of the Speakers” in “Advanced Sound Control” on page 21.

### Positioning your speaker

#### 1 Left, Right (Front Speakers)

They carry primarily music and sound effects

#### 2 Center

In surround mode, the center speaker carries much of the dialogue as well as music and effects. It should be set between the left and right speakers.

#### 3 Surround (Rear Speakers)

Their overall sound balance should be as close as possible to the front speakers. Proper placement is vital to establish an evenly distributed sound field.

 
### Subwoofer

A subwoofer is designed to reproduce powerful low bass effects (explosions, the rumble of spaceships, etc.) which dramatically heightens involvement with the action on the screen. It is therefore recommended to connect subwoofers when small speakers are used.

### Magnetic shielding

Speakers placed less than two feet from the TV set must be magnetically shielded in order to prevent picture distortion. Front and center speakers provided with RT2580 are magnetically shielded to protect your TV set.

It is not recommended to place the rear speakers near the TV set.

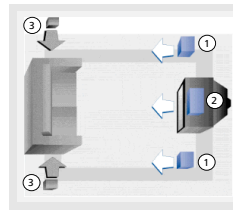


### Front Speaker Placement

Even if you can't duplicate this ideal home theater setup exactly, the suggestions for speaker placement that follow will help you get good results.

## Getting Started

### Alignment

 
Align the center speaker evenly with (A), or slightly behind (B), the left and right speakers, but not ahead of them.

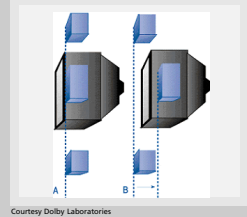

### Advanced Setting


#### Angle

 Placing the left and right speakers to form a 45-degree angle with your favorite viewing position will duplicate the soundtrack mixer's perspective.

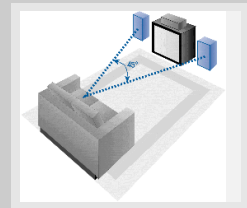

#### Height

 The mid- and high-frequency drivers of the three front speakers should be as close as possible to the same height. This often requires placing the center speaker directly atop (A) or beneath (B) the TV set.

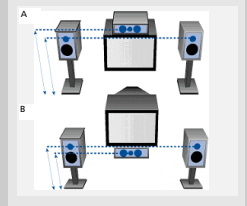


## Getting Started

### Preferred surround placement

#### Location

 
If possible, place surround speakers to either side of the listening area, not behind it.

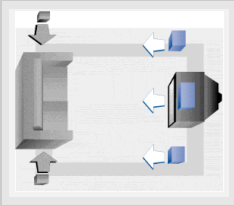

Courtesy Dolby Laboratories

#### Height

 
If space permits, install surrounds 2-3 feet above viewers. This helps to minimize localization effects.

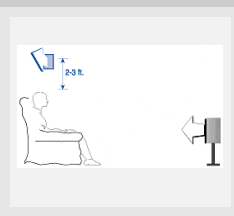

Courtesy Dolby Laboratories

#### Aiming

 Aiming surrounds straight across the room, not down at viewers, helps create a more open, spacious surround sound field.

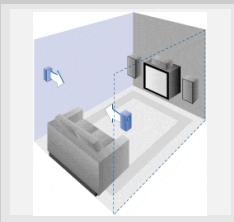

Courtesy Dolby Laboratories


8

### Advanced Setting
 
#### Alternative Surround Placement

#### Rear wall


If rear wall mounting is the only choice, aim the speakers at each other (A), towards the front (B) or even towards the sidewalls (C, D). Experiment with placement until surround sounds seem to envelop you, rather than coming from behind you.

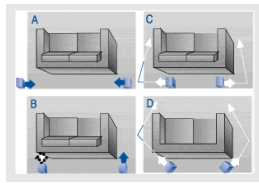

Courtesy Dolby Laboratories

#### No adjacent walls

 Surrounds can go on stands facing each other to approximate the preferred sidewall mounting (A), or to the sides or rear of the viewing area aimed upwards. In the latter case, they can go right on the floor, or preferably, a few feet off the floor such as on end tables (B).

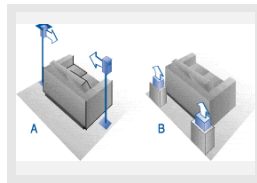


Courtesy Dolby Laboratories

### Test Tone / Channel balance
 
#### Channel balance

Your receiver is equipped with a test signal generator for balancing the channels. As the signal "travels" from channel to channel, adjust the level controls until each channel plays at the same loudness level. (details see operation of test/setup)

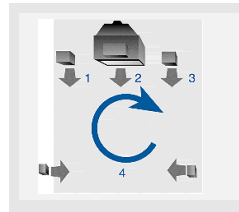

Courtesy Dolby Laboratories

#### Level adjustment & surround channel level expectation

Even though you adjust the surround channel to be as loud as the others on the test signal, you'll find that on actual program material the surround channel is usually much lower than the front. Don't be tempted to readjust the surround level; program producers use surround mostly for subtle atmospheric and ambience, and only rarely for special effects. A good surround mix doesn't call attention to itself; if it did, it would soon become distracting.

### NOTE

The system is equipped with Dolby Digital, and manufactured under license from Dolby Laboratories.



Dolby Digital  
Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Copyright 1992-1997 Dolby Laboratories, Inc. All Rights Reserved.

## Getting Started

### Connecting for Power

Make sure you connect all your other electronic components and the speakers before plugging your receiver into the outlet. Plug the power cord in the wall outlet, matching the wide blade of the plug with the wide slot in the outlet. Be sure to insert the plug completely.



### Using Headphones

To listen privately through your audio system, use the PHONES jack on the receiver. However, make sure you turn down the volume before you put on the headphones. Increase the volume to the desired level after headphones are in place.



Once headphones are connected, "HEADPHONE DOWNMIX 2 CHANNEL" will scroll on display. This feature automatically converts multi-channel speaker outputs to 2 channel stereo for your listening pleasure.

### Hearing Comfort & Well-Being

- Do not play your headset at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.

### Factory Setting

The RT2580 is preset to the following setting when you first time turn on the power  
Function = Tuner  
Surround mode = Stereo (Left + Right (small) + sub-woofer on)  
Volume setting = 25 dB  
Bass & treble = 0 dB

### Restore to Factory Settings

You can always restore all settings back to its original state. When the receiver is in STANDBY mode, press accordingly to restore all settings back to factory default :

 
STADIUM → NIGHT → DSP OFF → CLUB

### NOTE

All preset radio stations and surround sound setting will be lost after factory setting is restored.

9

## Operating Your Receiver

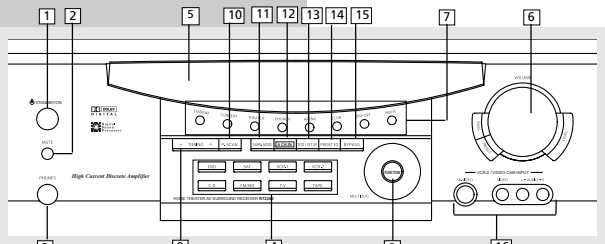

### Receiver Controls

#### 1. STANDBY/ON

To turn the unit on/off. When the system is turned on, the unit will go to the mode it was in before power off.

#### 2. MUTE

To mute all audio outputs.

#### 3. PHONES

Plug your headphones (not supplied) into it for your private enjoyment. Speakers will be off when phones are inserted.

#### 4. Source Buttons

To select sound source. For example, CD, SAT etc.

#### 5. Display

To display current status of the receiver.

#### 6. Sound Control

Let you adjust the sound – volume, treble, bass & balance.

- To change the VOLUME, turn the large central knob.
- To adjust TREBLE or BASS, press relevant button and turn the knob.
- To change the volume of individual speaker, press LEVEL button repeatedly to select the speaker, then turn the knob to adjust the level. (refer to "The TEST/SET UP button" on page 21)

#### 7. DSP (Digital Sound Processor) & NIGHT mode

Press corresponding button to select the DSP mode (STADIUM/ CONCERT/ THEATER/ ARENA/ CHURCH/ CLUB/ OFF) you want.

Press NIGHT for your enjoyment at night (see page 20).

#### 8. MULTI JOG, FUNCTION

When pressing FUNCTION repeatedly, the display will toggle among Audio Source (for DVD, SAT & CD), SLEEP mode and DIM selection.

Please refer to page 20 for "Input Signal Setting".

- In SLEEP mode, you can set the receiver to turn off after 30, 60, 90 or 120 minutes.

- In DIM selection, you can rotate to set the brightness of the display. Such setting will be stored.
- Use MULTI JOG for speakers and sub-woofers setup and preset radio stations selection.

#### 9. TUNING

Press for about 2 seconds to activate Automatic Preset function. Press once to review all preset stations.

#### 10. P. SCAN (Preset Scan)

- Press and hold for about 2 seconds to start the automatic tuner station preset.
- Press to view preset stations one by one.

#### 11. SURR. MODE

Press repeatedly to select the surround mode you want. (refer to "Advanced Sound Control" on page 20.)

#### 12. 6 CH (6 Channels External Input)

Press to select the input connected to an external 6-Channel decoder. Press again to return to the most recently selected source mode. (see 6 Channel External Input on page 11).

#### 13. TEST/ SET UP

When pressing it briefly, a short noise (test tone) will be generated in the speakers one by one so that you can adjust the volume of individual speaker. When keep pressing for two seconds, it will enter setup mode for speakers and subwoofers. Rotate the MULTI JOG to choose the options. (refer to "The TEST/SET UP button" on page 21.)

#### 14. PRESET EQ

Press repeatedly to select the desirable EQ mode (music style) – CLASSIC, POP, ROCK, JAZZ, VOCAL or FLAT. Your choice will be saved automatically.

#### 15. BYPASS

 
Press to go back to stereo sound (no DSP effect, no sound from center and surround speakers)

#### 16. VCR2/Video Cam Input

For convenient use of your digital camera, family game machines, second VCR, etc.

### Your Remote Control

Please be sure you have inserted the batteries into the remote control (see relevant section on page 3.) You can test it by pressing any button. If it works, the red LED will light.

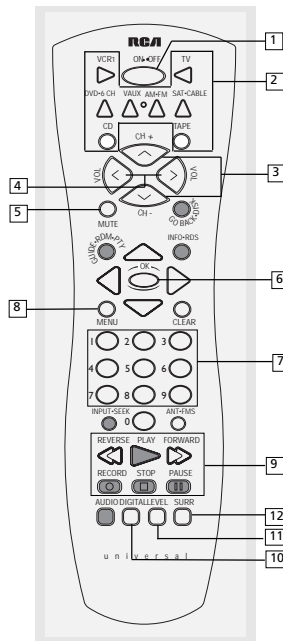

### NOTE

The remote buttons GO BACK\*DISK, GUIDE\*RD\*PTY, INFO\*RDS, INPUT\*SEEK & AUDIO do not work in tuner mode.

## Operating Your Receiver

### 1. ON/OFF

To turn on or off the receiver and other auxiliary components (see page 14 "Using the Remote to Control Additional Components").

### 2. Source Buttons

To turn on and select various audio/video sources. You can also enter the 6 Channels direct input mode by pressing DVD\*6CH.

### 3. CH-, CH- (Channel Buttons)

To select programmed stations (in TUNER mode).

### 4. VOL. (Volume Buttons)

To adjust the volume.

### 5. MUTE

To mute all audio outputs.

### 6. Adjustment Buttons

Press AUDIO button to activate the control, then upon pressing OK/FUNCTION, the display will toggle among:

- Preset EQ (Stereo only),
- SLEEP Mode
- DIM Mode

When the display shows the setup you want to change, press the left and right arrow buttons beside OK button to make changes, then press OK to finalize your choice.

### 7. Number Buttons

To access directly a pre-set station or to peripheral devices (in TUNER mode).

### 8. MENU (Tuner Mode only)

- Press AM/FM
- Press to store desired frequency in memory. The flashing word MEMORY in red will appear in display. Input your desired channel number while the word is still flashing and the frequency will be stored. (For details, refer to "Storing and Recalling Stations in Memory" on page 10.)

### 9. Operation Buttons

In TUNER mode, press AM/FM on the remote.

- Press REVERSE and FORWARD keys to tune down or up the radio frequency.
- PLAY, RECORD, STOP and PAUSE keys are only for easy control of external devices that are connected to your receiver such as CD, TV, DVD, TAPE, etc. The remote control currently operates most Thomson, RCA and GE products, but it can be programmed to operate devices from other manufacturers (For details, refer to "Using the Remote to Control Additional Components" on page 14).

### 10. DIGITAL

Select the way your audio/video components are connected to the receiver (Analog, Optical, Coaxial or Input/Output).

### 11. LEVEL

Press to adjust the volume of individual speaker. Press repeatedly and the display will toggle among different channels (Left front speaker, Right front speaker, Center speaker, Left rear speaker, Right rear speaker, and Subwoofer). Press the left and right arrow buttons beside OK button for adjustment.

### 12. SURR (Surround Sound Control)

 
Press to change the surround sound settings. The display will toggle among DOLBY DIGITAL, DOLBY PRO LOGIC, DOLBY 3 STEREO, STEREO and DSP modes.

(For details, refer to section "Advanced Sound Control" on page 19.)



# Operating Your Receiver

## Display

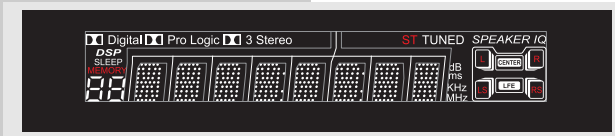

### Digital

- Audio output is in Dolby Digital mode.

### Pro Logic

- Audio output is in Dolby ProLogic mode.

### 3 Stereo

- Audio output is in 3 Stereo mode.

### ST

- Tuner stereo signal detected.

### TUNED

- Tuner station detected.

### DSP

- Unit is in DSP (Digital Sound Processing) mode.



- Speaker Icons.

### SLEEP

- Unit in Sleep mode.

### MEMORY

 
- Unit in Memory mode.

### KHz MHz

- Tuner frequency unit.

## Switching on /off

- To switch on the receiver, press **STANDBY/ON** button (1) once. Alternatively, you can press any of the source buttons to power on the receiver.

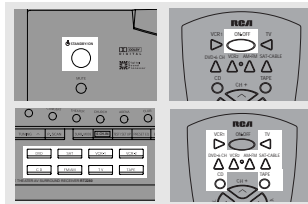

- Standby: when the receiver is on, press the **STANDBY/ON** button once to activate the standby mode.

- To switch off the unit completely, unplug the power cord from the socket


## NOTE

 Your receiver has a back up memory to keep your settings like preset radio station for about 2 weeks in case electricity cut occurs. If the receiver is unplugged for more than 2 weeks, all the settings will be lost and re-setting will be necessary.

# Operating Your Receiver


## Selection of Audio/Video source

When one of the source button is pressed, the audio and video input corresponding to the name will be activated. The receiver acts as a switching device between all the sources that are plugged into it.



### Example 1:

 If you connect a DVD player to the DVD input (audio + video) on the receiver and press the **DVD** button, you will be able to have the sound and image transmitted by the DVD.



### Example 2:

Based on the example 1, the DVD is playing, if a VCR is connected to the VCR 1 input (audio + video) of the receiver and the **VCR1** button is pressed, image and sound from the VCR source will replace the DVD.



## Operating your Receiver

You can connect up to 7 audio/video sources to this amplifier:

Source button (receiver front panel)	Corresponding connector (receiver back panel)
- DVD	DVD IN (audio / video)
- SAT	SAT IN (audio / video)
- VCR-1	VCR-1 IN (audio / video)
- VCR-2	VCR 2 IN (audio / video)
- CD	CD IN (audio only)
- TV	TV IN (audio only)
- TAPE	TAPE IN (audio only)
- FM/AM	built-in

When a source is selected, the source name will be shown on the display.

Example: Press **DVD** to select DVD as the source to the amplifier.



 
### NOTE

1. Your receiver has a built in tuner. Just connect the appropriate antenna on the back of the receiver and you will be able to listen to radio stations. (See details in Tuner section)
2. Other sources can be connected to the above standard source. Example: you can connect a LD into the DVD inputs.
3. Refer to the "Connecting To Audio-Visual Components" section for details on connection.


## Using the Remote to Control Additional Components

You can set your remote to control other components (like CD, TV, DVD, TAPE, etc.). What you need is to encode them in advance (not necessary for recent RCA & Proscan models).

1. Turn on the component to be programmed.
2. Look up the brand and corresponding code number in the code list from page 24 to 26.
3. Press and hold the corresponding Source Button (like **VCR1**, **VCR2**, **TV**, **DVD**) on the remote while entering the code from the code list using the Number Buttons.



 4. Release the component button, then press **ON•OFF** to see if the component will be turned off.



5. If this does not work, repeat steps 3 and 4 by trying to use the next code (if available) listed for the brand of your component until the component responds to the remote command.

### NOTE

Once your remote is encoded, you can press **ON/OFF** on the remote once to turn off the component and then followed by the second time quickly to turn off the receiver (i.e. this unit). If you only want the receiver to be turned off, select **FM/AM** while the unit is **ON** before pressing **ON/OFF**.

### HINT

This remote may not operate all models of the brands shown.

If batteries are removed from the battery compartment of the remote control, all memory will be lost. You need to re-enter all previously programmed codes again.

The buttons on the remote may not work correspondingly with those on other brand components. Experiment with the remote and your components to see which buttons work. If only a few functions operate, check to see if another code set will work with more buttons.

## Operating your Receiver

### Using the receiver to play a source

EN

After having properly connected a source (DVD, CD, VCR) to the receiver, you can partly control them through the receiver.

#### Playing a DVD with the receiver

1. Connect a DVD player to the receiver (see connecting your receiver for details)

### NOTE

To play Dolby Digital sound, the source must be connected to the receiver via the optical or coaxial terminal (see "Digital Connection" on page 5 for details)

2. Press **STANDBY/ON** to switch on the receiver
3. Select the DVD source by pressing the **DVD** source button



4. Switch ON the DVD player and start playback
5. Switch ON your TV
6. Select the appropriate A/V channel on the TV (refer to your TV manual for details) until the image from the DVD player is displayed
7. Set the sound Mode if needed (see "Advanced sound control" for details)

#### Example 1:

To play 5.1 Dolby Digital surround sound Press **SURR. MODE** button until "Dolby Digital" appears on the Display and all of the speakers' icons light up.

#### Example 2:

DVD: You may also need to select the Dolby Digital 5.1 on the DVD disc menu to have the digital surround enabled providing that the disc is encoded with Dolby Digital 5.1 (please refer to the DVD player and DVD disc instruction)

## Operating your Receiver

### Example 3:

LD: You may need to select a different Audio Channel on your LD (refer to your LD player manual)

- Adjust volume knob accordingly

 
### Operating the Radio

The receiver has a built-in tuner that allows for AM/FM radio function.

#### Manual tuning

1. Connect the FM and AM antenna accordingly (see "Connecting the Antenna" on page 5 section for details)

- Press **STANDBY/ON** to switch on the receiver.




- Press **AM/FM** and "TUNER" will flash on the display.




- To select band, press the **AM/FM** button again to toggle between AM/FM mode. When an FM station broadcast Stereo sound, STEREO is displayed.

 5- Tune the stations by pressing **TUNING UP** or **DOWN** repeatedly until the desired station is found. Alternatively, you can press and hold **TUNING UP** or **DOWN** for about one second to activate the automatic SEARCH function. In this mode the receiver will automatically tune frequencies until it finds a station

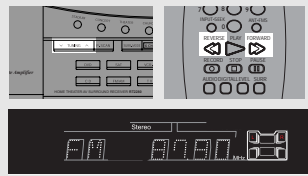

- Repeat steps 5 or 6 to tune another radio station.

 Select sound effect if needed by pressing Preset EQ or DSP sound (see "Advance sound section" for details)



### NOTE

 
- If there is interference, modify the location of the antenna until the optimal sound is heard. TV and other electronic devices could be the cause of interferences so try to position the antenna away of them.
- Weak signal can affect the "auto Search function". Adjust the antenna for better reception for more efficient search.

## Operating your Receiver


### Manual preset

- Select the band wave by pressing **AM/FM** repeatedly
- Tune to a radio station (see "Manual tuning" on page 16 above for details)

- Press **MENU** on the remote control. "MEMORY" will appear on the display



 - While the word "Memory" is still flashing, input your desired preset number (1-30) using the numeric keys on the remote control to store the radio station.




### Storing radio stations:

The receiver can store up to 30 radio stations in memory. You can enter every single radio station yourself or the receiver can store all available radio station automatically in an ascending order.

#### Automatic preset storing :

 - Select the band wave by pressing **AM/FM** repeatedly



- Press and hold **P.SCAN** for 3 seconds. "MEMORY" will be displayed in red and will blink during the automatic storing process.



Radio frequencies will be browsed and radio station stored automatically. When all available radio stations are stored or if all 30 memory locations are full, the auto preset will stop.

### NOTE

Weak signal can affect the "Automatic Preset Storing function" efficiency. Adjust the antenna for the best reception for more efficient search.

 
## Operating your Receiver

### Retrieving preset stations

1. Press **AM/FM** to select tuner mode




2. Rotate **MULTI JOG** on the receiver or press **CH+** or **CH-** buttons on the remote to select preset stations.



### 6 Channel external input

 An external decoder (Dts, Dolby Digital, etc...) or a device with built-in multi-channel decoder and 6 channel output connector (DVD player, TV...) can be connected to the 6CH input. It is therefore possible to play any future 6 Channels coding (SACD, DVD Audio) thanks to this connection. The external decoder device will send the separated audio information to the receiver that will then amplify the signal and send to appropriate speakers.

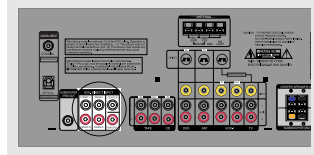

To activate 6 Channel external input, press **6 CH** on the receiver or press **DVD/6 CH** twice on the remote control.



### Sound Enhancement Systems

 
This receiver is equipped with several built-in sound enhancement systems.

#### Dolby Pro Logic and Dolby 3 Stereo

This surround system reproduces theater-like surround sound from Dolby-encoded software. The Pro Logic mode uses the built-in circuit to steer the Left, Center, Right and Surround channel audio signals and uses all five speakers and an optional subwoofer to play decoded Dolby Pro Logic program source, such as TV and VCR.

The 3 Stereo mode will redirect the Surround signals to the front left and right speakers when only the front and center speakers are used.

Use this mode to suit your speaker system configurations (such as size and number of speakers) and type of program (such as VCR).

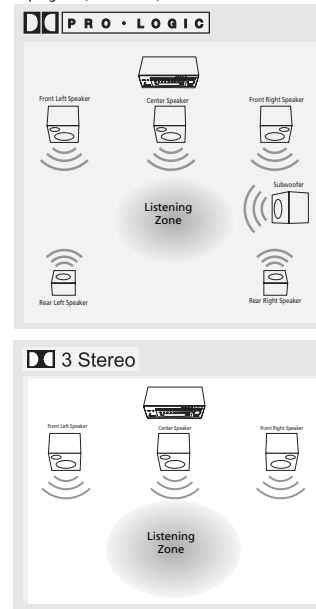

## Advanced Sound Control

### Dolby Digital

The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and more powerful presence than conventional Dolby Surround.

This unit is equipped with Dolby Digital 5.1-channel so that you can enjoy enhanced full digital surround sound. Being different from Dolby Pro Logic in which only four channels ( Front Left, Front Right, Centre and Rear ) are used, the new system provides stereo separation of the rear speakers (Rear-Right, Rear-Left ). These 5 channels, together with the subwoofer channel for bass sounds ( counted as 0.1 channel ), constitute as 5.1-Channel ( or 6 Channels ) Input for Dolby Digital that brings you the most sophisticated sound enjoyment.

### Recording Dolby Digital Source

To record from a digital (optical or coaxial) input using a VCR/tape that is connected to the receiver, the sound must be set to stereo first. Press **SURR. MODE** to select stereo mode.

If the receiver is set to 5.1 sound information recording from surround speaker, the center speaker will not be recorded.

## Advanced Sound Control

### Stereo

The Stereo mode uses the two main channel outputs from the front speakers. Use this mode if you have connected the front speakers only.

### DSP (Digital Sound Processor)

These digital sound effects resemble sounds in a real environment such as Stadium, Concert, Theater, Arena, Church, Club. DSP automatically converts analog audio signals to digital ones which enables you to adjust the sound without degrading the sound quality. Different modes will give you different feel of size and type of listening environment. (Not available in Dolby Digital (DVD))

### Night Mode

By using Dynamic Range Compression technology, you can enjoy enhanced sound quality by Dolby Digital at night without interrupting your roommates or neighbors. While enjoying a Dolby Digital enabled component (DVD, SAT), you can activate Night Mode by pressing **NIGHT** button at the front of the receiver, and this mode will compress the difference in volume between normal voices and sounds like explosions. There are two modes (SOFT, SOFTER) for you to choose the extents of compression.

### Fine Setting of the Components

The receiver has pre-selected the best surround mode for you once you turn on the unit by pressing the **Source** Buttons (like DVD, SAT, CD) directly. The default surround modes for different components are as table below.

If you decide to change the surround mode, you can press the **SURR MODE** repeatedly to toggle among the different surround mode choices and select the one you want.

Dolby Digital/Pro Logic → 3 Stereo → Stereo

 
Source/ Input	If Digital Input (optical or coaxial) is selected	If Analog Input is selected
DVD	Dolby Digital/PRO LOGIC	STEREO
SAT	Dolby Digital/PRO LOGIC	PRO LOGIC
VCR1	N/A	PRO LOGIC
VCR2	N/A	PRO LOGIC
TV	N/A	PRO LOGIC
CD	STEREO	STEREO
TAPE	N/A	STEREO
TUNER	N/A	STEREO

The receiver will keep the last selection in memory.

### Input Signal Setting

The receiver defaults to the most convenient settings for your easiest use (see table).

If your connection is different from the default setting,  
1. Select the source  
2. Press **FUNCTION**  
3. Rotate **MULTI JOG** to toggle among optical/coaxial/analog to match your connection. Your selection will be stored automatically.



Every time you press the source button, the input setting (e.g. DVD/ OPTI) will be shown on display for a few seconds.

SOURCE	DEFAULT INPUT (as seen on display)
SAT	Coaxial (SAT/ COAX)
DVD	Optical (DVD/ OPTI)
CD	Analog (CD/ ANL)
VCR1	Analog (VCR1/ ANL)
VCR2	Analog (VCR2/ ANL)
FM/AM	Built-in Tuner
TAPE	Analog (TAPE/ ANL)
TV	Analog (TV / ANL)

### Digital Input

Select this setting to play digital signals from a DVD, CD, LD player, SAT or TV.

## NOTE

Digital input is only available for DVD, SAT, CD and TV

### Analog Input

Select this setting to play analog signals from a cassette deck, VCR or turntable.

SOURCE	AVAILABLE INPUT
SAT	ANL/Optical/Coaxial
DVD	ANL/Optical/Coaxial
CD	ANL/Optical/Coaxial
VCR1	ANL / - / -
VCR2	ANL / - / -
TAPE	ANL / - / -
TV	ANL / Optical / -

### Fine Setting of the Speakers

This receiver supports a wide range of speakers and subwoofers. For optimal surround sound enjoyment, you need to register the speaker selection settings of your audio system. If you buy this receiver with accompanied speaker package, then this step has been done for you.

Also, to make the surround sound more effective and suit the acoustic conditions in your listening room, you need to delay the signal from some of the speakers. Such channel delay compensates for center or surround speakers that are closer to listening position than the front speakers. You can make use of the **TEST/ SET UP** button to adjust the speakers' relative loudness.

 
### The TEST/ SET UP button

You can adjust the relative loudness of the individual speakers by **TEST/ SET UP** button. In Dolby modes, press the button briefly. A short noise will be heard in the speakers one by one. The speaker having the noise at that moment will be shown in the display. You can listen to that speaker and rotate the **MULTI JOG** to adjust the level.

### Advanced Setting

#### Factory defaulted Advance setting indication from VFD

The receiver has defaulted the following distances:

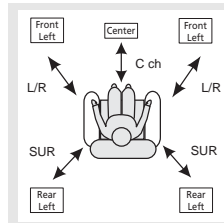

Front speakers (L/R) 15 ft  
Center speaker (Cch) 15 ft  
Rear speaker (SUR) 10 ft

## Advanced Sound Control

### Speaker Configurations

You can also change the setup of the speakers by pressing the **TEST/ SET UP** button until the display shows L/R SML or L/R LRG which enables you to set the size of the front speaker.

Available Selections:

Front Speaker selection	Large/ Small
Center Speaker selection	Large/ Small/ None
Surround Speaker selection	Large/ Small/ None
Subwoofer selection	Yes/ No
Subwoofer Phase	+ / -
Front Speaker distance	0-40 ft
Centre Speaker distance	0-40 ft
Rear Speaker distance	0-40 ft

Pressing **TEST/SETUP** repeatedly while the display is still showing L/R LRG (about 5 seconds), the display will toggle among: front, center, surround, subwoofer, subwoofer phase and speakers' distance setup. Set the speaker size or speakers' distance by rotating the **MULTI JOG**.

## NOTE

- The sub-woofer selection will always be YES when the main speakers are set to small (SML).
- For the subwoofer phase setting, it will be affected by how you locate the subwoofer. Try both + and - settings and select the one that has better bass effect.
- If your unit comes with speakers, always set all speakers size to "small" to protect them and optimize the sound quality.

## Advance Sound Control

Use a subwoofer to enjoy optimum sound.

 
• **Subwoofer Phase:** Try both settings and select the sound preferred.

• **Speaker distance:** For optimum surround experience measure the distance between the speaker and your favorite listening position.

1. Press and hold **TEST/SET UP** for 3 seconds



2. While the VFD display is showing L/R SML, rotate **MULTI JOG** to select and release to save setting.




3. Press **TEST/SETUP** once to move to the next speaker setting.




4. Repeat step 3 to set up the next speaker

 6. When set up is done, wait for 5 seconds to automatically save your settings or press any source key to save your selection and set up mode.




### Speaker Icons

 The receiver shows you the speakers' types and settings on the display with the following icons:

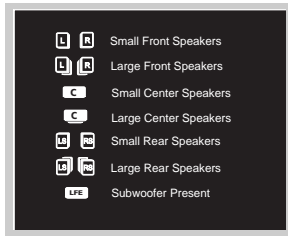

### Displaying Program Formats

 When a digital source is playing, the receiver will automatically switch to the proper surround mode and indicates on the speaker icons on the right-hand side of the display. (See diagram)

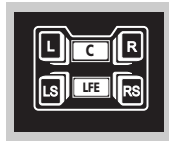

It is important to note, however, that not all Dolby Digital sources are encoded with the full complement of five channels plus LFE\*. Speaker icons show how many and which speaker you have enabled (See "Fine Setting of the Speakers") and the letters inside the speaker icons show which channel is present in the source information. For example, the diagram shown means you have all the five speakers and subwoofer enabled and the digital sources you played have five channels plus LFE complemented.

\* LFE stands for Low Frequency Effect. The indication "LFE" appears if the digital source contains LFE information. In this case, the bass signal will be delivered to the subwoofer, offering more dynamic deep bass sound effects. If the letter is flashing, the signal is either too weak or just gone.

### Troubleshooting Tips

#### Receiver/Tuner Operation

**STEREO indicator is off.**

- Adjust the antenna.

**The signal is Mono. Severe hum or noise.**

- The signal is too weak. Connect an external antenna.

#### Remote Control Operation

**The remote control does not operate the unit.**

- Another function mode is selected on the remote. Press the correct Source Button.
- No batteries installed. (included with your system) Install the batteries before attempting to operate the remote. Be sure to match the + and - ends of each battery to the symbols shown in the remote battery compartment.
- The batteries are weak. Replace all batteries.
- The remote is not pointed at the remote control sensor on the main unit or there is an obstacle between the remote and the main unit.
- The remote control is too far from the main unit, move closer.

#### General

**No audio.**

- Make sure the speakers are connected.
- Check the input connections.
- Check the power cord connections.
- Make sure the MUTE indicator on the front panel is off.
- Make sure the digital setting (optical, coaxial or analog) is correct.

**No audio from one channel.**

- Check the speaker level setting.
- Check the speaker wire or cable connections.

**Noise occurs when the TV is turned on.**

- The TV is too close to the audio system.

**Specific instruments sound displaced.**

- Check the connections between the receiver and the speakers if the sound does not match the video.
- Press the Source Button for the video source.

## Care and Maintenance

### Cleaning the Exterior

• Disconnect the system from AC power before cleaning the exterior of the system with a soft dust cloth, or with a slightly damp leather chamois. Never use strong solvents.

EN

### Equipment Specifications:

#### AMPLIFIER SECTION:

Each channel:  
100W at 8 ohm, 0.9% THD from 40Hz to 20KHz  
Subwoofer channel: 130W at 8Ω  
Muting Attenuation: 65dB  
Frequency Response: 40Hz to 20kHz +/-3dB  
Signal to Noise Ratio: 65dB (Bypass mode)

#### VIDEO SECTION:

Input (Sensitivity/ Impedance): 1Vp-p/ 75ohm  
Output (Level/ Impedance): 1Vp-p/ 75 ohm  
Frequency Response: 10Hz to 6MHz at +/- 3dB  
Signal to noise ratio: 40dB  
Crosstalk @3.58MHz: 40dB

#### AM TUNER SECTION:

Frequency Response: 80kHz – 2kHz +/-6dB  
Usable Sensitivity: 800uV/m @ S/N 20dB  
Signal to Noise: 38dB  
Image Ratio: 27dB @ 1000kHz  
IF Rejection: 35dB

#### FM TUNER SECTION:

Frequency Response: 40Hz – 15kHz +/-3dB  
Quieting: 24dBu  
Signal to Noise: 60dB(sterео) / 65dB(mono)  
Image Ratio: 40dB  
IF Rejection: 50dB

# Remote Codes

## CABLE CODES

ABC	5002, 5003, 5004, 5005, 5006, 5009, 5053
ANTRONIX	5008, 5009
ARCHER	5008, 5009, 5010, 5011
CABLETENNA	5008
CABLEVIEW	5008
CENTURY	5011
CITIZEN	5011
COLOUR VOICE	5012, 5013
COMTRONICS	5014, 5015
CONTEC	5016
5017	
EASTERN	5011
GARRARD	5009
GC ELECTRONICS	5018, 5019, 5049
GEMINI	5003
GENERAL INSTRUMENT	5020, 5021, 5022, 5035, 5045
HYTEX	5003
HITACHI	5002
HYTEC	5024, 5046, 5053
JASCO	5011
JERROLD	5003, 5005, 5007, 5018, 5023, 5024, 5046, 5053
MAGNAVOX	5025
MEMOREX	5026
MOVIE TIME	5002, 5027, 5028
NSC	5002, 5027, 5028
OAK	5002, 5016, 5029
5048, 5052	
PANASONIC	5026
PARAGON	5011, 5012, 5013, 5019, 5025, 5030, 5031, 5032
PHILIPS	5033, 5034
PIONEER	5026
PULSAR	5047, 5049, 5052
RCA	5009, 5049
REALISTIC	5022, 5035
REGAL	5017
REGENCY	5003
REMBRANDT	5014, 5034
RUNCO	5006, 5036, 5037, 5038
SAMSUNG	5014, 5018
SCIENTIFIC ATLANTA	5003
SIGNAL	5014
SIGNATURE	5052
SL MARX	5007, 5018, 5053
SPRUCER	5014, 5018
STARCOM	5018
STARGATE	5040
STARQUEST	5014
TANDY	5004, 5023, 5041
TELEVIEW	5026
TOCOM	5018
TOSHIBA	5027
TUSA	5008, 5009, 5011
TV86	5002
UNIKA	5008, 5009, 5010, 5011
UNITED ARTISTS	5053
UNITED CABLE	5008, 5009, 5010, 5011
UNIVERSAL	5044
VIDEOWAY	5015, 5025, 5027, 5040
VIEWSTAR	5026, 5050, 5051
ZENITH	

## VCR CODES

ADMIRAL	2131
ADVENTURA	2026
AIKO	2027
AINWA	2002, 2026
AKAI	2003, 2004, 2005, 2007, 2008, 2111, 2121, 2131
AMERICAN HIGH	2021
ASHA	2013
AUDIO DYNAMICS	2009, 2010
AUDIOVOX	2014
BELL & HOWELL	2011
BEAUMARK	2013
BROKSONIC	2012, 2025
2014	
CALIX	2012
CANDLE	2013, 2014, 2015, 2016, 2017, 2018, 2019
CANON	2021, 2022, 2114
CAPEHART	2020, 2110
CARVER	2062
CCE	2027, 2061
2013, 2014, 2015, 2016, 2017, 2018, 2019, 2027	
COLORTYME	2009
COLT	2061
CRAIG	2013, 2014, 2023, 2061
CURTIS-MATHES	2000, 2002, 2009, 2013, 2016, 2018, 2021, 2022, 2024, 2115
CYBERNEX	2013
DAEWOO	2015, 2017, 2019, 2025, 2026, 2027, 2028, 2110
DAYTRON	2110
DBK	2009, 2010
DIMENSIA	2000
DYNATECH	2002, 2026
ELECTROHOME	2014, 2029
ELECTROPHONIC	2014
EMERSON	2002, 2012, 2014, 2015, 2021, 2024, 2025, 2026, 2029, 2030, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2044, 2045, 2047, 2065, 2105, 2113, 2116, 2117, 2130
FISHER	2011, 2023, 2048, 2049, 2050, 2051, 2052, 2118
FUJII	2021, 2119
FUNAI	2002, 2026
GARRARD	2026
GE	2000, 2001, 2013, 2021, 2022, 2053, 2115, 2120
GOLDSTAR	2009, 2014, 2018, 2054, 2121
GRADIENTE	2026
HARLEY DAVIDSON	2026
HARMAN KARDON	2009
HARWOOD	2061
HEADQUARTER	2011
HITACHI	2002, 2055, 2056, 2057, 2107, 2111, 2120, 2122
HI-Q	2023
INSTANT REPLAY	2021
JCI	2021
JC PENNEY	2009, 2010, 2011, 2013, 2014, 2021, 2022, 2055, 2056, 2058, 2059, 2060, 2107, 2118
JENSEN	2055, 2056, 2111
JVC	2009, 2010, 2011, 2018, 2058, 2111, 2123
KENWOOD	2009, 2010, 2011, 2016, 2018, 2058, 2111, 2123
KLH	2061
KODAK	2014, 2021
LLOYD	2002, 2026
LOGIK	2061
LXI	2014
MAGNAVOX	2021, 2022, 2062, 2063, 2104, 2108, 2124
MAGNIN	2013
MARANTZ	2009, 2010, 2011, 2016, 2018, 2021, 2058, 2062, 2064
MARITA	2014
MASUSHITA	2021
MEI	2021

## MEMOREX

2002, 2011, 2013, 2014, 2021, 2023, 2026, 2104, 2131	
MGA	2029, 2065, 2113
MGN TECHNOLOGY	2013
MIDLAND	2053
MINOLTA	2055, 2056, 2107
2029, 2055, 2056, 2065, 2066, 2067, 2069, 2070, 2071, 2072, 2073, 2074, 2106, 2113, 2123	
MITSUBISHI	2075, 2131
MONTGOMERY WARD	2021, 2131
MOTOROLA	2021, 2131
MTC	2002, 2013, 2026
MULTITECH	2002, 2013, 2016, 2026, 2053, 2061
NEC	2009, 2010, 2011, 2016, 2018, 2058, 2064, 2076, 2078, 2079, 2111, 2123
2014	
NIKKO	2013
NOBLEX	2021
OLYMPUS	2021
OPTIMUS	2014, 2131
OPTONICA	2096
ORION	2035
PANASONIC	2021, 2022, 2109, 2125, 2126, 2127
PENTAX	2016, 2055, 2056, 2107, 2120
PENTEX RESEARCH	2018
PHILCO	2021, 2022, 2062, 2063
PHILIPS	2021, 2062, 2096, 2124
PILOT	2014
PIONEER	2010, 2055, 2080, 2081, 2123
PORTLAND	2016, 2017, 2019, 2110
PROSCAN	2000, 2001
PROTEC	2061
PULSAR	2104
QUARTER	2011
QUARTZ	2011
QUASAR	2021, 2022, 2125
RCA	2000, 2001, 2003, 2013, 2021, 2055, 2056, 2062, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2107, 2115, 2120, 2125
RADIOSHACK/REALISTIC	2002, 2011, 2013, 2014, 2021, 2022, 2023, 2026, 2029, 2049, 2050, 2096, 2131
2014	
RADIX	2005, 2013, 2015, 2033, 2053, 2112
RANDEX	2104, 2131
RICOH	2010, 2092, 2111, 2123
RUNCO	2014
SAMSUNG	2005, 2013, 2015, 2033, 2053, 2112
SANKY	2104, 2131
SANSUI	2010, 2092, 2111, 2123
SANYO	2011, 2013, 2023
SCOTT	2012, 2015, 2020, 2032, 2035, 2038, 2065, 2093, 2116
SEARS	2011, 2014, 2021, 2023, 2048, 2049, 2050, 2051, 2055, 2056, 2107, 2118
SHARP	2002, 2017, 2029, 2094, 2095, 2096, 2131
SHINTOM	2004, 2056, 2061, 2098
SHOGUN	2013
SIGNATURE	2002, 2131
SINGER	2021, 2061, 2128
SONY	2002, 2008, 2096, 2099, 2119, 2128
STS	2021, 2107
SYLVANIA	2002, 2021, 2022, 2026, 2062, 2063, 2065, 2104
SYMPHONIC	2002, 2026
TANDY	2002, 2011
TASHIRO	2014
TATUNG	2058, 2111
TEAC	2002, 2026, 2058, 2085, 2111
TECHNICS	2021, 2109
TEKNIKA	2002, 2014, 2021, 2026, 2100, 2129
TMK	2013, 2024, 2047
TOSHIBA	2015, 2040, 2051, 2055, 2065, 2093, 2116
TOTEVSON	2013, 2014
UNITECH	2013
VECTOR RESEARCH	2009, 2010, 2015, 2016
VICTOR	2010
VIDEO CONCEPTS	2009, 2010, 2015, 2016, 2113
VIDEOSONIC	2013
WARDS	2002, 2013, 2014, 2015, 2021, 2023, 2026, 2029, 2055, 2056, 2061, 2096, 2101, 2102, 2103, 2107, 2116, 2131
XR-1000	2021, 2026, 2061
YAMAHA	2009, 2010, 2011, 2016, 2058, 2111
ZENITH	2004, 2098, 2104, 2119, 2128

# Remote Codes

## TV CODES

ABEX	1172
ADMIRAL	1001, 1173
ADVENTURA	1174
AIKO	1016
AKAI	1002
ALLERON	1046
AMTRON	1038
ANAM NATIONAL	1003, 1038
ADC	1004, 1005, 1006, 1007, 1175, 1176
AUDIOVOX	1038
BELCOR	1004
BELL & HOWELL	1001, 1083, 1162
BRADFORD	1038
BROKWOOD	1004
CANDLE	1004, 1006, 1008, 1174
CAPEHART	1175
CELEBRITY	1002
CENTURION	1009
CITIZEN	1004, 1006, 1008, 1016, 1038, 1105, 1171, 1174, 1177
CLAIRTONE	1176
COLORTYME	1004, 1006
CONCERTO	1004, 1006
CONTEC/CORNY	1012, 1013, 1014, 1038, 1176
CRAIG	1038
CROWN	1038, 1171
CURTIS MATHES	1000, 1004, 1006, 1015, 1105, 1162, 1171
CXC	1038
DAEWOO	1004, 1005, 1006, 1016, 1017, 1018, 1127, 1171
DAYTRON	1004, 1006, 1171
DIMENSIA	1000
DURKOHIT	1004, 1151
DYNATECH	1178
ELECTROBAND	1002, 1175
ELECTROHOME	1003, 1004, 1006, 1019, 1022
EMERSON	1004, 1006, 1012, 1014, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038, 1039, 1041, 1042, 1043, 1044, 1046, 1047, 1123, 1124, 1162, 1171, 1176, 1177, 1179, 1181
ENVISION	1004, 1006
FISHER	1040, 1049, 1050, 1051, 1162, 1180
FUJITSO	1046
FUNAI	1038, 1046
FUTURETEC	1038
GE	1000, 1003, 1004, 1006, 1022, 1052, 1054, 1055, 1087, 1164, 1165, 1166, 1167, 1168, 1181
GIBRALTER	1004, 1151
GOLDSTAR	1004, 1005, 1006, 1012, 1019, 1056, 1057, 1058, 1155, 1156, 1171, 1172
GRUNDY	1038, 1046, 1171
HALLMARK	1004, 1006
HARVARD	1038
HITACHI	1004, 1006, 1012, 1013, 1059, 1060, 1061, 1135, 1136, 1137, 1138, 1139, 1140, 1141, 1142, 1143, 1144, 1145, 1146, 1148, 1150, 1179
IMA	1038
INFINITY	1062
JANELI	1174
JBL	1062
JCB	1002
JC PENNY	1000, 1004, 1005, 1006, 1008, 1022, 1052, 1054, 1058, 1063, 1064, 1072, 1087, 1105, 1138, 1171, 1172, 1181
JENSEN	1004, 1006
JVC	1012, 1013, 1054, 1060, 1065, 1066, 1067, 1089, 1157, 1158, 1159, 1182

EN

## Remote Codes

KAWASHO	1002, 1004, 1006
KAYPANI	1175
KENWOOD	1004, 1006, 1019
KLOSS NOVABEAM	1006, 1009, 1174, 1183
KTV	1038, 1070, 1171, 1176, 1177
LOEW	1062
LOGIK	1083
LUXMAN	1004, 1006
LXI	1000, 1006, 1049, 1062, 1071, 1072, 1073, 1162, 1181
MAGNAVOX	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1089, 1130, 1131, 1132, 1133, 1134, 1183, 1184
MAJESTIC	1083
MARANTZ	1062
MARANTZ	1004, 1006, 1062, 1078
MEGATRON	1006, 1059
MEI	1176
MEMOREX	1001, 1006, 1082, 1083, 1162
MGA	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1082
MIDLAND	1054, 1151, 1171, 1172, 1181
MINUTZ	1052
MITSUBISHI	1004, 1005, 1006, 1019, 1022, 1051, 1079, 1080, 1081, 1082, 1082, 1083, 1125
MONTGOMERY WARD	1083
MOTOROLA	1003, 1173
MTC	1004, 1005, 1006, 1105, 1176, 1178
MULTITECH	1038, 1178
MULTIVISION	1084
NAD	1006, 1071, 1072, 1185
NEC	1003, 1004, 1005, 1006, 1089
NIKKO	1006, 1016
NTC	1016
ONWA	1038
OPTIMUS	1185
OPTONICA	1095, 1173
ORION	1035, 1191
PANASONIC	1003, 1054, 1062, 1170
PHILCO	1003, 1004, 1005, 1006, 1008, 1012, 1013, 1062, 1068, 1069, 1074, 1075, 1077, 1183, 1184
PHILIPS	1003, 1004, 1008, 1012, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1086, 1087, 1088, 1089
PILOT	1004, 1171
PIONEER	1004, 1006, 1090, 1091, 1092, 1179, 1185
PORTLAND	1004, 1005, 1006, 1016, 1171
PRICE CLUB	1105
PRISM	1054
PROSCAN	1000, 1181
PROTON	1004, 1006, 1012, 1093, 1175
PULSAR	1151
PULSER	1004
QUASAR	1003, 1054, 1070, 1094
RADIO SHACK/REALISTIC	1000, 1004, 1006, 1012, 1038, 1049, 1095, 1162, 1171, 1172
RCA	1000, 1003, 1004, 1005, 1006, 1007, 1019, 1096, 1098, 1099, 1100, 1101, 1102, 1103, 1129, 1179, 1181, 1187, 1188, 1190, 1176
RHAPSODY	1151
RUNCO	1004, 1006, 1171, 1172, 1175
SAMPO	1171
SAMSUNG	1004, 1005, 1006, 1012, 1015, 1019, 1104, 1105, 1106, 1171, 1172
SAMSUX	1171
SANSUI	1191
SANYO	1004, 1048, 1049, 1050, 1080, 1107, 1108, 1162, 1169, 1180, 1189
SCOTCH	1006
SCOTT	1004, 1006, 1012, 1024, 1035, 1038, 1046
SEARS	1000, 1004, 1006, 1013, 1019, 1046, 1048, 1049, 1050, 1051, 1066, 1071, 1072, 1109, 1110, 1162, 1180, 1181, 1189
SHARP	1004, 1005, 1012, 1029, 1095, 1111, 1112, 1113, 1122, 1171, 1173
SHOGUN	1004
SIGNATURE	1001, 1083, 1115

SIMPSON	1008
SONIC	1176
SONY	1002
SOUNDESIGN	1004, 1006, 1008, 1038, 1046
SQUAREVIEW	1189
S55	1004, 1038
STARLITE	1038
SUPRE-MACY	1174
SUPREME	1002
SYLVANIA	1004, 1006, 1008, 1019, 1062, 1068, 1069, 1074, 1075, 1076, 1077, 1088, 1116, 1161, 1183, 1184
SYMPHONIC	1033, 1038, 1189
TANDY	1173
TATUNG	1003, 1178
TECHNICS	1054
TECHWOOD	1004, 1006, 1054
TEKNIKA	1004, 1005, 1006, 1008, 1012, 1013, 1016, 1038, 1046, 1076, 1082, 1083, 1105, 1170, 1171
TELECAPTION	1117
TWK	1004, 1006
TOSHIBA	1049, 1071, 1072, 1089, 1105, 1109, 1117, 1118, 1160, 1162
TOVEISION	1171
UNIVERSAL	1052, 1087
VICTOR	1066, 1182
VIDEOTECH	1004, 1005, 1006
VIKING	1174
WARDS	1000, 1001, 1004, 1005, 1006, 1019, 1024, 1033, 1046, 1052, 1062, 1069, 1074, 1075, 1076, 1083, 1087, 1088, 1095, 1119, 1120, 1184
YAMAHA	1004, 1005, 1006, 1019
ZENITH	1004, 1083, 1151, 1152, 1153, 1154

### Satellite Receivers

CHARRARAL	5056, 5057
DRAKE	5058, 5059
GE SATELLITE RECEIVER	5000, 5001
GENERAL INSTRUMENTS	5060, 5061, 5062
PANASONIC SATELLITE RECEIVER	5075
PRIMESTAR DBS	5076
PROSCAN SATELLITE RECEIVER	5000, 5001
RCA SATELLITE RECEIVER	5000, 5001
REALISTIC	5063
SONY SATELLITE RECEIVER	5072
ST3	5064
ST32	5065
ST33	5066
ST54	5067
TOSHIBA	5068
TOSHIBA SATELLITE RECEIVER	5073
UNIDEN SATELLITE RECEIVER	5069

### Audio (RCA/Dimensia only)

AMFM	4003
AUX	4004
PHONO	4005
CD	4007
TAPE	4006

### Laser disc Players

PROSCAN	2001
RCA	2001

### What your warranty covers:

- Defects in materials or workmanship.

### For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

### How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside the U.S.A.
- Acts of nature, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

## Limited Warranty (US)

### Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.**
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF INDIANA. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.**

### How State Law relates to warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

### If you purchased your unit outside the United States:

- This warranty does not apply. Contact your dealer for warranty information.

### Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.



## Limited Warranty (Canada)

### What your warranty covers:

- Defects in materials or workmanship.

### For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

### What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

### How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

### Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

### Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

### How Provincial Laws relates to warranty:

- This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from Province to Province.

### If you purchased your unit outside Canada:

- This warranty does not apply. Contact your dealer for warranty information.

- Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.