

Quick Instruction of WiFi Connection

SAMIL POWER CO., LTD.

Add: No.6, Xuefengshan Road, Suqian High-tech Industrial Development Zone,
Jiangsu Province, P.R.China. 223800

Tel : +86 (0) 527 88754666

Fax: +86 (0) 527 84453877

E-mail: service@samilpower.com

Part 1 Appearance of SolarRiver inverter with WiFi

SolarRiver 1100TL/1600TL



Initial status



Work status

SolarRiver 2300TL/3000TL



Initial status




Work status

Note: Before unpacking, the antenna is fixed by plastic clips. When finished the installation of inverter, pull the antenna from the plastic clips lightly and make it vertical for getting better signal.

Part 2 The procedure of WiFi setting

Step 1: Write down the WiFi SSID of inverter.


When the inverter is running, press the function button until the WSN is displaying on the screen.

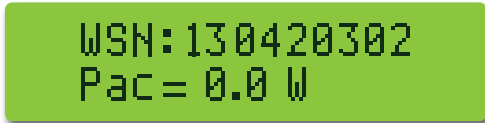

Record the numbers on the display. The WiFi SSID of inverter is AP_XXX XXX XXX which is used later for connecting with PC or smart phone.

Step 2: Configure and set parameter of WiFi module.

(Prepare a laptop with WiFi and make sure the WiFi function is enable. Then follow the steps below to finish the WiFi connection.)

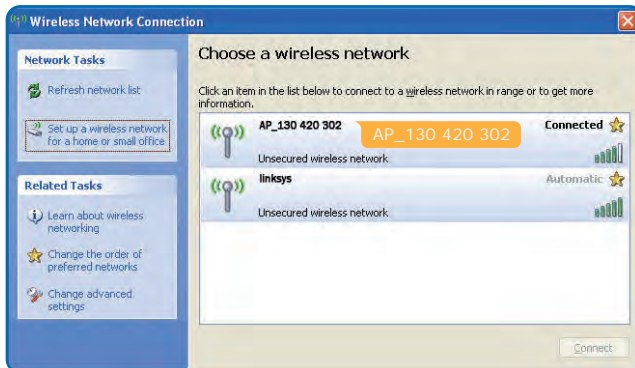

- a) Open the wireless network connection.
- b) Refresh the network list and choose the WiFi SSID: AP_130 420 302.
- c) Input the default password "WIFI 123456" in the popup window.
- d) Connect it.



- d) Input the website: http://10.10.100.254 into the address bar.

- e) Enter the user name: admin.
- f) Enter the password: admin, click OK.

Continue - - - - ->

1) Select the language.
2) Go to the STA setting page.

1) Click on the "Scan" button.

1) Input the password.
2) Click on the "Save" button.

1) Select the correct WiFi SSID.
2) Click on the "OK" button.

1) Click on the "Restart" button.

1) Finish.

Wait about 30 seconds after successful setting, the inverter will show its IP address and the green LED at the bottom of the inverter will light at the same time:

192.168. 11. 07
Pac = 0.0 W

Part 3 How to change the WiFi SSID or password of the inverter




- 1) Visit the website: 10.10.100.254 and login. (Refer to part 2)
- 2) Go to the AP Setting page.
- 3) Change the SSID or Password.
- 4) Click on the "Save" button.

Part 4 Reload the default WiFi setting

If you want to cancel the WIFI setting which you have made and start a new connection, finish the following steps and return to Part 2:

Step 1: Press the function button to the IP address page.

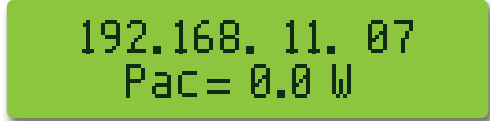

Step 2: In the IP address page, hold pressing the function button and release it until displaying "Reload".



Step 3: Press the function button again. The display shows "Reload OK". Then the inverter's WiFi address has been reset successfully.

