

READ THIS FIRST

VENTILATOR USER GUIDE

MODEL 718G4T



USER GUIDE

This manual covers the description, cautions, operation and maintenance of the *Super Vac* Tecumseh powered gasoline positive pressure ventilators.

**Please take the time to read this manual before operating the ventilator.
Save this guide for future reference.**

CONTENTS

1. BREAKAGE OR DAMAGE DURING SHIPMENT	2
2. GENERAL DESCRIPTION AND SPECIFICATIONS	3
3. PRODUCT SAFETY PRECAUTIONS.....	4
4. BEFORE OPERATING VENTILATOR.....	4
5. OPERATION.....	5
STARTING THE ENGINE	6
STOPPING THE ENGINE	8
6. MAINTENANCE AND REPAIR	9
SCHEDULE OF MAINTENANCE.....	9
7. TROUBLESHOOTING.....	10
8. WARRANTY	11
9. CONTACT INFORMATION.....	12
10. PARTS LIST	13
11. EXPLODED VIEW.....	14

POSITIVE PRESSURE VENTILATOR

1. Breakage or Damage During Shipment

The transportation company is fully responsible for all shipping damage and will resolve problems promptly if you handle it correctly. Please read these instructions carefully.

Examine the contents of all shipping cases. If you find any damage, call your transportation agent at once and have them make a description on the freight or express bill describing the damage and the number of pieces. Then write us and we will send you the original bill of lading. Get a claim blank from the express or truck company. Fill the claim form out. Attach the claim blank to the original bill of lading together with a copy of our invoice. Attach a memo on which you show the value of the damaged goods. Mail or hand these papers to your local transportation agent. They will process your claim with reasonable promptness.

Please note, we cannot and will not enter claims for damages. If we filed claim here, it would be sent to your local freight agent for verification and investigation. This time can be saved by your filing the claim directly. Every consignee is on the ground floor and in contact with the local agent who inspects the damaged goods, and thus, each claim can be given individual attention.

Since our goods are packed to comply with the regulations of all railroad, truck, and express companies, we cannot allow deduction from any invoice because of any damage, however, be sure to file your claim promptly. Our goods are sold F.O.B. factory. We take receipt from the transportation company certifying that the goods were delivered to them in good order, and our responsibility ceases.

It is seldom that any breakage or damage occurs in any of our shipments, and in no case will the customer be out any expense if they follow the above instructions.

Be sure to keep all damaged goods subject to examination of the truck or express company inspector, who may call on you some time later. These damaged goods, of course, will belong to them, and they will inform you what to do with them. If you dispose of these damaged goods, your claim may not be paid.

2. General Description and Specifications

Super Vac ventilators are specifically designed to provide a convenient and portable source of air. *Super Vac* positive pressure ventilators are tested to AMCA PPV Standard 240-95, for use in extreme conditions.

This ventilator is designed for high powered air movement. *Super Vac*'s propeller produces a greater intake of air and eliminates turbulence at the tips. Each blade is statically balanced for high efficiency and long life.

This document is designed to function as a quick start guide and not an in-depth comprehensive instructional manual. Please read all accompanying documents shipped with your ventilator. Due to the many features of gasoline powered equipment thorough familiarity with the engine operating controls is essential to assure safe and trouble free operation.

POSITIVE PRESSURE VENTILATOR

3. Product Safety Precautions

- Do not use the ventilator for purposes other than its' intended use.
- Wear eye and ear protection when operating the ventilator.
- Never operate ventilator while fatigued.
- Do not disassemble or modify the ventilator in any way. Doing so may lead to mechanical failure or personal injury.
- Do not wear loose clothing that could become entangled in the operating ventilator.
- Never permit anyone to operate ventilator without proper instruction.
- Do not operate ventilator without proper inlet or outlet guards in place. If guards are missing or damaged, contact factory for replacements.
- Do not place fingers or other foreign objects through inlet or outlet guards. Should a foreign object enter the ventilator, immediately stop engine. Be certain all mechanical motion has stopped. Disconnect spark plug wire from spark plug and keep it away from spark plug before removing foreign object.
- Do not use with any fuel supply source other than the provided fuel tank.
- Engine exhaust gas contains poisonous carbon monoxide. Avoid inhalation of exhaust gas. Never run the engine in a closed or confined area.
- Do not place or operate ventilator on unsteady tables, slanted surfaces or other unstable surfaces.
- Never use this ventilator in any explosive environment.
- Do not use chock blocks to increase the angle of the ventilator, severe injury could occur.

4. Before Operating Ventilator

- Engine is shipped without oil. With engine in a level position, remove oil fill plug and dipstick. Fill with 21 ounces of the recommended oil. See page 1 of the *TECUMSEH Operator's Manual* for oil viscosity recommendations and capacity.
- Always operate this ventilator with unleaded gasoline having a pump octane rating of 85 or higher.
- A complete inspection of the ventilator should be made prior to operation.
- Check all threaded fasteners for proper tightness.
- Inspect inlet and outlet guards for damage or missing pieces. Replace damaged or missing guards before operating ventilator.

5. Operation

Check ventilator inlet and outlet guards for obstructions. Check and remove from immediate surrounding area any objects that could be drawn into the ventilator intake.

Check the engine oil level, running the engine with a low oil level can cause engine damage. See page 2 of the *TECUMSEH Operator's Manual*.


Check the engine air cleaner. A dirty filter will reduce engine performance. See page 4 of the *TECUMSEH Operator's Manual*.

Check the fuel level. Do not overfill. Starting with no more than a 3/4 full tank will help reduce operating interruptions for refueling and avoid fuel spillage when engine is tilted. See page 2 of the *TECUMSEH Operator's Manual*.

Place ventilator in desired location before starting.

Refer to the *TECUMSEH Operator's Manual* for additional information showing locations of engine control features and positions.


This engine is equipped with an *Low Oil Shutdown* which is designed to prevent engine damage caused by an insufficient amount of oil in the crankcase. Before the engine can fall below a safe limit, the *Low Oil Shutdown* will automatically stop the engine (the engine speed control will remain in the current position). The *Low Oil Shutdown* is sensitive to the engine being operated at an incline. Operate ventilator within the design limits of the engine tilt lever.

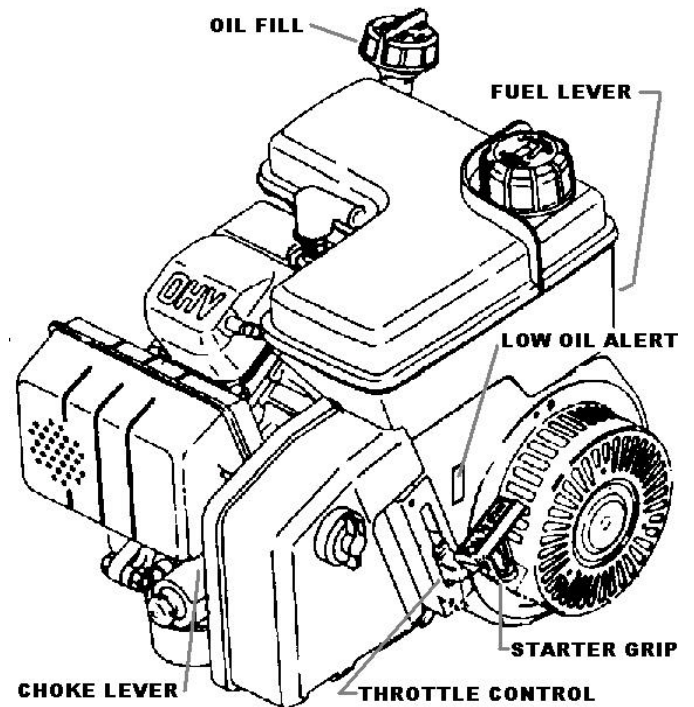


POSITIVE PRESSURE VENTILATOR

Starting the engine


1. Turn the fuel lever counter clockwise to the ON position.

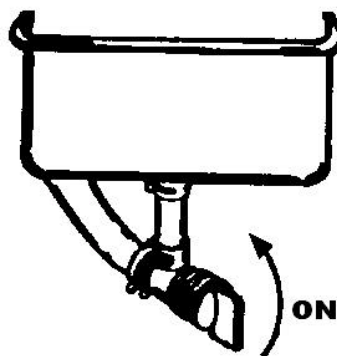


2. If engine is cold, move choke lever to the FULL CHOKE position.

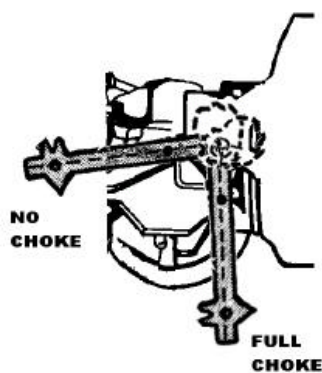

3. Move throttle control to the SLOW position.

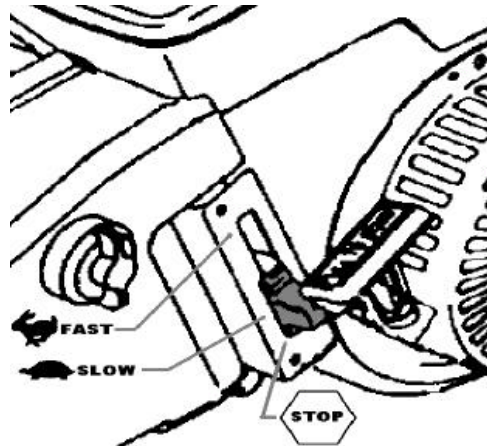

4. Pull the starter grip lightly until resistance is felt, then pull briskly. Do not let the starter grip return by releasing grip, this can lead to starter cord breakage. Return starter grip gently to the recoiled position.

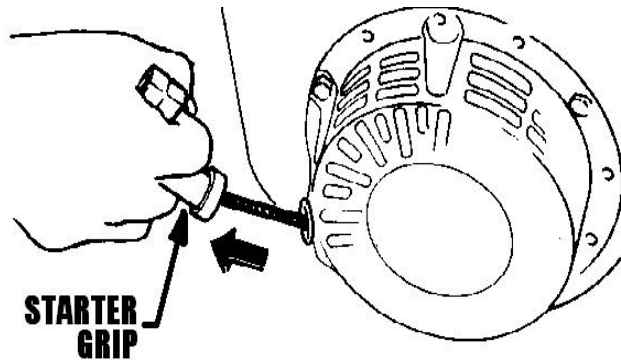

POSITIVE PRESSURE VENTILATOR

Stopping the engine

1. Move throttle lever to the STOP position.
2. Turn the fuel valve lever clockwise to the OFF position.

Use caution not to direct toxic fumes into confined spaces with the ventilator. Please refer to the *Super Vac Training Manual for Smoke Ventilation* for comprehensive instruction on effective ventilation practices.

6. Maintenance and Repair

Maintenance should only be performed by experienced and trained personnel.

Be sure the ventilator blade has come to a complete stop before performing any maintenance or repair.

Disconnect spark plug wire from spark plug and keep it away from spark plug.

The ventilator blade should be specially checked for build-up of material or dirt which may cause an imbalance. Excessive imbalance can lead to accelerated wear on engine bearings and vibration. Remove ventilator guards. Clean blade and inside housing with mild detergent and water. Do not use abrasives, sharp instruments or caustic solvents that may scratch or damage the aluminum alloy blade..

Schedule of Maintenance

Perform at every indicated hour interval.	Each use	1 st 2 Hrs.	Every 50 Hrs.	Every 100 Hrs.	Every year	Refer to Page ¹
Engine oil	Check level	●				2
	Change		●		●	3
Air filter	Check	●	●			4
	Clean			●		
	Replace				●	
Spark plug	Clean-Gap		●		●	4
	Replace				●	
Fuel line	Check	●				

¹ Refers to pages in the *TECUMSEH Operator's Manual*.

See parts list for replacement part numbers.

POSITIVE PRESSURE VENTILATOR

7. Troubleshooting

Common causes of engine overheating:

- Insufficient unobstructed distance on exhaust side of ventilator. Please refer to the *Super Vac Training Manual for Smoke Ventilation* for recommended ventilator placement.
- Incorrect octane fuel, too low octane.

ENGINE WILL NOT START	Possible Cause	Correction
Check control positions	Fuel valve OFF	Move lever to ON
	Choke is OFF	Set choke to FULL on (Unless engine is warm.)
	Throttle control is on STOP	Move throttle control to SLOW.
	Low Oil Shutdown	Engine oil is low or engine is being operated on too steep an incline.
Check fuel	Out of fuel	Refuel
	Deteriorated fuel	Drain fuel tank and carburetor. Refuel with fresh gasoline.
	Contamination in fuel tank blocking fuel line	Drain fuel tank and carburetor. Refuel with fresh gasoline.
Remove and inspect spark plug	Spark plug faulty, fouled or improperly gapped.	Clean, gap or replace spark plug.

8. Warranty

Limited Warranty Five Years

Super Vacuum Manufacturing Company warrants that the equipment is free from defects in materials and workmanship when used and operated for a period of five years. The responsibility of Super Vacuum Manufacturing Company under this limited warranty is limited to the repair and replacement of any parts which are found defective and which are returned to Super Vacuum Manufacturing Company at 1303 East 11th Street, Loveland, Colorado 80537 with transportation charges prepaid (C.O.D. shipments will not be accepted).

Prior to returning defective parts to SUPER VACUUM MANUFACTURING COMPANY, the original purchaser shall make a claim in writing to SUPER VACUUM MANUFACTURING COMPANY at the above address indicating the model number and type of defect. No parts or equipment will be received by SUPER VACUUM MANUFACTURING COMPANY for repair or replacement under this warranty without specific written authority from it in advance.

Any parts damaged by improper installation, overloading, abuse or accident of any type or cause are not covered by this warranty.

All equipment manufactured by us is pre-run and tested before leaving our plant, and is shipped in good working order and condition. We therefore extend to the original purchasers the following Limited Warranty for the period of five years from the original date of purchase:

1. This warranty does not apply to defects caused by accident, misuse, neglect, or wear and tear, nor can we be held responsible for incidental and consequential expense and loss, nor does this warranty apply to equipment where alterations have been executed without our knowledge or consent. These conditions are readily discernable when the equipment is returned to us for inspection.
2. On all component parts not manufactured by SUPER VACUUM MANUFACTURING COMPANY, their warranty is to the extent that the manufacturer of such component warrants them to SUPER VACUUM MANUFACTURING COMPANY, if at all. Look in your local business phone directory for the nearest repair station for the brand of parts you have or write to us for the address.
3. If equipment received is found to have been damaged in transit, a claim should be made against the carrier within three days, as we assume no responsibility for such damage.
4. Any service other than our Authorized Service voids this warranty.
5. This warranty is in lieu of and is intended to exclude all other warranties, express or implied, oral or written, including any warranties of MERCHANTIBILITY or FITNESS for a particular purpose.


POSITIVE PRESSURE VENTILATOR

9. Contact Information

For parts or service information, contact:

Super Vacuum Manufacturing Company, Inc.
PO Box 87
Loveland CO 80539

Phone: 1-800-525-5224
970-667-5146
FAX: 970-667-4296
Internet: www.supervac.com

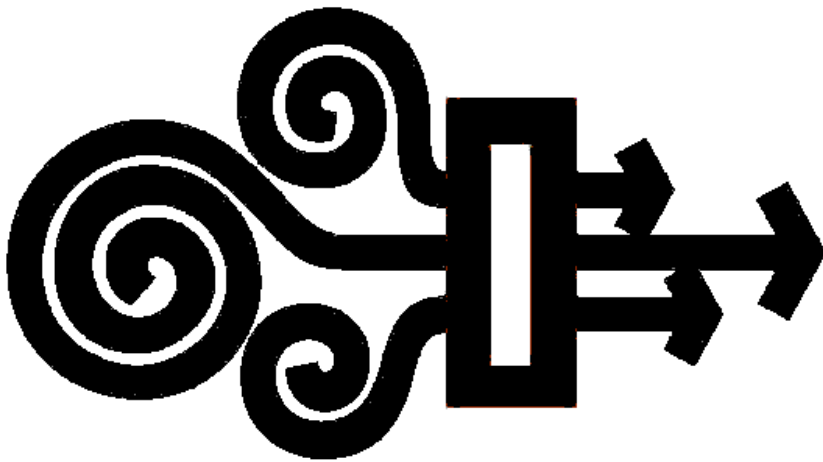

SUPER VAC
THE VENTILATION SPECIALISTS

10. Parts List

1	012-00018	1	GUARD 718 18" FRONT-PAINTED
2	032-15540	8	10-24 X 1/2" PHIL PH MS BLACK
3	032-10754	2	1/4" LOCK WASHER ZINC
4	032-10745	2	1/4 - 20 X 1" HEX CS ZINC
5	008-10187	1	BUSHING BLADE MAUREY HQ 3/4"
6	008-10193	1	KEYSTOCK 3/16" X 1 3/8" SQUARE
7	003-10044	1	BLADE 18" 7 BLADE GAS FINISHED
8	032-10787	4	5/16" LOCK WASHER ZINC
9	032-10779	4	5/16 - 24 X 1 1/4" HEX CS ZINC
10	018-10396	1	SHROUD 18" W/GUARD-PAINTED
11	017-14999	1	718 BUSHING 1 1/4" O.D. X 1"
12	032-10743	1	1/4-20 X 3/4"HEX CS ZINC
13	032-10752	1	1/4" FLAT WASHER USS ZINC
14	032-10750	1	1/4-20 NYLOK HEX NUT ZINC
15	019-15046	1	1/8" X 3/4" ENGINE SUPPORT BRACKET
16	019-15049	1	1/8" X 3/4" ENGINE SUPPORT BRACKET
17	032-10750	3	1/4-20 NYLOK HEX NUT ZINC
18	032-10752	3	1/4" FLAT WASHER USS ZINC
19	032-10725	3	1/4-20 X 5/8" PHIL RH MS ZINC
20	019-10418	1	718 ENGINE MOUNT
21	032-14565	2	3/8-16 X 4 1/2" SOCKET BUTTON HEAD ZINC
22	005-10136	4	BUSHING REDUCER 3/4" X 1/2"
23	008-13373	2	WHEEL PNEUMATIC DW414 3" HUB CENTER
24	032-11129	2	3/8" FLAT WASHER USS ZINC
25	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
26	008-14622	1	MOUNT, BRAKE, VENTILATOR, VB1, ALUM
27	008-14624	1	718, BRAKE BAR, FINISHED
28	008-14623	2	MOUNT, BRAKE, VENTILATOR, VB2, ALUM
29	032-10725	2	SCREW, 1/4-20 X 5/8, PHILLIPS RH, ZINC
30	008-10189	6	PLUG FINISHING SQ RIBBED, BLACK 1"
31	024-13473	2	FEET RUBBER CONE SHAPE VBM-4002
32	032-13052	2	5/16-24 NYLOK HEX NUT ZINC
33	018-10404	1	TUBE FRAME 18" PAINTED

34	032-14564	2	3/8-16 X 2 1/2" SOCKET BUTTON HEAD CS ZN
35	018-15000	2	718 SHROUD SUPPORT BRACKET
36	008-10212	2	WASHER FLAT #17W14930 MICRO-PLASTIC
37	032-11129	2	3/8" FLAT WASHERUSS ZINC
38	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
39	008-10192	2	SPRING A-180-S VALCO 40 PCS. PER LB.
40	032-14564	2	3/8-16 X 2 1/2" SOCKET BUTTON HEAD CS ZN
41	032-11129	2	3/8" FLAT WASHER USS ZINC
42	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
43	019-15001	1	718 HANDLE PAINTED
44	008-14586	2	STOCK CAP COVER FOR 718 HANDLE TAB
45	032-11133	2	3/8-16 NYLOK HEX NUT ZINC
46	024-13284	1	SPRING SADDLE ISC #0198 W.DBL GRIND
47	008-10211	1	STOCK CAP 3TG .250" X 1.0" X 4" OAL BLK
48	019-15002	1	718 TILT LEVER
49	024-13284	1	SPRING SADDLE ISC #0198 W.DBL GRIND
50	032-10750	2	1/4-20 NYLOK HEX NUT ZINC
51	032-10752	2	1/4" FLAT WASHER USS ZINC
52	032-10752	2	1/4" FLAT WASHER USS ZINC
53	032-10723	2	1/4-20 X 1/2" PHIL PH MS ZINC
54	025-13614	1	DECAL - OIL FILL/TILT WARNING
55	025-13366	1	DECAL 718G4-H SER# GREY
56	025-10551	1	DECAL 718G4-T YELLOW SAFETY
57	025-13404	2	DECAL - INFLATE TIRES 10-15 PSI MAX
58	032-10790	4	5/16-18 NYLOK HEX NUT ZINC
59	032-10770	4	5/16-18 X 1 1/2" HEX CS ZINC
60	032-10786	4	5/16" FLAT WASHER ZINC
61	023-14334	1	ENGINE 6HP 4 CYCLE TECUMSEH
62	032-10777	1	5/16-24 X 3/4" HEX CS ZINC
63	032-10791	1	5/16" FENDER WASHER ZINC
64	032-10787	1	5/16" LOCK WASHER USS ZINC

POSITIVE PRESSURE VENTILATOR

11. Exploded View

