 



TAN.LITE 32000

OPERATION MANUAL

ASSEMBLY

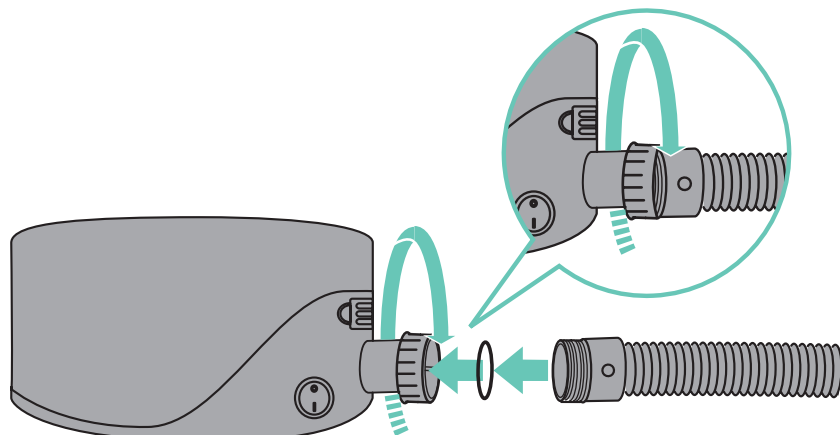

 1. To begin, attach the hose with the 'Turn&Lock' screw-connect style fitting, ensuring the 'O' ring is placed inside the 'Turn&Lock' fitting. This will lock into place tightly, without any broken components.
2. To remove the air hose easily, unscrew the collar of the Turn&Lock' screw-connect clockwise and remove the hose.

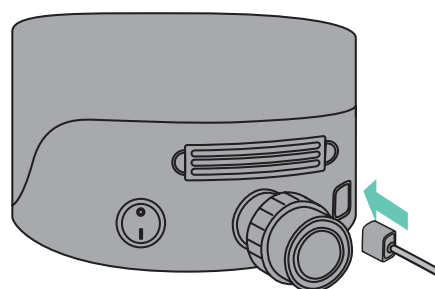


3. Insert the power cord into the device and in the wall plug and turn power on at the wall switch.
4. To connect the hose to the Handy. Tan, refer to page 4.

OPERATION

POWER ON : Airflow with Intelligent Air-Smart Control

Turn the device 'on' by pressing the on switch. The Tan.Lite 32000 has an intelligent Air-Smart Switch set for the perfect airflow coming from the device into the Handy.Tan Spray Gun.

 This creates flawless spray tanning results every time.

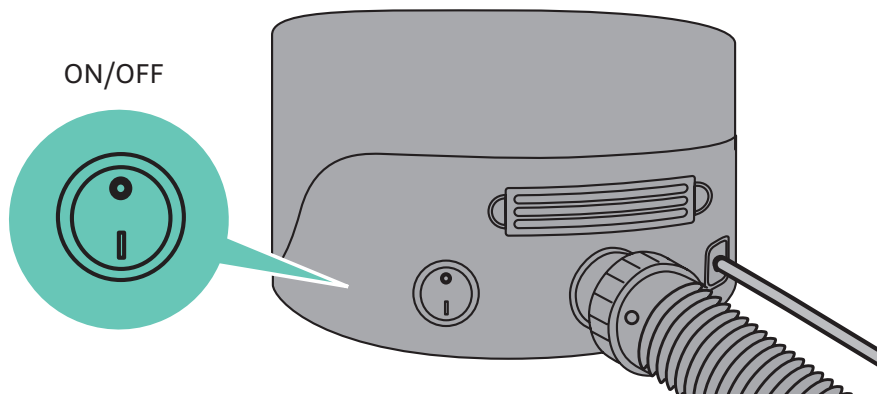

REGISTER YOUR
2 YEAR GUARANTEE



CUSTOMER CARE

 
Thank-you for choosing to purchase this Tan.Easy Pro Tools product.

Your Tan.Easy Pro Tools device will be covered for parts only for 2 years from the date of purchase, as detailed in the terms of the Tan.Easy Pro Tools guarantee at the back of this Operational Manual.

If you have a query about your Tan.Easy Pro Tools product, contact Tan Easy Pro Tools by going to the website **www.taneasyprottools.com** and filling out a warranty claim on the contact us page. Most queries can be solved by our frequently asked questions online at **www.taneasyprottools.com**. Alternatively you can contact your local Tan.Easy representative in your region.

Your serial number can be found on the rating plate, which is on the base of your machine.

Note your serial number for future reference

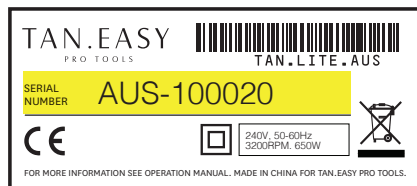

This is for example purposes only.

THIS BOX INCLUDES

- 1 x Tan.Lite 32000 Spray Machine
- 1 x 2.5 Meter Professional Length Air-Hose
- 1 x 'O' Ring insert for Air-Hose
- 1 x Handy.Tan Spray Gun
- 2 x Handy.Tan Leak-Free External Solution Cups with Lids
- 1 x Power cord
- 1 x Operational Manual

TROUBLESHOOTING

Refer to www.taneasyprottools.com

REVISION DATE 15.02.14 #1

All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without prior written consent of Tan.Easy Pro Tools.

NOTICE

The information contained in this document is subject to change without notice and should not be construed as a commitment by Tan.Easy Pro Tools.

Tan.Easy Pro Tools assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Tan.Easy Pro Tools shall not be liable for incidental or consequential damages in connection with or arising out of the use of this document and the program material.

IMPORTANT SAFETY PRECAUTIONS

BEFORE USING THIS TAN.EASY PRODUCT, READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE DEVICE.

When using an electrical appliance, basic precautions should always be followed, including the following:

 
WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. Do not leave product when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Use this device only for its intended function and do not use attachments not recommended by the authorized Tan.Easy Pro Tools manufacturer.
5. Do not use the device if the cord is damaged. In the event of damage discontinue use immediately. If the supply cord is damaged, it must be replaced by the authorized Tan.Easy manufacturer.
6. If device is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, do not use, contact Tan.Easy Pro Tools Customer Care via the website or regional telephone number.
7. Do not pull or carry by cable, use cable as a handle, close a door on cable, or pull cable around sharp edges or corners. Keep cable away from heated surfaces.
8. Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.
9. Do not handle plug with wet hands.
10. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow. Switch off and unplug the product before attempting to remove any blockage.
11. Turn off all controls before unplugging.
12. Do not spray flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
13. Do not use without the filter in place.
14. Never look directly into the airflow when device is in use.
15. Do not use an extension cord unless the cord complies with local regional electrical safety standards
16. Periodically inspect the power cord for signs of damage

SAVE THESE INSTRUCTIONS

This product is intended for professional use only.

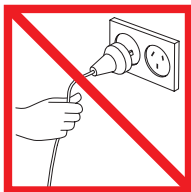

Do not pull
on cable.



Do not submerge in
water or get wet.

 


Do not use near
open flames

HANDY.TAN SPRAY GUN


OPERATION

1. Un-screw the external solution cup away from the Handy.Tan and fill desired amount of spray solution. We recommend filling it a minimum of half way for best results. Over filling the solution cup may cause leaks.
2. Screw Cup back into the Handy.Tan. Ensure it is fully tightened so no leaks occur.

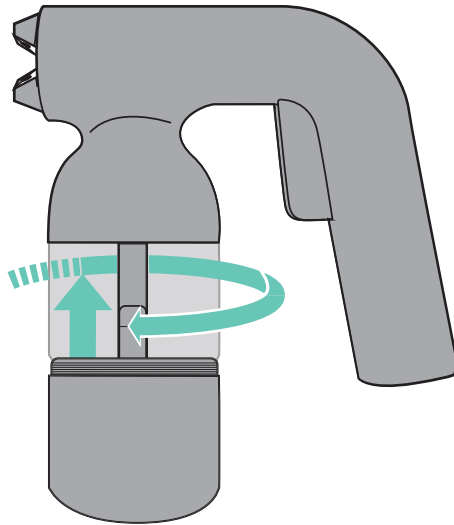

ATTACHING AIR HOSE

 Attach the air hose by inserting the end of the air-hose into the bottom of the handle of the handy tan.

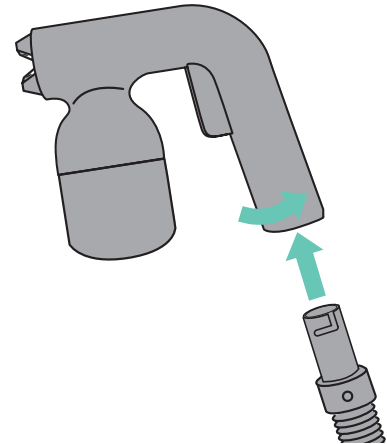


Turning it anti-clockwise until firm will secure the fitting inline with your Handy Tan.

SETTING SPRAY PATTERN


Adjusting the spray-pattern nozzle of your Handy.Tan to suit your preferred style of spray tanning.

 SPRAYING SIDE TO SIDE ACROSS THE BODY

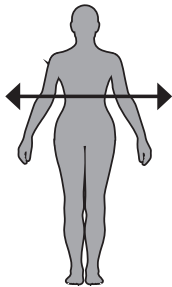


Set the nozzle fan 'Horizontal'. This spray pattern is perfect for spraying side to side ie. left to right - right to left across the body.

 SPRAYING UP & DOWN THE BODY

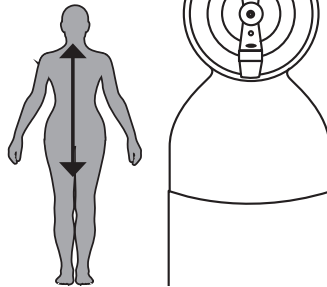

Set the nozzle fan Vertical. This spray pattern setting is perfect for spraying up and down, top to bottom of the body.

 REMOVING AIR HOSE

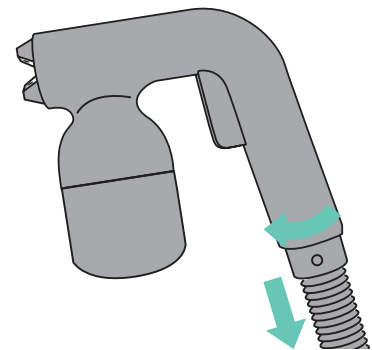

To remove the air hose, turn the hose clockwise to unlock the hose and remove it from the Handy Tan.

SETTING SOLUTION AIR-FLOW CONTROL

 
The solution Flow Control dial on the back of the applicator will determine how much solution will be dispensed from the gun. You can adjust the flow of solution by adjusting the dial on the handle.

The higher number on your dial, the more solution will flow from the Handy.Tan. As you become more comfortable with your spray tan techniques, you can increase the flow of your solution.


MAXIMUM SOLUTION FLOW



DECREASE SOLUTION

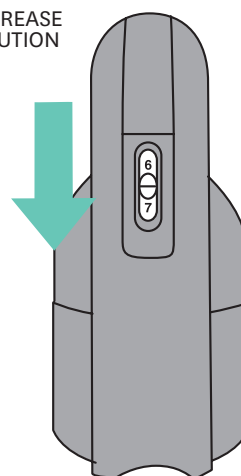

INCREASE SOLUTION

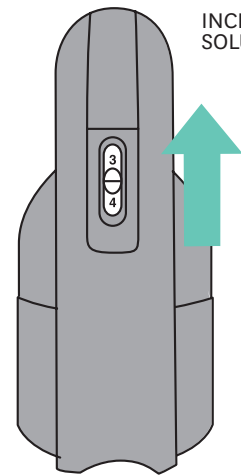 

CLEANING & MAINTENANCE:

IMPORTANT

 
WASH TURBINE FILTER
WITH WATER AT LEAST
EVERY 6 MONTHS



WASHING YOUR TURBINE FILTER

The only maintenance necessary on the Tan.Lite device is cleaning or changing the turbine filter.


1. Remove the turbine filter from the filter housing located above the air hose 'Turn&Lock' screw connect.
2. Wash under cold water. Do not use detergents to clean the filter.
3. Please leave to dry completely.

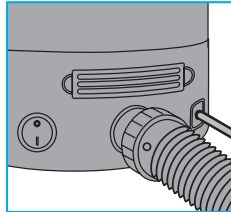

Consideration: The filter may require more frequent washing if product is located close to spraying.

Please Note: We recommend your spray machine be placed a minimum of 50cm behind you. This ensures minimum cleaning with your machine. HVLP technology recirculates air from the environment. With your machine by your side, spray tan solution will be sucked back into the filter of your spray machine, clogging up the filter in the machine, meaning more frequent cleaning. Positioning the spray unit behind you will ensure the unit stays cleaner for longer.

 IMPORTANT! It is important to check your filter and wash at least every 6 months, according to instructions, to maintain performance. Do not put the filter in a dishwasher, washing machine, tumble dryer, oven, microwave or near a naked flame.



SPRAY MACHINE



If the spray machine gets dirty with overspray solution, wipe down with Tan.Easy Cleaning Wipes. Alternatively you can use a smooth cloth (avoid anything abrasive) with a general glass cleaner to maintain the gloss finish.

WARNING: ALWAYS UNPLUG THE DEVICE BEFORE CLEANING.



EXTERNAL SOLUTION CUP

Rinse your solution cup with warm water until clean. Wipe all areas dry ready for the next use.

 
Please note: We recommend washing your cup under water, each time you remove the cup from the handy tan and refill. If you have spilled the contents of the cup and product gets in the screw-band (grooved area of the cup being screwed into the HandyTan) simply wipe the grooves with Tan.Easy Cleaning Wipes or a wet cloth/paper towel. This will allow the cup to be easily tightened back onto the Handy.Tan and cause the cup not to leak excess spray solution.

AIR HOSE

Wipe the Air Hose daily with Tan.Easy Cleaning Wipes. Alternatively use a damp cloth. Once dry, store in a clean dry place.

HANDY TAN **IMPORTANT!** We recommend doing this over a sink or towel.

1. Remove the hose from the Handy.Tan.
2. Unscrew the cup from the Handy.Tan and empty any un-used solution from the cup.
3. Rinse the empty solution cup with warm water until clean and then fill the cup about $\frac{1}{4}$ full of warm water.
4. Insert the cup and screw tightly, back into the Handy.Tan and re-connect the hose.
5. Turn on your spray tan machine and adjust your solution Flow Control dial to the highest setting for maximum water spraying.
6. Direct the spray applicator into the sink and spray the clean water through until the cup is empty. This will clean through the needle and out to the spray-pattern nozzle.
7. Now that the cup is empty, re-set your solution Flow Control dial on the back of the Handy.Tan to your regular settings.
8. Disconnect the Handy.Tan from the Air-Hose and unscrew the cup.
9. Wipe all areas dry including the cup and Handy.Tan ready for the next use.

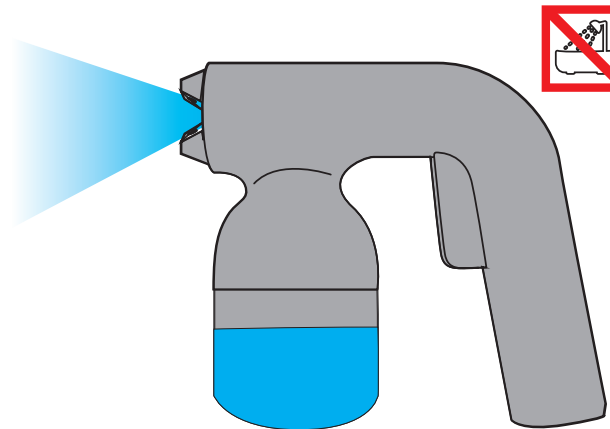

IMPORTANT! You must not submerge the Handy.Tan under water. If your handy tan has excess spray solution, wipe down with Tan.Easy Clean Wipes. Alternately you can use a smooth cloth (avoid anything abrasive) with a general glass cleaner to maintain the gloss finish.

TAN.EASY GUARANTEE 2 YEAR TROUBLE FREE WARRANTY

Congratulations on your purchase. We trust you will be happy with your purchase as the products are designed to give you many years of service.

To activate your Guarantee, please complete the information within 30 days of purchase.

This form has details of our guarantee terms & conditions so please read it carefully, fill it in and return it to the address at the back of this manual.

Alternatively you can register online at www.taneasyprotools.com.

Keep this form, with your original proof of purchase for any claim under guarantee. If you have any queries or require further information on your product please contact your local representative of Tan.Easy Pro Tools Products.

GUARANTEE PERIOD BY PRODUCT

2 YEARS All products
– *Parts Only*

LIFETIME GUARANTEE: Handy.Tan Spray Gun

PLEASE NOTE: Shipping or return expenses are not covered.

TERMS & CONDITIONS

If within two (2) years from the date of purchase, the product fails due to a defect in material or workmanship, we will repair if possible or replace it free of charge with a comparable unit, which may be new or refurbished. This guarantee applies only to the original purchaser and is not transferable. The goods must be returned to the seller with proof of purchase to be assessed at the purchasers cost. This excludes the Handy.Tan Spray Gun, which has a lifetime guarantee. Prior to making a claim, please ensure you have read all trouble-shooting questions at www.taneasyprotools.com. If there is a defect with the device, it will be replaced free of charge with a comparable unit.

Guarantee shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. The manufacturer shall not be obligated under this guarantee:

1. To repair damage resulting from attempts by personnel other than authorized representatives to install, repair or service the product.
2. To repair damage, malfunction, or degradation of performance resulting from improper use or incompatible solution.
3. To perform maintenance or cleaning or to repair damage, malfunction, or degradation of performance resulting from failure to perform user maintenance and cleaning as prescribed.
4. To repair damage, malfunction, or degradation of performance resulting from use of the product in an environment not meeting the operating specifications.

EXTENDED WARRANTY

Tan.Easy Extended Warranties can be purchased anytime within the first 30 days of your product purchase through the website - www.taneasyprotools.com.

Extended Warranty through Tan.Easy provides the peace of mind, certainty and convenience of having the whole repair/replacement process managed for you in respect of most mechanical and electrical failures, including failures caused by wear and tear, during the period of your Extended Warranty and after the expiry of the first 2 years Guarantee.

PURCHASE YOUR EXTENDED WARRANTY ONLINE : www.taneasyprotools.com.

REGISTER YOUR
2 YEAR GUARANTEE



Please take a few moments to answer our questions.
They will help us develop new products for the future.

- 1 This spray tan machine is...
 - My first spray tan machine
 - A replacement spray tan machine
 - An additional spray tan machine

- 2 Which brand of spray tan machine are you replacing or adding to?
 - MaxiMist
 - Earlex
 - Tanning Essentials
 - Evolv
 - Apollo
 - Air-Brush Machine
 - Other, please specify _____

- 3 Why did you choose to buy a Tan.Easy Product? (Please rank in order, 1-5. 1 being the most important).
 - Reputation
 - Price/special offer
 - Performs consistently well
 - No loss of Air Flow
 - Previous experience of Tan.Easy.
 - Features of the Handy.Tan
 - Whirl-Wind Technology
 - Energy Efficiency
 - Compact and easy to store
 - Store staff recommendation
 - Latest model/technology
 - Reliability/quality
 - Friend/family recommendation
 - Other _____

- 4 Where did you first hear about the model you bought?
 - From friends, work colleagues or family
 - The internet
 - From TV/a magazine advert
 - In a store catalogue
 - In a store
 - Recommended by salesperson

- 5 On Average, how many spray tans do you do a week?
 - Less than 10
 - Between 10-25
 - Between 26-49
 - Over 50

- 6 Do you own a Tan. Fresh-Air Unit?
 - Yes
 - No

- 7 To which age group do you belong?
 - 16 - 24
 - 25 - 34
 - 35 - 44
 - 45 - 54
 - 55 - 64
 - 65+

- 8 Would you recommend a Tan.Easy Device to your family, work colleges and friends?
 - Yes
 - No

- 9 Which best describes your buisness (Tick one).
 - Salon
 - Mobile
 - Home User

- 10 **FREE HANDY.TAN OFFER**
What colour Handy.Tan Cup would you like with your Free Handy.Tan? (Tick one).
 - Black
 - White
 - Mint Green
 - Coral
 - Hot Pink
 - Purple
 - Silver
 - Bronze
 - Clear

THANK YOU FOR YOUR TIME

COMPLETE BOTH SIDES OF THIS FORM TO RECEIVE A
**FREE HANDY.TAN SPRAY GUN
& CLEANING WIPES**



DATE OF PURCHASE

 / /

COUNTRY OF PURCHASE

SERIAL NUMBER

TITLE

SURNAME

FIRST NAME

ADDRESS

POSTCODE / ZIP CODE

E-MAIL

TELEPHONE

MOBILE / CELL PHONE

PRIVACY ACT

Tan.Easy Pro Tools may use this information for future marketing and research purposes (including sending commercial electronic messages) and may disclose it to third parties for the purposes of providing the services you have requested or to our business partners or professional advisers.

If you wish to access your personal information or see our full privacy policy, please contact us at info@taneasyprotools.com. If you do not wish to receive marketing information by these methods from Tan Easy Pro Tools, please tick the box.

BOX.

REGISTER YOUR 2 YEAR GUARANTEE

REGISTER



ONLINE

VISIT OUR WEBSITE TO REGISTER YOUR 2 YEAR TROUBLE-FREE WARRANTY; FULL PARTS GUARANTEE ONLINE. EXTENDED WARRANTY IS ALSO AVAILABLE THROUGH OUR WEBSITE.

WWW.TANEASYPROTOOLS.COM/REGISTER

REGISTER



BY MAIL

FILL IN THIS FORM TO REGISTER YOUR 2 YEAR TROUBLE-FREE WARRANTY; FULL PARTS GUARANTEE & MAIL TO:

MARQUE OF BRANDS
19/327 MANSFIELD STREET
THORNBURY. VICTORIA.
AUSTRALIA 3071

