

1:18 4WD Whole Proportion Remote Control Car Pull



Caution: This model is not a toy. It is designed for users over 14 years of age.
Please use this instruction and the R/C system instruction at the same time.
The instruction is suitable for a type of model whose number is A949.

Safety and caution1

Troubleshooting • Product introduction2

Instruction of common tools and installation the electronic part.....3

Practice and maintenance.....4-5

Assemble exploded view 6-11

Fittings view12-15

Troubleshooting

Description	Cause	Solution
The car does not operate at all.	Transmitter or receiver is off.	Turn on both transmitter and receiver.
	Batteries are not placed properly in the transmitter.	Place batteries in the transmitter properly.
	The drive battery is not charged enough.	Charge the drive battery.
The car does not follow your operation and control distance not enough long.	Someone else is using the same radio frequency as you are using.	Charge your radio frequency to the one no one else is using, wait until the driver using the same radio frequency finishes driving, or drive your car at a different place.
	There is not enough power in the transmitter or receiver batteries.	Replace the transmitter batteries with new ones and charge the drive battery.
	Not tighten antenna on the transmitter/not fully extend antenna.	Make sure insert antenna into the transmitter and fully extend antenna.

 
CAUTION

- * Please observe the operation manual or packing explanation to install and use, and some parts should be installed by adults.
- * The product contains small part, it may cause swallow or choke.
- * Never run an R/C model in the seep or rain, moisture areas, or it may cause the parts malfunction.
- * Please throw the wrapper in time to avoid danger for the children.
- * Regularly examine for damage to the charge, wire, plug, bodyshell or other parts. In the event of any damage, it must not be used until the damage has been repaired.
- * The charge battery box and battery must insert with the appointed power source of product symbol same.
- * This product must only be used with the original collocation charger.
- * The product is contains the functional outshoots are may be dangerous to the children.
- * Apart the charger and toy before clean.
- * As the front end of the antenna may be dangerous, do not aim it toward anyone's body, face or eyes.
- * Batteries are to be inserted with the correct polarity.
- * Use the "AA" non-rechargeable or "AA" rechargeable batteries.
- * Non-rechargeable batteries are not to be recharged.
- * Rechargeable batteries should only be charged under adult supervision.
- * Rechargeable batteries must be removed from model before charge.
- * Different types of batteries or old and new batteries are not to be mixed.
- * Exhausted batteries are to be remove in time.
- * The supply terminals are not to be short-circuited.
- * Never short circuit the batteries, throw it in a fire or attempt to open their outer casings.
- * Please remove the batteries when not in use.
- * Please retain these instructions for future reference.

Product Introduction

Item number: A949 1:18 4WD whole proportion remote control car pull
 Speed: 40KM/H Above
 Vehicle size: length 285*width 140*height 105MM
 Wheelbase: 165MM
 Wheelspan: 110MM
 Wheel diameter: 50MM Wheel width: 20MM
 Transmitter battery: 4*AA battery
 Car battery: 7.4V1100MAH
 Charge time: 150hours
 Playing time: 10 Minutes
 Control distance: 100Above Frequency: 2.4G
 Motor: 390
 Serve: 17G
 Four wheel independent suspension, with front and rear differential

Sale parts view

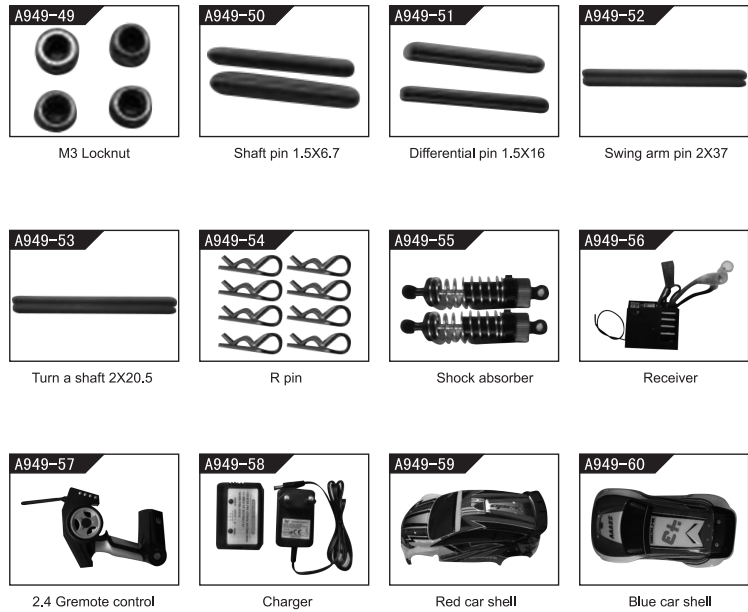

Safety and Cautions

- *Never run the model on public roads or streets, as it could endanger traffic.
- *Never run the model in crowded areas, near or toward people or animals, to prevent property damage and/or personal injury.
- *Never run the model near rivers, ponds or lakes as to prevent R/C car from dropping into the water.
- *Make sure that no one else is using the same frequency as yours in your running area. Using the same frequency at the same time, whether it is driving, flying or sailing, can cause loss of control with R/C model, resulting in serious accidents.
- *To avoid a runaway R/C model or loss of control, always follow the procedure below:
 - 1, Fully extend transmitter antenna.
 - 2, Switch on transmitter.
 - 3, Switch on R/C model.
- *Follow reverse procedure to shut down.
- *Never touch or hinder rotating tire.
- *Never run R/C model in the rain or let run over puddles, as water may cause trouble with R/C model.
- *Motor and battery get very hot after running. Take care when handle them.
- *Retract transmitter antenna when not in use.
- *Remove the batteries from model and transmitter when they are not in use.











Cautions when handling batteries


- *Do not dismantle the battery or charger and do not cut any battery cables. This may cause short-circuit and/or damage to the product.
- *Change battery with compatible charger following proper procedure that is called out in the instructions. Do not modify charger or charge battery in improper way.
- *Do not recharge battery that is still warm from use as it may damage the battery. Allow the battery to cool off prior to recharging.
- *Make sure to disconnect charger cables from R/C model and electric outlet when not in use.
- *Remove transmitter battery when not using it for a long time as it may leak and damage transmitter when left for a long period.
- *Never incinerate used batteries, as they can explode causing serious accidents.



Safety precautions

<p>Do not operate the model on public roads, in crowded places or near infants. It may cause accidents or injury.</p>  	<p>As the product includes small and sharp parts, assemble and store this product only in places out of the reach of children.</p>  
<p>As the front end of the antenna may be dangerous, do not aim it toward faces.</p>  	<p>During the car running and after, the motor will be hot. Please do not touch it until it has had time to cool down.</p>  

 Assemble the electron parts

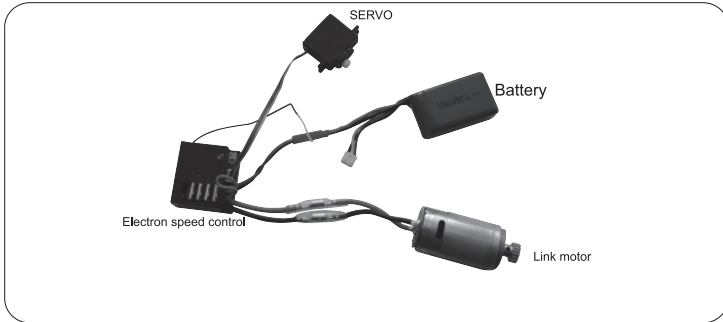

PRACTICE AND MAINTENANCE

Operating program

1> Turn on the switch ① of transmitter and make sure the power indicator is ② steady light, then turn on the car.

 
 
2> Put the car on the frame or stand. If wheel is running self-motion, adjust the trim ⑤ of transmitter until the wheel is still.

3> Slip the trigger ③ of transmitter slowly, you can observe the car whether it can go ahead or go back.

4> Turn steering adjusting wheel ④ of transmitter to left or right, and make sure the steering of front wheels follow the instruction.

5> Put the car on the ground and stand behind the back of the car. Squeeze the throttle trigger ③ of transmitter gently. If the car does not move in a straight line, you can adjust the trim ⑥ of transmitter until the car moves in a straight line.

6> OK, ready to run.

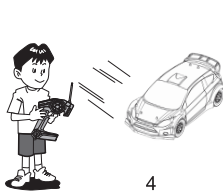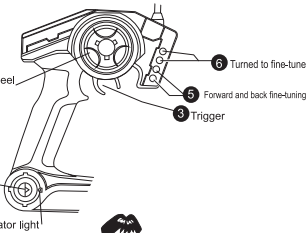

4

 
Sale parts view




A949-17
Central transmission shaft



A949-18
Second floor

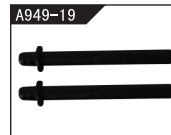


A949-19
Car shell column

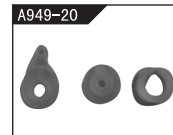 

A949-20
Servo arm



 A949-21
EVA anti-collision sponge

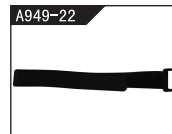


A949-22
Velcro 210 mm



A949-23
Reduction gear



 A949-24
Reduction gear

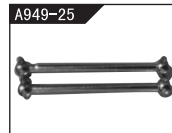

A949-25
Transmission shaft 5x33



A949-26
Motor seat



A949-27
Lithium battery 7. V 1
100mah



A949-28
16g The steering gear



A949-29
Motor heat shield



A949-30
Shaft 9 X 22.1



A949-31
Motor fixed screw gasket



A949-32
390 Electric machinery

Sale parts view

A949-33



Oil-retaining bearing 4X8X3

A949-34



Oil-retaining bearing 8X12X3.5

A949-35



 
Ball bearing 7x11x3

A949-36



Ball bearing 8x12x3.5

A949-37



Swing arm gasket 1x5

A949-38



Round head self-drilling screw 2.6x6

A949-39



Round head self-drilling screw 2x6

A949-40



Round head screw M2.5X8

A949-41



Round head self-drilling screw 2x16

A949-42



Round head screw steps 2x14.5

A949-43



Round head with the screw interface M2.5x6x6

A949-44



Flat head screw M3x5

A949-45



Ball screw 9.3x5

A949-46



Ball screw 9.4x4

A949-47



Countersunk head tapping screws 2x6

 
A949-48




Countersunk head tapping screws 2X7.5

Proportional R/C Using Instruction


- ① Turn left the steering wheel, the car will turn left. Turning left angle can be adjusted by the degree of wheel twisting.



 
- ② Turn right the steering wheel, the car will turn right. Turning right angle can be adjusted by the degree of wheel twisting.



 - ③ Pull the throttle trigger backward, the car will forward. Adjusting the angle of throttle trigger can adjust forward speed of the car. During the car forward, quickly push the trigger forward to stop it.




 - ④ Loosen the trigger to make it return the neutral position when brake. Push the throttle trigger forward, the car will backward. Adjusting forward angle of throttle trigger adjust backward speed of the car.



Introduce the common tools and assemble the electron parts

 Tools needed for assembly

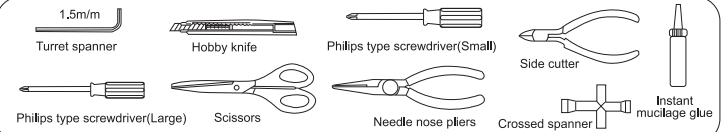



Charge caution

CHARGING BATTERY


- 1) Please firstly check and confirm input voltage of the charge is consistent with local voltage, output voltage of the charge is consistent with battery voltage.
- 2) Battery must be used up before you charge. Charging time is not more than 5 hours.
- 3) Be careful to make sure there is adult to control when charging.



  Assembly Exploded Diagram

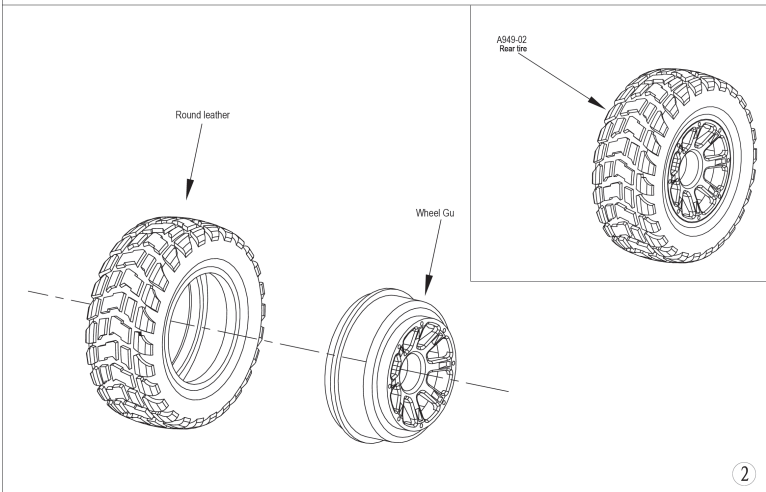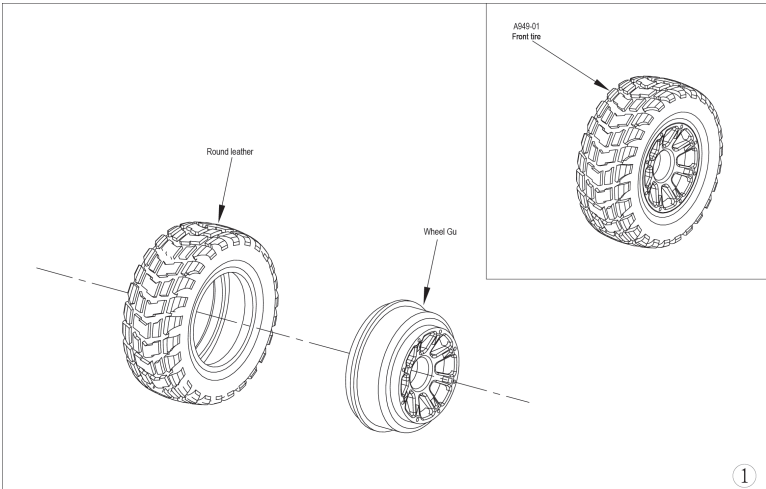

6

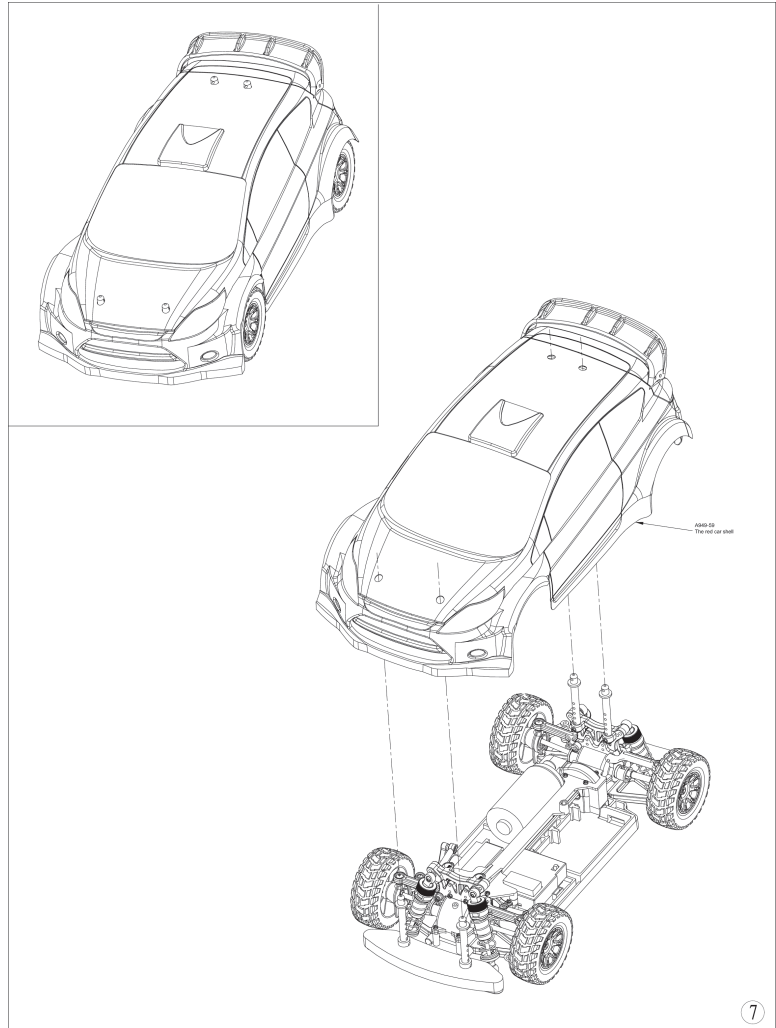 

11

Sale parts view



Front tire



Rear tire



Underbody



On the arm



Hem arm



Collision avoidance plane



 
Steering arm




Turning seat



Shock absorber plate

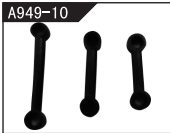

Pull rod

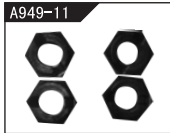 


Hexagon wheel seat




Bao box shell



 
Differential box

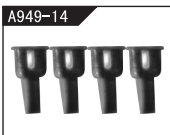

Differential meet cup

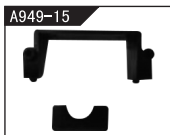 


Positioning seat

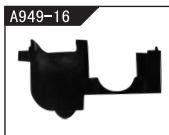 


Motor dustproof seat

 Practice

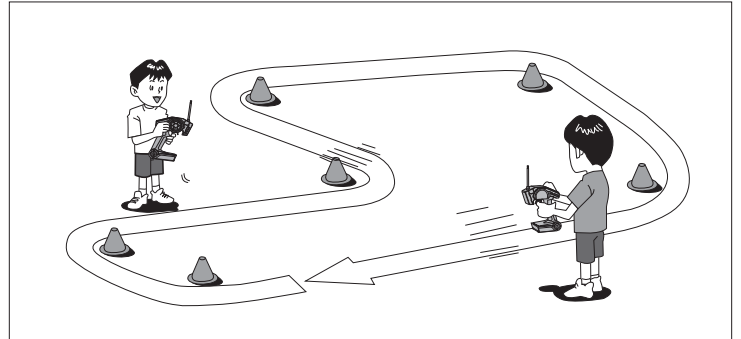


Let's practice! Make R/C car circuit at a wide and safe location using corner pylons (separately available), empty cans or such. Running fast at straight section and slow down at curved section is a basic speed control technique useful when driving R/C car.

 
Maintain

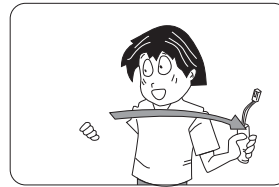

 
When the car is not in use, you should remove the battery from the car.

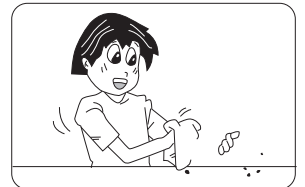


Completely remove sand, mud, dirt etc.

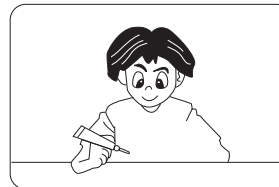 

 Metal outside should apply the rust prevention oil.

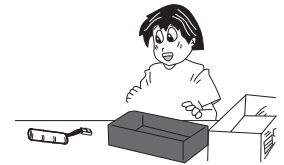


 Store the car and batteries separately when not in use.

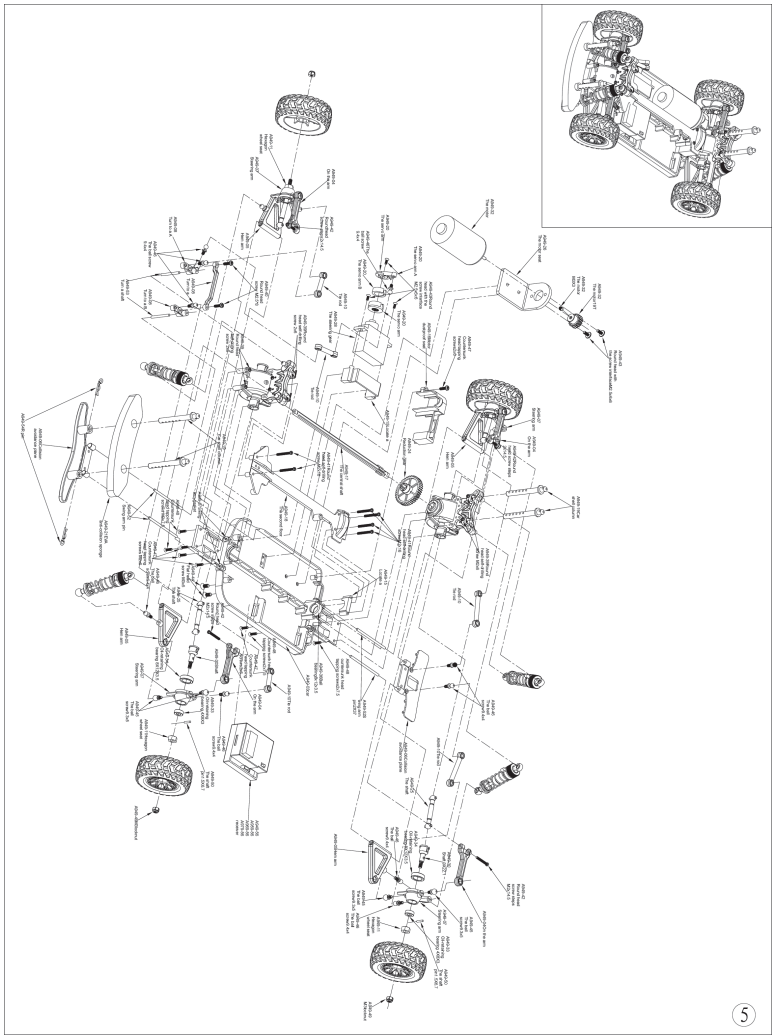


5

 9

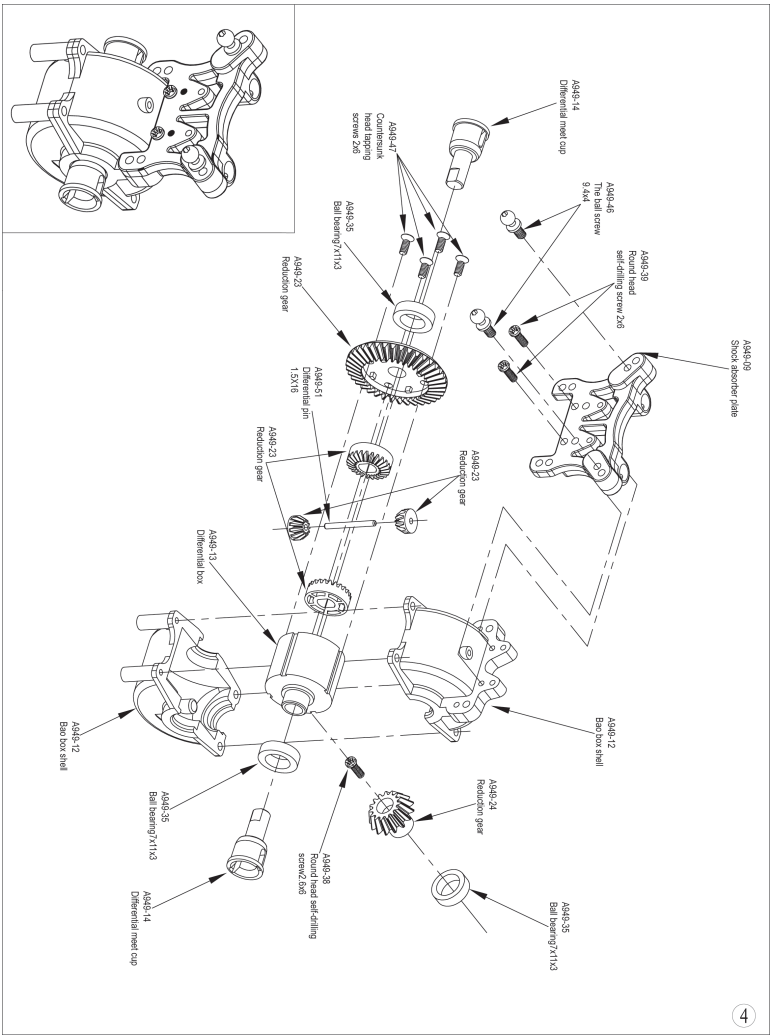


4

 8

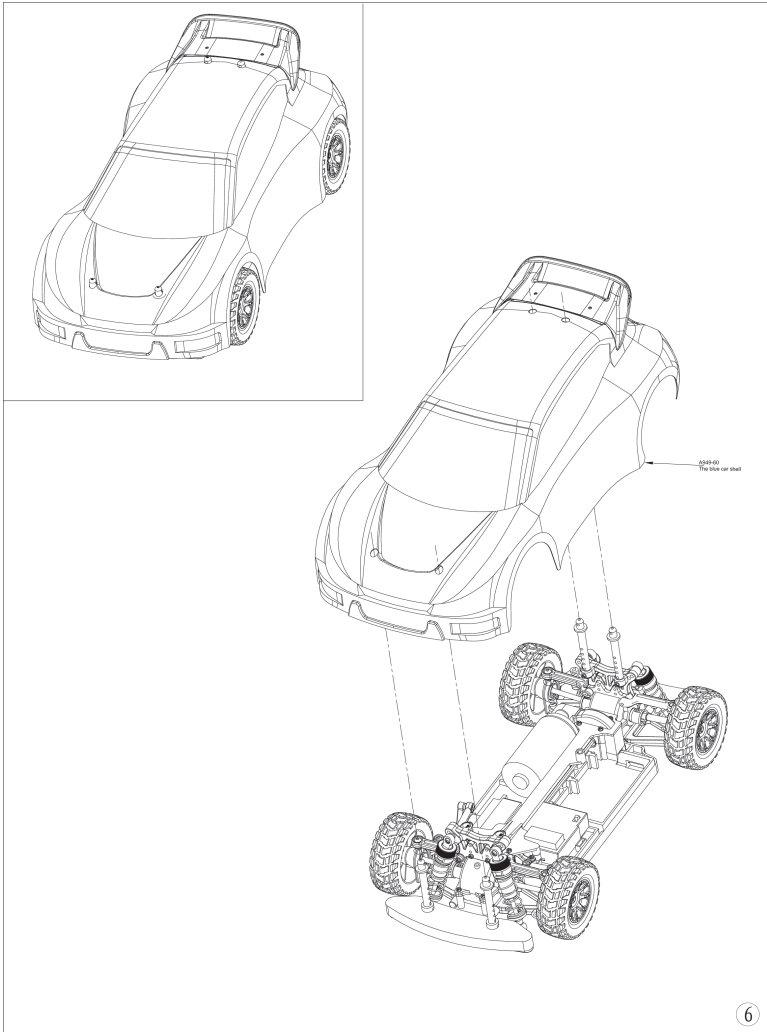

10

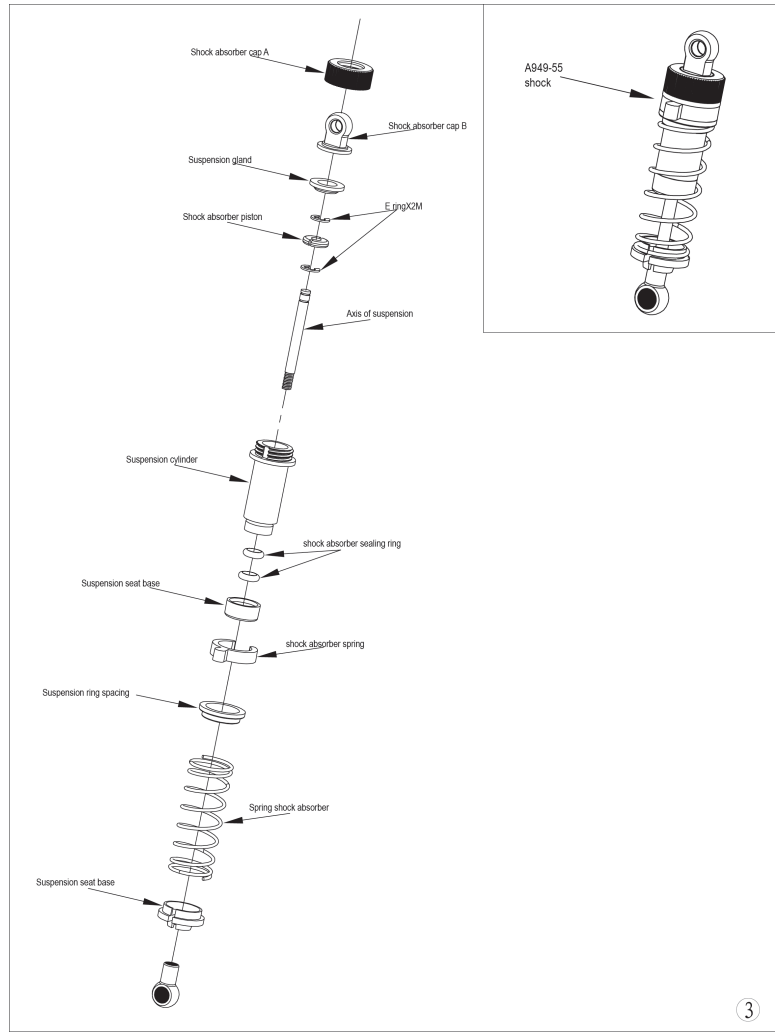 

7