


model no. 058-9807-2

Mastercraft[®]

AIR-POWERED GRAVITY-FEED SPRAY GUN KIT

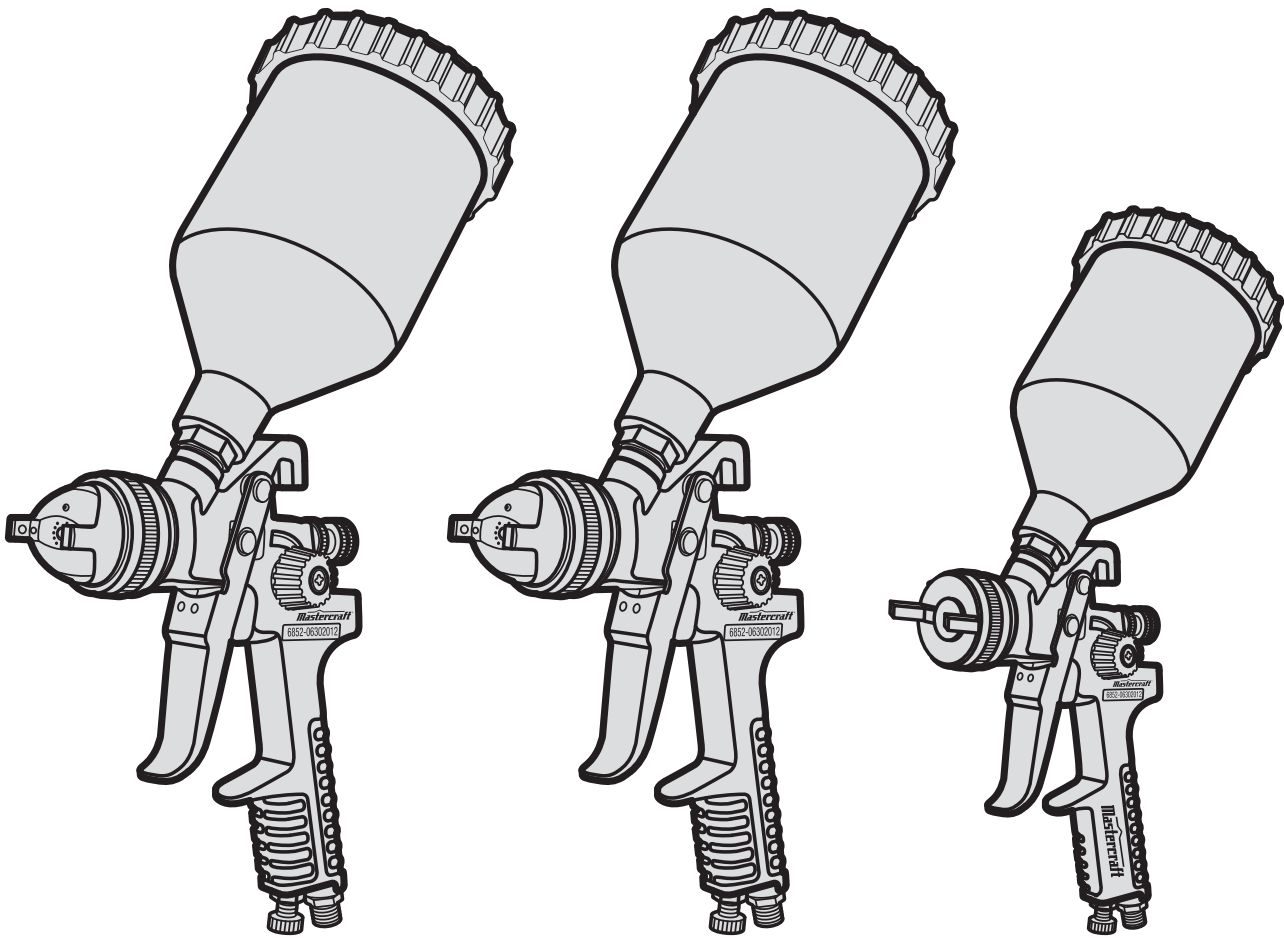

IMPORTANT:

For your own safety, read and follow all of the Safety Guidelines and Operating Instructions before operating this air-powered gravity-feed spray gun. Keep this manual for future reference.

**OPERATING
MANUAL**

TABLE OF CONTENTS

TECHNICAL SPECIFICATIONS	4
SAFETY GUIDELINES	5
KEY PARTS DIAGRAM	10
TECHNICAL INFORMATION	11
OPERATING INSTRUCTIONS	13
MAINTENANCE	19
TROUBLESHOOTING	22
EXPLODED VIEW	24
PARTS LIST	25
WARRANTY	28

TECHNICAL SPECIFICATIONS

FLUID DELIVERY	Gravity
NOZZLE	1.4 mm & 1.7 mm
AIR HOSE REQUIRED	3/8" (9.5 mm)
PAINT VISCOSITY	Water-based paint
CFM REQUIREMENT	3.4 CFM @ 40 PSI
AIR INLET	1/4"-18 NPT
PAINT CAPACITY	0.6 L
NORMAL AIR PRESSURE	29-50 PSI (2.0-3.5 bar)
WEIGHT	1 lb 9 oz (0.65 kg)
MAXIMUM MATERIAL TEMPERATUER	50 °C (122 °F)

FLUID DELIVERY	Gravity
NOZZLE	1.0 mm
AIR HOSE REQUIRED	3/8" (9.5 mm)
PAINT VISCOSITY	Water-based paint
CFM REQUIREMENT	1.4 CFM @ 40 PSI
AIR INLET	1/4"-18 NPT
PAINT CAPACITY	0.12 L
NORMAL AIR PRESSURE	40-58 PSI (2.75-4.0 bar)
WEIGHT	11 oz (0.32 kg)
MAXIMUM MATERIAL TEMPERATUER	50 °C (122 °F)

CF: Cubic Feet (the volumetric flow rate of air corrected to standardized conditions of temperature and pressure).
NPT: National Pipe Thread.

SAFETY GUIDELINES

This manual contains information that relates to PROTECTING PERSONAL SAFETY and PREVENTING EQUIPMENT PROBLEMS. It is very important to read this manual carefully and understand it thoroughly before using the product. The symbols listed below are used to indicate this information.

**DANGER!**

Potential hazard that will result in serious injury or death.

**WARNING!**

Potential hazard that could result in serious injury or death.

**CAUTION!**

Potential hazard that may result in injury or damage to equipment.

PERSONAL SAFETY


These precautions are intended for the personal safety of the user and others working with the user. Please take time to read and understand them. Make sure you read and understand this manual before using this tool. Make sure other users read and understand this manual before they use the tool.

Note: The word "Note" is used to inform the readers of something they need to know about the tool.

SAFETY GUIDELINES



- Do not use oxygen or any other combustible or bottled gas to power air-powered tools. Failure to observe this warning can cause explosion and serious personal injury or death. Use only compressed air to power air-powered tools. Use a minimum of 25' (7.6 m) of hose to connect the tool to only compressor. Failure to comply will result in serious injury or death.

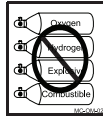

- Risk of inhalation: Never directly inhale the air produced by the compressor.



- Risk of electric shock: Do not expose a compressor to rain. Store it indoors. Disconnect the compressor from the power source before servicing. The compressor must be grounded. Do not use grounding adaptors.



- Risk of personal injury: Do not direct compressed air from the air hose towards the user or other people or animal.




- Risk of burns: The pump and the manifold generate high temperatures. In order to avoid burns or other injuries, do not touch the pump, the manifold, or the transfer tube while the compressor is running. Allow the parts to cool down before handling or servicing. Keep children and pets away from the compressor at all times.



- Risk of bursting: Do not adjust the pressure switch or safety valve for any reason. They have been preset at the factory for this compressor's maximum pressure. Tampering with the pressure switch or the safety valve may cause personal injury or property damage.



- Risk of bursting: Make sure the regulator is adjusted so that the compressor outlet pressure is set lower than the maximum operating pressure of the tool. Before starting the compressor, pull the ring on the safety valve to make sure the valve moves freely. Drain water from the tank after each use. Do not weld nor repair the tank. Relieve all pressure in the hose before removing or attaching accessories.

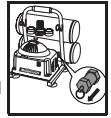**DANGER!**

Potential hazard that will result in serious injury or loss of life.

- Keep children away from the work area. Do not allow children to handle power tools.
- Do not point the tool towards yourself or other people, even when the tool has stopped. Keep hands, feet, and all other parts of the body clear from work area.
- Never use homogenate hydrocarbon solvent, which can chemically react with aluminum and zinc parts and which is not chemically compatible with aluminum and zinc parts.

**WARNING!**

Potential hazard that could result in serious injury or loss of life.

- Do not allow unskilled or untrained individuals to operate the Gravity-feed Spray Gun.
- Use components recommended by manufacturers: Never modify the tool for other applications. Use only parts, nozzles, and accessories with specifications as mentioned in this manual (see section "Technical Specifications").
- Inspect the tool components and attachments before operation and ensure that they are assembled properly and are not damaged. Failure to comply could lead to serious injury or loss of life.
- Locate the compressor in a well-ventilated area for cooling, at a minimum of 12" (31 cm) away from the nearest wall.
- Protect the air hose and the power cord from damage and puncture. Inspect them for weak or worn spots every week, and replace them if necessary.

**CAUTION!**

Potential hazard that may result in injury or damage to equipment.

- Keep proper footing at all times in order to ensure correct balance.
- Do not use a tool that is leaking air, that has missing or damaged parts, or that requires repairs. Verify that all screws are securely tightened.
- For optimal safety and tool performance, inspect the tool daily in order to ensure free movement of the trigger, safety mechanisms, and springs.
- Ensure proper tool operation before painting. Before painting, inspect to ensure free movement of the trigger and nozzle.
- Check the tightness of screws before operating the tool. Before operating the tool, make sure all the screws and caps are securely tightened to prevent leakage.
- Keep the work area clean. A cluttered or dirty workbench may lead to an accident. Floors should be kept clear.
- Handling and storage of oil: Use with adequate ventilation. Avoid contact of oil with eyes, skin, and clothing. Avoid breathing spray or mist. Store in a tightly closed container in a cool, dry, well-ventilated area free from incompatible substances.
- Do not use the tool near or below freezing temperatures, as doing so may cause tool failure.
- Do not store the tool in a freezing environment to prevent ice formation on the operating valves of the tool, as doing so may cause tool failure.
- Use safety goggles and ear protection. Wear safety glasses with side shields when operating the tool/compressor and verify that others in the work area are also wearing safety glasses. Safety glasses must conform to American National Standards Institute (ANSI Z87.1) requirements and must provide protection from flying particles from the front and the sides.



Air-powered tools are loud and the sound can cause hearing damage. Always wear ear protection to help prevent hearing damage and loss. Failure to comply may result in moderate injury.

**CAUTION!**


Potential hazard that may result in injury or damage to equipment.

- Disconnect the spray gun from the air supply hose and turn off the compressor before performing any maintenance, when the tool is not in use, when it is being handed to another person, and when it is left unattended. It is recommended to use a ball valve in the gun to air supply, for emergency stop and prevention of unintended operation.
- Use a safety respirator: Toxic vapours produced by spraying certain materials can cause serious damage to health. Always wear safety glasses, gloves, and a respirator to prevent the hazard caused by inhaling toxic vapour or contact of solvent and paint with eyes or skin. Failure to comply may result in moderate injury.



Note: Recycle unwanted materials rather than disposing of them as waste. Sort the tools, hoses, and packaging in specific categories and take them to the local recycling centre or dispose of them in an environmentally safe way.

No.	Description	No.	Description
1	Plastic canister	5	Air inlet plug
2	Paint adjusting knob	6	Air adjusting knob
3	Pattern adjusting knob	7	Trigger
4	Gun body	8	Air cap nozzle and needle

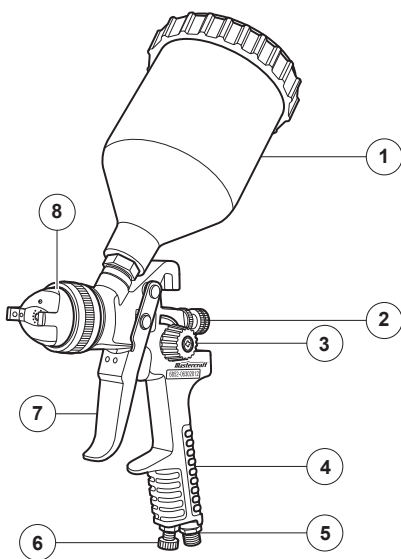

Compatible compressors and air tool

GUIDELINES FOR PROPER USE AND OPERATION

Be sure to use the proper air compressor with Mastercraft® air-powered tools. The compressor should be able to supply a minimal air delivery of 3.4 CFM @ 40 PSI to ensure it can run continuously with the MAXIMUM® Air-powered Gravity-feed Spray Gun. Using tools or combinations of tools that together or separately require more than the air compressor can deliver will reduce performance and could void the compressor or tool guarantee/warranty.

General use

This Mastercraft® Air-powered Gravity-feed Spray Gun is an HVLP or high-volume low-pressure sprayer. This tool applies paint with less force, reducing the bounce of the material from the surface to be painted. It features a stainless steel needle and nozzle to accommodate a variety of coatings. The spray gun is capable of forming very large patterns.

Air Compressor Size and Power	1 1/2–2 HP	2 1/2–3 HP	3 HP and more
5–6 Gallons	Light-duty and intermittent use	Light-duty and intermittent use	Light-duty and intermittent use
8–11 Gallons	Light-duty and intermittent use	Medium-duty and intermittent use	Medium-duty and intermittent use
15 Gallons and more	Medium-duty and intermittent use	Heavy-duty and continuous use	Heavy-duty and continuous use

Air Compressor Size and Power	1 1/2–2 HP	2 1/2–3 HP	3 HP and more
4–6 Gallons	Light-duty and intermittent use	Light-duty and intermittent use	Light-duty and intermittent use
8–11 Gallons	Light-duty and intermittent use	Medium-duty and intermittent use	Medium-duty and intermittent use
15 Gallons and more	Medium-duty and intermittent use	Heavy-duty and continuous use	Heavy-duty and continuous use

Storage

- Rotate the paint adjusting knob in a counterclockwise direction and open the knob when the gun is not in use. This will reduce spring tension on the needle fluid tip.
- Clean the Air-powered Gravity-feed Spray Gun thoroughly and slightly lubricate it after using and before storing.



CAUTION!

POTENTIAL HAZARD THAT MAY RESULT IN INJURY OR DAMAGE TO EQUIPMENT.

- Incomplete or improper cleaning could cause function failures and degradation of the tool. Failure to comply may result in moderate injury or damage to equipment.

Before assembly and preparation



CAUTION!

POTENTIAL HAZARD THAT COULD RESULT IN SERIOUS INJURY OR LOSS OF LIFE.

- Do not exceed the maximum pressure for the Air-powered Gravity-feed Spray Gun or any other parts in the compressor system.
- Never aim or spray at yourself or anybody else. Failure to comply could result in serious injury or loss of life.
- After unpacking the tool, inspect it carefully and check thoroughly for any damage that may have occurred during transit. Ensure the tightness of fittings, bolts, etc., before using the tool.

Paint filling

- Mixing and thinning of paint should be performed in accordance with the paint manufacturer's instructions. Most materials readily spray if thinning is properly performed.

Note: Always thin the paint with care.



CAUTION!

POTENTIAL HAZARD THAT MAY RESULT IN MODERATE INJURY OR DAMAGE TO EQUIPMENT.



- Do not exceed the thinning recommendations of the paint manufacturer. Failure to comply may result in moderate injury or damage to equipment.

model no. 058-9807-2 | contact us 1-800-689-9928

Mastercraft®


Before assembly and preparation

1. Attach the empty canister (1) to the spray gun by lining up the threads, holding the gun stationary and twisting the canister clockwise until snug (fig A).
Note: Do not tighten the canister too tight by hand, as doing so may break the plastic canister.

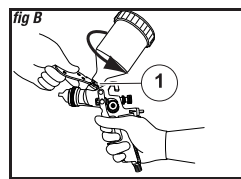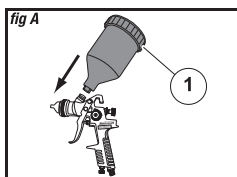


2. Use the wrench provided to rotate the nut (1) clockwise and tighten it securely to ensure paint does not leak (fig B).

3. Pour paint through a strainer, cheese cloth or a paint strainer to remove any foreign substances from the paint (fig C)

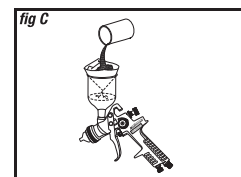

4. Fill the canister three quarters full with the paint.

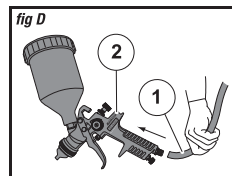

5. Plug in compressor, turn it on set the pressure regulator to 40 PSI. Connect one end of the air hose (1) to the spray gun (2) and the other end to the compressor. The spray gun is now ready to use (fig D).
6. After connecting the spray gun to the air supply, ensure the fluid cap, canister, and air hose are tightly connected with the Air-powered Gravity-feed Spray Gun.
7. Use a piece of cardboard or other scrap material as a target for trial spray and adjust for best spray pattern.
8. Test the consistency of the paint by making a few strokes on a cardboard target. If the stroke appears to be very thick, add a small amount of thinner.

PAINT FILLING

- Mixing and thinning of paint should be performed in accordance with the paint manufacturer's instructions. Most materials readily spray if thinning is properly performed.

WARNING!

Potential hazard that could result in serious injury or loss of life.

- Do not exceed the maximum pressure for the Air-powered Gravity-feed Spray Gun or any other parts in the compressor system. Failure to comply could lead to serious injury or loss of life.
- Never aim or spray at yourself or anybody else as this could cause serious injury. Failure to comply could lead to serious injury or loss of life.
- After unpacking the tool, inspect it carefully and check thoroughly for any damage that may have occurred during transit. Ensure the tightness of fittings, bolts, etc., before performing service operation.

NOTE: Always thin the paint with care.



CAUTION!

Potential hazard that may result in injury or damage to equipment.

- Do not exceed the thinning recommendations of the paint manufacturer. Failure to comply may result in moderate injury or damage to equipment.

Adjustments

The Gravity-feed Spray Gun has a pattern adjusting knob (1), a paint adjusting knob (2), and an air adjusting knob (3) that are used to obtain the desired pattern, to control the output volume of paint, and to obtain fine atomization, respectively (fig E).

PATTERN ADJUSTMENT


Rotate the pattern adjusting knob clockwise to form a circular spray pattern and rotate the knob counter-clockwise to form an elliptical spray pattern.

PAINT ADJUSTMENT

Rotate the paint adjusting knob clockwise to reduce the output volume of paint and rotate the knob counter-clockwise to increase the output volume of paint.


AIR VOLUME ADJUSTMENT

Rotate the air adjusting knob clockwise to reduce the output volume of air and rotate the knob counter-clockwise to increase the output volume of air.

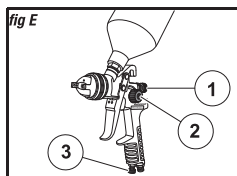


Operation

1. Plug in compressor, turn it on set the pressure regulator to 40 PSI, attach one end of the air hose to the compressor and the other end of the air hose (1) to the air tool (2) (fig F).

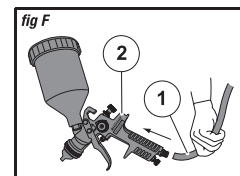


2. Hold the spray gun (1) so that the nozzle is approximately 6 to 12" from the work surface, perpendicular to the spraying area (fig G).

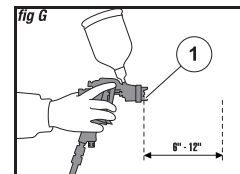


Note: Do some practice sprays while adjusting the spray pattern and setting up the gun, using a spare surface (scrap piece of metal).

3. Squeeze the trigger (1) of the spray gun (2). Start moving the gun before pressing the trigger and release the trigger before stopping the gun movement at the end of each stroke. This procedure will blend each stroke with the next without any overlap or unevenness (fig H).

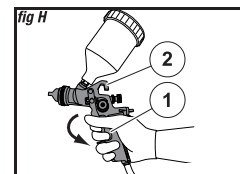

4. Move the spray gun (1) at a constant pace in a back and forth parallel direction, maintaining a uniform distance from the surface to be painted (fig I).

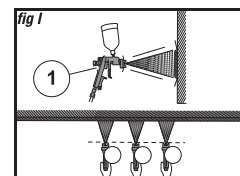

5. Repeat the strokes until a uniform coating is formed.

WARNING!

Potential hazard that could result in serious injury or loss of life.

- Do not exceed the maximum pressure for the Air-powered Gravity-feed Spray Gun or any other parts in the compressor system. Failure to comply could lead to serious injury or loss of life.
- Never aim or spray at yourself or anybody else as this could cause serious injury. Failure to comply could lead to serious injury or loss of life.
- After unpacking the tool, inspect it carefully and check thoroughly for any damage that may have occurred during transit. Ensure the tightness of fittings, bolts, etc., before performing service operation.


NOTE: Use a piece of cardboard as a shield to capture the loss of spray paint at the ends of the workpiece to protect other surfaces from being painted.

Note: Use a piece of cardboard as a shield to capture the loss of spray paint at the ends of the workpiece to protect other surfaces from being painted.

6. The speed of stroke, the distance from work surface, and the adjustment of the paint adjusting knob vary the amount of paint being applied.

DO'S

Always move the gun in a parallel direction.

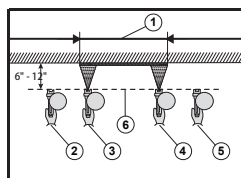


1. Uniform coating region
2. Stroke starting position
3. Trigger pressing position
4. Trigger releasing position
5. Stroke stopping position
6. Gun movement path

Note: Two proper and uniform thin coats of paint, rather than one thick layer, will yield better results and have less chance of runs.

DONT'S

Do not press the trigger with the gun at an inclined position.

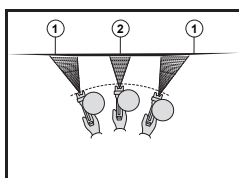


1. Improper/thin coating region
2. Uniform/thick coating region

Care of spray gun


The spray gun should be cleaned after every use. The paint remaining inside the gun thickens and may damage the inner components and mechanism of the gun.

Washing procedure

1. Cover the air cap with a cloth and pull the trigger. The air that is blown out of the paint nozzle tip enters the paint passage and cleans the inside of the gun.
2. Discard the paint remaining in the canister and add some thinner for washing and blow out the gun.
3. Clean the inside and outside of the spray gun (1) with a brush (2) (fig A).

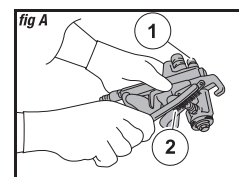

4. Clean the inside of the paint canister (1) (fig B).

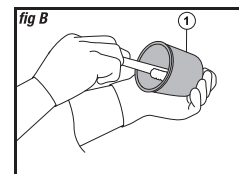

5. Remove and clean the inside and outside of the air cap with a brush soaked in cleaning solvent.

NOTE: When it is hard to get rid of the stuck paint, wash it after soaking it in lacquer thinner.



CAUTION!

Potential hazard that may result in moderate injury or damage to equipment.

- Ensure that the needle is removed before disassembling the nozzle, to avoid damage to the nozzle closure housing. Failure to comply may result in injury or damage to equipment.

NOTE: Two proper and uniform thin coats of paint, rather than one thick layer, will yield better results and reduce the chance of runs.


CAUTION!

Potential hazard that may result in moderate injury or damage to equipment.

- Do not fan the gun while painting. This will cause a build-up of paint in the centre of the stroke and an insufficient coating at the ends. Failure to comply may result in moderate injury or damage to equipment.

Note: Wash the air cap (1) carefully without causing any damage to its air hole as it will affect the spraying pattern. Never use a steel wire or wire brush for cleaning. When the air hole is clogged, clean it using a wooden toothpick (2) (fig C).

Note: When it is hard to get rid of the stuck paint, soak the cap in lacquer thinner and wash it again.

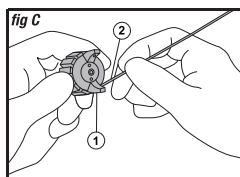

MAINTENANCE REQUIRED	DESCRIPTION	TOOLS OR MATERIALS REQUIRED	MAXIMUM SERVICE INTERVAL		
			Each Use or Every 2 Hrs	Monthly	As Needed
General inspection – free movement	Trigger, spring, safety mechanism	None	X		
In-depth inspection	Worn or broken parts			X	X
Replace worn or broken parts					X
Lubrication		Pneumatic tool oil (non-silicone oil)	X		

- Remove the remaining paint by pouring it into another canister.
- Disassemble the Air-powered Gravity-feed Spray Gun. Ensure that the needle is removed before disassembling the nozzle to avoid damage to the housing of the nozzle closure.
- Clean all the paint passages, nozzle, and other components using a brush soaked in cleaning solvent.
- Reassemble the spray gun and spray a small quantity of solvent to remove any residues in the paint passages.

WARNING!

POTENTIAL HAZARD THAT COULD RESULT IN SERIOUS INJURY OR LOSS OF LIFE.

- Do not use metal or other objects that could damage the holes in the nozzle and cap.
- Never immerse the spray gun completely in solvent.
- Do not use components or parts that are not recommended. Failure to comply could result in serious injury or loss of life.

CAUTION!

POTENTIAL HAZARD THAT MAY RESULT IN MODERATE INJURY OR DAMAGE TO EQUIPMENT.

- Ensure that the needle is removed before disassembling the nozzle to avoid damage to the nozzle closure housing. Failure to comply may result in moderate injury or damage to equipment.

CAUTION!

POTENTIAL HAZARD THAT MAY RESULT IN MODERATE INJURY OR DAMAGE TO EQUIPMENT.

- Incomplete cleaning could cause function failures and a degradation of the tool. Failure to comply may result in moderate injury or damage to equipment.

Troubleshooting

The following chart lists common issues and solutions. Please read it carefully and follow all instructions closely.








CAUTION!

POTENTIAL HAZARD THAT COULD RESULT IN SERIOUS INJURY OR LOSS OF LIFE.

- If any of the following symptoms appear while the tool is in use, turn it off and disconnect it from the air supply immediately. Failure to heed this warning could result in serious personal injury.


- Disconnect the electrical plug and air supply from the tool before making any adjustments.
- Repairs must be performed by a qualified service technician only.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Fluttering or spitting 	<ol style="list-style-type: none"> 1. Paint level is too low. 2. Canister is tipped too far. 3. Fluid inlet connection is loose. 4. Fluid tip/seat is loosened or damaged. 5. Fluid needle packing nut is dry or loose. 6. Air vent is clogged. 	<ol style="list-style-type: none"> 1. Add paint inside the canister. 2. Hold the canister in upright position. 3. Tighten the fluid connection. 4. Adjust or replace the fluid tip/seat. 5. Lubricate and/or tighten the nut. 6. Clear the vent hole.
Arc-shaped pattern 	<ol style="list-style-type: none"> 1. Fluid nozzle is worn or loose. 2. Paint has build up on air cap. 	<ol style="list-style-type: none"> 1. Tighten or replace fluid nozzle. 2. Remove obstructions from holes, but don't use metal objects to clean it.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Pattern is not spread uniformly 	<ol style="list-style-type: none"> 1. Paint has build up on air cap. 2. Fluid nozzle is dirty or worn. 	<ol style="list-style-type: none"> 1. Clean or replace air cap. 2. Clean or replace fluid nozzle.
Centre of pattern is too narrow 	<ol style="list-style-type: none"> 1. Paint is too thin or not sufficient. 2. Atomization air pressure is too high. 	<ol style="list-style-type: none"> 1. Regulate paint viscosity. 2. Reduce air pressure.
Width of spray pattern is too narrow 	<ol style="list-style-type: none"> 1. Paint is too thick. 2. Atomization air pressure is too low. 	<ol style="list-style-type: none"> 1. Regulate paint viscosity. 2. Increase air pressure.
Air leakage from air cap when trigger is not pressed	<ol style="list-style-type: none"> 1. Air inlet valve or seat is contaminated. 2. Inlet valve stem is stuck. 3. Air inlet valve or seat is worn or damaged. 4. Air inlet spring is broken. 5. Inlet valve stem is bent. 	<ol style="list-style-type: none"> 1. Lubricate the inlet valve stem. 2. Clean the air inlet valve or seat. 3. Replace air inlet valve or seat. 4. Replace air inlet spring. 5. Replace inlet valve stem.
Fluid leakage from packing nut	<ol style="list-style-type: none"> 1. Packing nut is loose. 2. Packing is worn or dry. 	<ol style="list-style-type: none"> 1. Tighten, but do not restrict the needle movement. 2. Replace or lubricate (non-silicone oil).
Excessive overspray	<ol style="list-style-type: none"> 1. Atomization pressure is too high. 2. Work surface is too far. 3. Improper stroking (arcing, gun motion are too fast). 	<ol style="list-style-type: none"> 1. Reduce the air pressure. 2. Adjust to proper distance. 3. Move at moderate pace, parallel to work surface.
No spray	<ol style="list-style-type: none"> 1. No pressure in gun. 2. Fluid control is not properly opened. 3. Fluid is too thick or heavy. 	<ol style="list-style-type: none"> 1. Check air lines. 2. Open the fluid control. 3. Thin the fluid or change to pressure feed system.

Note: For further repair information, please call 1-800-689-9928.


Exploded view - Production Spray Gun

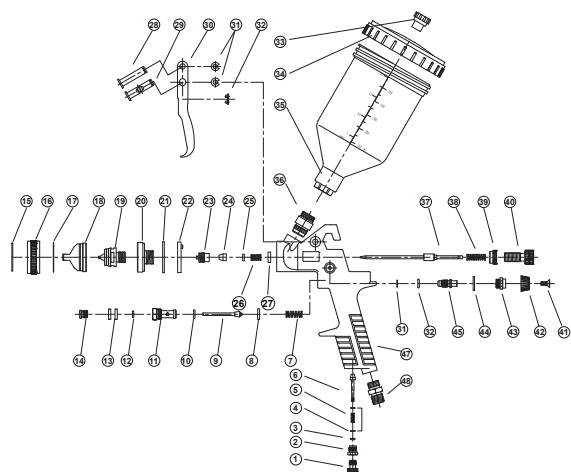

Parts list - Production Spray Gun

No.	Description	Qty.	No.	Description	Qty.
1	Air adjusting screw	1	26	Spring	1
2	Air adjusting knob	1	27	Big washer	1
3	O-ring 2.5 X 2.1	1	28	Trigger pin I	1
4	Washer	2	29	Trigger pin II	1
5	Air inlet spring	1	30	Trigger	1
6	Air inlet valve	1	31	Snap retainer	3
7	Switch spring	1	32	Trigger washer	1
8	Air valve body	1	33	Ventilator head	1
9	Switch knob	1	34	Canister cover	1
10	O-ring 8.5 X 1.2	1	35	Canister	1
11	Switch seat	1	36	Paint inlet joint	1
12	Foam washer	1	37	Paint adjusting needle	1
13	Washer	2	38	Paint adjusting needle spring	1
14	Direction screw	1	39	Paint adjusting knob joint	1
15	Spring	1	40	Paint adjusting screw	1
16	Round nut	1	41	Bolt	1
17	Fluid cap washer	1	42	Pattern adjusting knob	1
18	Atomization	1	43	Pattern adjusting knob joint	1
19	Fluid nozzle	1	44	Copper washer	1
20	Fluid nozzle joint	1	45	Pattern adjusting screw	1
21	Washer	1	46	O-ring 6 X 2	1
22	Joint washer	1	47	Gun Body	1
23	Direction screw	1	48	Air inlet plug	1
24	Seal washer	1			
25	Small washer	1			

Exploded view - Production Spray Gun

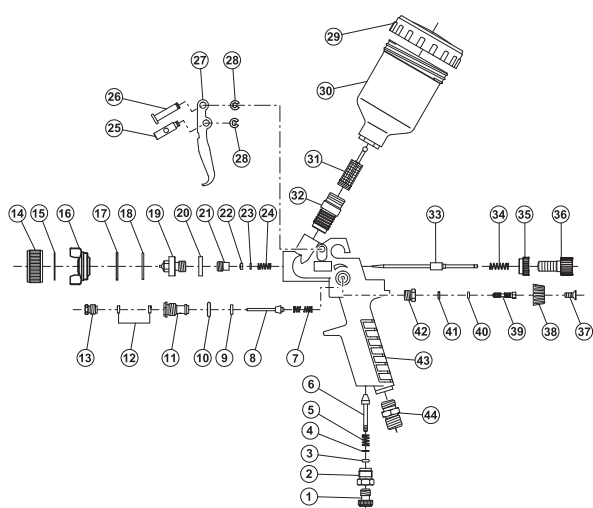

Parts list - Production Spray Gun

No.	Description	Qty.	No.	Description	Qty.
1	Air adjusting screw	1	23	Sealing washer	1
2	Air adjusting joint	1	24	Nut compressed spring	1
3	O-ring 2.5 X 2.1	1	25	Trigger level II	1
4	Washer	2	26	Trigger level I	1
5	Air inlet spring	1	27	Trigger	1
6	Air inlet valve	1	28	Snap retainer	2
7	Switch spring	1	29	Canister cover	1
8	Air inlet valve	1	30	Canister	1
9	Switch knob	1	31	Filter	1
10	O-ring 4.9 X 1.5	1	32	Fluid inlet joint	1
11	Switch seat	1	33	Needle	1
12	Sealing washer	2	34	Spring	1
13	Lock screw	1	35	Paint adjusting joint	1
14	Round nut	1	36	Paint adjusting screw	1
15	Air cap washer	1	37	Bolt	1
16	Atomization	1	38	Pattern adjusting screw	1
17	Nut housing	1	39	Pattern adjusting joint	1
18	O-ring 17 X 1.5	1	40	O-ring 2 X 1.5	1
19	Fluid nozzle	1	41	Snap retainer	1
20	Fluid nozzle washer	1	42	Pattern adjustment seat	1
21	Screw	1	43	Gun body	1
22	Needle washer	1	44	Air inlet plug	1

3-Year Limited Warranty

This product is guaranteed for a period of 3 years from the date of original retail purchase against defects in workmanship and materials, except for the following component:

Component A: Accessories, which are guaranteed for a period of 1-year from the date of original retail purchase against defects in workmanship and materials.

Subject to the conditions and limitations described below, this product, if returned to us with proof of purchase within the stated warranty period and if covered under this warranty, will be repaired or replaced (with the same model, or one of equal value or specification), at our option. We will bear the cost of any repair or replacement and any costs of labor relating thereto.

These warranties are subject to the following conditions and limitations:

- a) A bill of sale verifying the purchase and purchase date must be provided.
- b) This warranty will not apply to any product or part thereof which is worn or broken or which has become inoperative due to abuse, misuse, accidental damage, neglect, or lack of proper installation, operation, or maintenance (as outlined in the applicable instruction manual or operating instructions), or which is being used for industrial, professional, commercial, or rental purposes.
- c) This warranty will not apply to normal wear and tear or to expendable parts or accessories that may be supplied with the product which are expected to become inoperative or unusable after a reasonable period of use.
- d) This warranty will not apply to routine maintenance and consumable items such as, but not limited to, fuel, lubricants, vacuum bags, blades, belts, sandpaper, bits, fluids, tune-ups, or adjustments.
- e) This warranty will not apply where damage is caused by repairs made or attempted by others (i.e., persons not authorized by the manufacturer).
- f) This warranty will not apply to any product that was sold to the original purchaser as a reconditioned or refurbished product (unless otherwise specified in writing).

- g) This warranty will not apply to any product or part thereof if any part from another manufacturer is installed therein or any repairs or alterations have been made or attempted by unauthorized persons.
- h) This warranty will not apply to normal deterioration of the exterior finish, such as, but not limited to, scratches, dents, paint chips, or to any corrosion or discoloring by heat, or abrasives and chemical cleaners.
- i) This warranty will not apply to component parts sold by and identified as the product of another company, which shall be covered under the product manufacturer's warranty, if any.

Additional limitations

This warranty applies only to the original purchaser and may not be transferred. Neither the retailer nor the manufacturer shall be liable for any other expense, loss or damage, including, without limitation, any indirect, incidental, consequential, or exemplary damages arising in connection with the sale, use, or inability to use this product.

Notice to consumer

This warranty gives you specific legal rights, and you may have other rights, which may vary from province to province. The provisions contained in this warranty are not intended to limit, modify, take away from, disclaim, or exclude any statutory warranties set forth in any applicable provincial or federal legislation.

Made in China

Imported by Mastercraft Canada Toronto, Canada M4S 2B8