

Secrure door control and I/O expansion

**Installation Guide** 

(ver 1.0)







www.supremainc.com




#### Contents

Product Contents	3
Front Panel Description	4
Rear Panel Description	5
Connectors for External Interfaces	6
Installation Example	8
Product Dimension	9
Power Connection	10
RS-485 Connection	11
Relay Connection	12
RTE Switch Connection	14
Fire Alarm Connection	15
System Specifications	16




#### **Product Contents**

Basic Contents

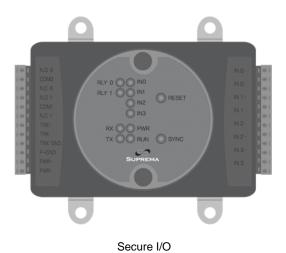




Wall mounting screws

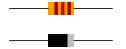

120 Ohm Resistor & Diode




#### **Front Panel Description**

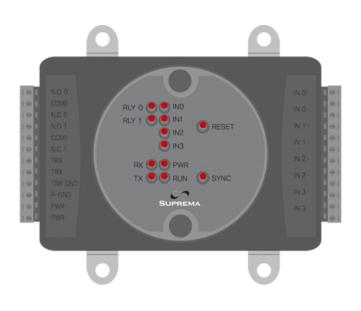

- RLY0 LED Status of Relay0
- RLY1 LED Status of Relay1
- RX LED Status of RS-485 Rx signal
- TX LED Staus of RS-485 Tx signal
- IN0 LED Status of Input0
- IN1 LED Status of Input1
- IN2 LED Status of Input2
- IN3 LED Status of Input3
- PWR LED Power status
- RUN LED Status of Secure I/O operation
- RESET BUTTON Secure I/O hardware reset
- SYNC BUTTON Syncronization between Secure I/O and device (BioStation/ BioEntry Plus) for security by exchanging an encryted keys. This prevents the operation of Secure I/O when the external device has been exchanged by an intruder. Sync button should be pressed when a device is set as a host in a RS-485 loop.




#### **Rear Panel Description**

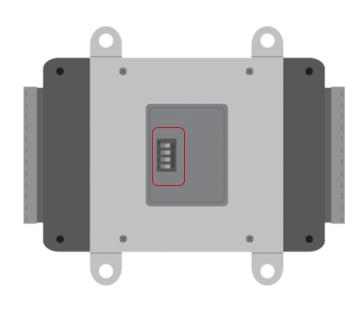

- ID0 / ID1 Dip switch to set an ID of Secure I/O
   Since max number of Secure I/O in an RS-485 loop is four, the ID of Secure I/O should be set among 0, 1, 2, 3.
- RSV reserved for future use
- Secure I/O ID setting



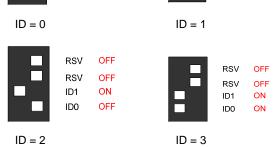




#### **Connectors for External Interfaces 1**




- Relay Output0 Common
- Relay Output0 Normal Close
- Relay Output1 Normal Open
- Relay Output1 Common
- Relay Output1 Normal Close
- RS-485 TRX+
- RS-485 TRX-
- RS-485 Ground
- Frame Ground
- Power Input+
- Power Input -

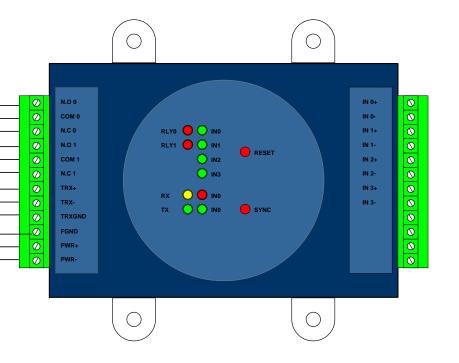

6






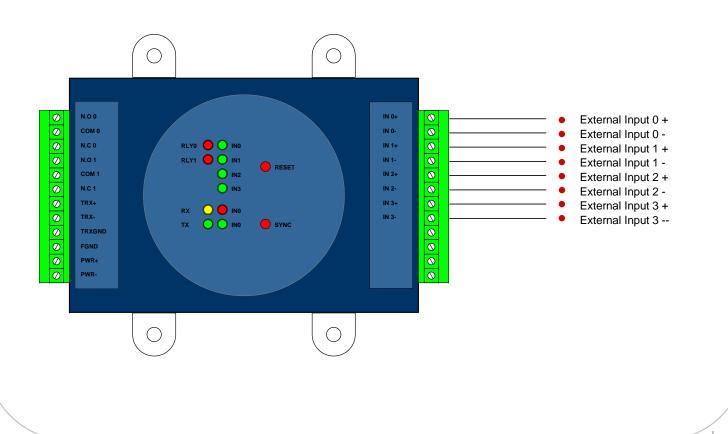


7



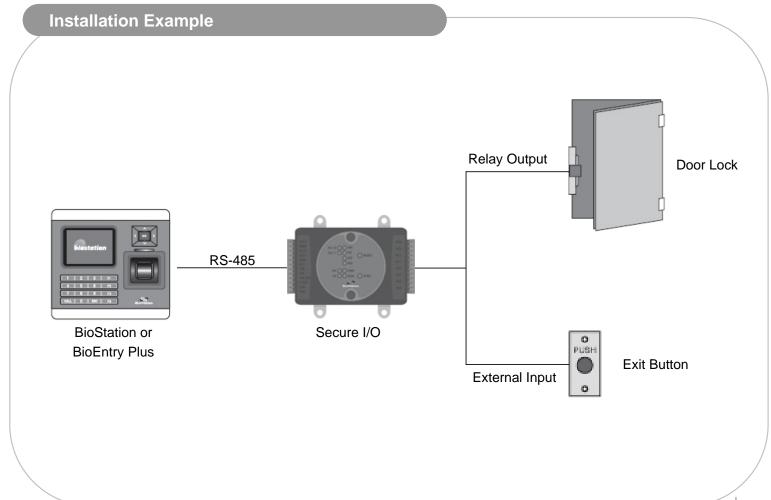

8




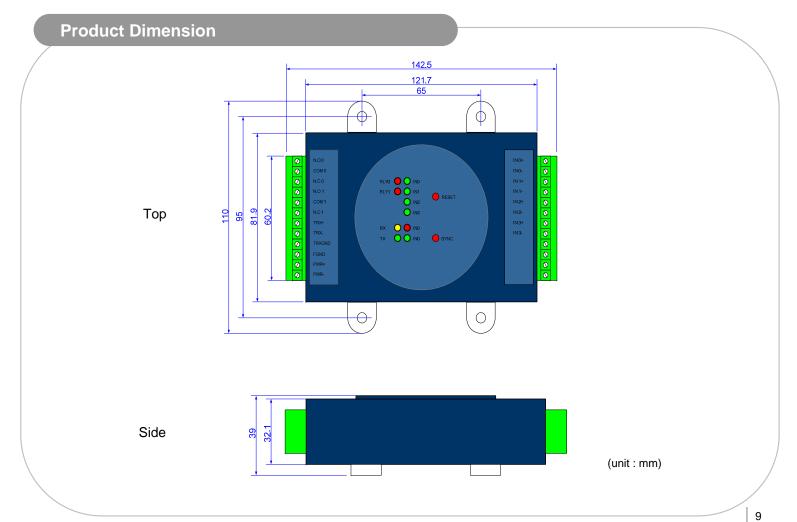

©Copyright 2010 Suprema Inc.



#### **Power Connection**

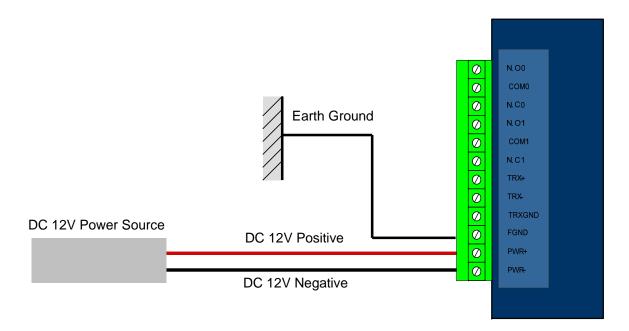


#### **Recommended power supply**

- $\bullet$  12V  $\pm$  10%, at least 500mA for Secure IO alone installation.
- Comply with standard IEC/EN 60950-1
- To share the power with other devices, use a power supply with higher current ratings.




## RS-485 Connection

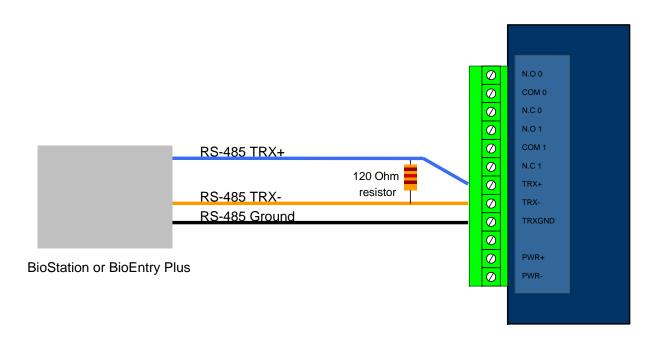

• In case the length of RS-485 line is so long to affect communication stability, connect the enclosed 120 Ohm resistor between TRX+ and TRX- connector of Secure I/O



#### **Relay Connection – Fail Secure Lock**

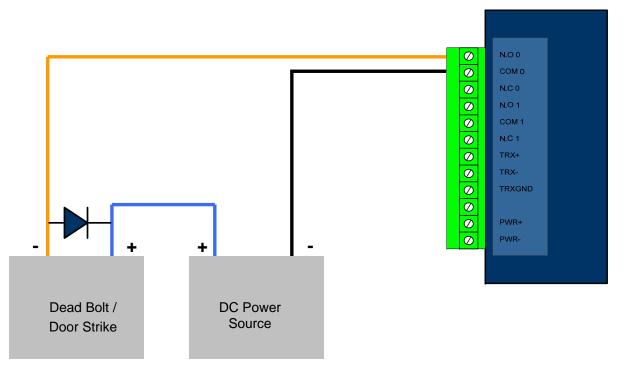


• When using dead bolt or door strike, connect an enclosed diode as in the above diagram.

Anode (line mark) of the diode should be connected to + power (Be careful of the direction)




#### **Relay Connection – Fail Safe Lock**

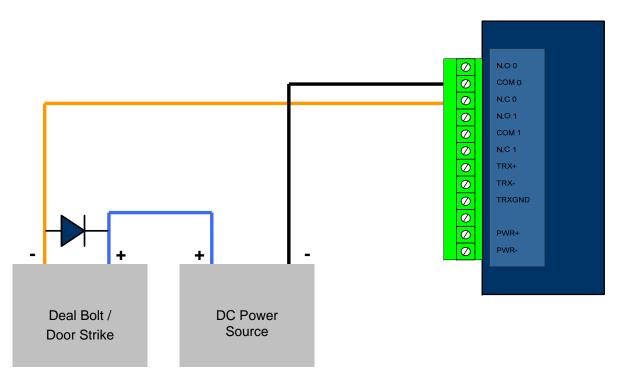

• When using dead bolt or door strike, connect an enclosed diode as in the above diagram.


Anode (line mark) of the diode should be connected to + power (Be careful of the direction)



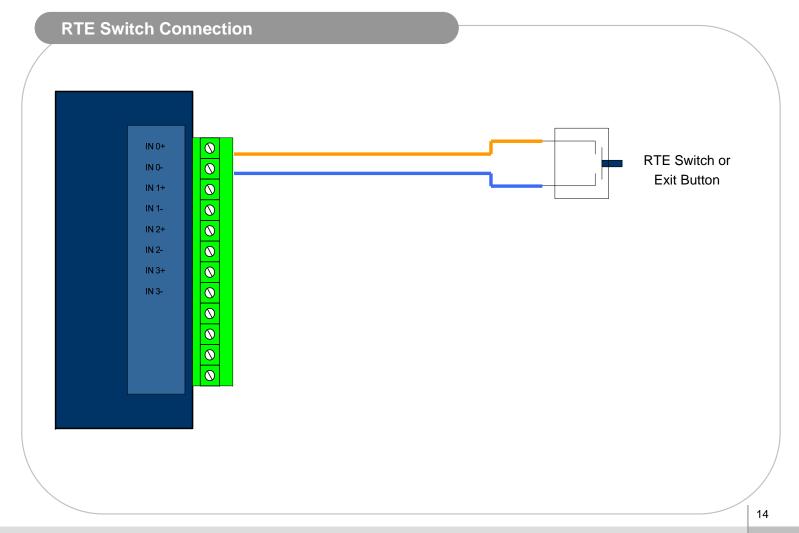

©Copyright 2010 Suprema Inc.



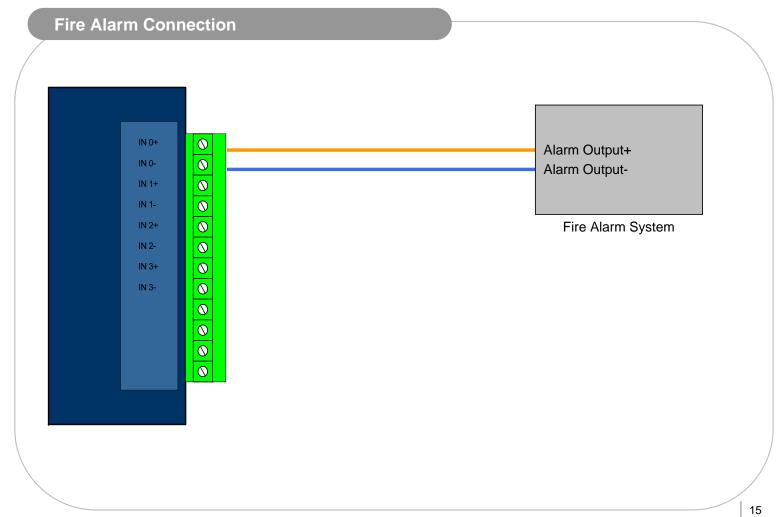



#### **System Specifications**

CPU: 8bit, 16MHz Microcontroller

Memory : 32Kbyte FlashDisplay : 10ea Status LED

IO: Input X 4Ch, Output X 2Ch, RS-485 X 1Ch

Product size : 142.5 x 110 x 39 mm (width x length x depth)

	Min.	Тур.	Max.	Notes
Power				
Voltage (V)	10.8	12	13.2	
Current (mA)	-	500	800	
Relay				
Normal switching capacity(N.O) (Resistive)	,	5A 2A 3A		125VAC 250VAC 30VDC
Normal switching capacity(N.C) (Resistive)	-	2A 1A 1A		125VAC 250VAC 30VDC



Suprema Inc. 16F Parkview Office Tower, Jeongja-dong, Bundang-gu, Seongnam, Gyeonggi, 463-863 Korea

E-mail: support@supremainc.com Website: www.supremainc.com

Functions and specifications of the product are subject to changes without notice due to quality enhancement or function update. For any inquiry on the product, please contact **Suprema Inc**.